

RSX-11M/M-PLUS
Crash Dump Analyzer
Reference Manual

Order No. AA-L673B-TC

RSX-11M Version 4.1
RSX-11M-PLUS Version 2.1

First Printing, May 1979
Revised, January 1982
Updated, April 1982
Revised, April 1983

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation. Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.

The software described in this document is furnished under a license and may be used or copied only in accordance with the terms of such license.

No responsibility is assumed for the use or reliability of software on equipment that is not supplied by Digital Equipment Corporation or its affiliated companies.

Copyright © 1979, 1982, 1983 by Digital Equipment Corporation
All Rights Reserved.

Printed in U.S.A.

The postpaid READER'S COMMENTS form on the last page of this document requests the user's critical evaluation to assist in preparing future documentation.

The following are trademarks of Digital Equipment Corporation:

DEC	DIBOL	RSX
DEC/CMS	EduSystem	UNIBUS
DEC/MMS	IAS	VAX
DECnet	MASSBUS	VMS
DECsystem-10	PDP	VT
DECSYSTEM-20	PDT	digital
DECUS	RSTS	
DECwriter		

ZK2349

HOW TO ORDER ADDITIONAL DOCUMENTATION

In Continental USA and Puerto Rico call 800-258-1710

In New Hampshire, Alaska, and Hawaii call 603-884-6660

In Canada call 613-234-7726 (Ottawa-Hull)
800-267-6146 (all other Canadian)

DIRECT MAIL ORDERS (USA & PUERTO RICO)*

Digital Equipment Corporation
P.O. Box CS2008
Nashua, New Hampshire 03061

*Any prepaid order from Puerto Rico must be placed
with the local Digital subsidiary (809-754-7575)

DIRECT MAIL ORDERS (CANADA)

Digital Equipment of Canada Ltd.
940 Belfast Road
Ottawa, Ontario K1G 4C2
Attn: A&SG Business Manager

DIRECT MAIL ORDERS (INTERNATIONAL)

Digital Equipment Corporation
A&SG Business Manager
c/o Digital's local subsidiary or
approved distributor

Internal orders should be placed through the Software Distribution Center (SDC), Digital Equipment Corporation, Northboro, Massachusetts 01532

CONTENTS

	Page
PREFACE	vii
CHAPTER 1	INTRODUCTION
1.1	SYSTEM REQUIREMENTS 1-1
1.2	OBTAINING A CRASH DUMP 1-2
1.3	RUNNING CDA 1-3
1.4	CDA COMMAND LINES 1-3
1.5	INDIRECT COMMAND FILES 1-5
1.6	BASIC CDA OUTPUT LISTING 1-5
CHAPTER 2	SWITCHES
2.1	ANALYSIS SWITCHES 2-1
2.1.1	/ACT or /ATL (Task Control Blocks for Active Tasks) 2-3
2.1.2	/ADV (All Devices) 2-3
2.1.3	/ALL (All Analysis Routines) 2-3
2.1.4	/CLI or /CPB (Command Line Interpreter Parser Blocks) 2-3
2.1.5	/CLQ (Clock Queue) 2-3
2.1.6	CTL (Device Controllers) 2-4
2.1.7	/DEV, /DCB, /SCB, or /UCB (Devices in System) . 2-4
2.1.8	/DUMP:a:b:[c] or /DMP (Physical Memory) 2-4
2.1.9	/HDR (Headers for Memory-Resident Tasks) 2-4
2.1.10	/KDS:a:b (Kernel Data Space) 2-4
2.1.11	/KIS:a:b (Kernel Instruction Space) 2-4
2.1.12	/PCB or /PAR (Partition Control Blocks) 2-5
2.1.13	/POOL:a:b (System Pool) 2-5
2.1.14	/SECPOOL[:a:b] (Secondary Pool) 2-5
2.1.15	/STD, TCB, or /TAL (System Task Directory) . . . 2-5
2.1.16	/-SYS (System Information) 2-5
2.1.17	/TASK:name:a:b, /TAS, or /TSK (Task Virtual Address Space) 2-5
2.1.18	/TDS:name[:a:b] 2-5
2.1.19	/TIS:name:a:b 2-6
2.2	FUNCTION SWITCHES 2-6
2.2.1	/BL:n (Identify Starting Block Number) 2-7
2.2.2	/DENS:n (Sets Tape Density) 2-7
2.2.3	/EXIT:n (Exit After n Errors) 2-7
2.2.4	/LIMIT:n (Limit Output Listing) 2-7
2.2.5	/LINES:n (Print n Lines per Page) 2-7
2.2.6	/MEMSIZ:n (Establish Size of Binary Output File) 2-8
2.2.7	/KMR (Assign Kernel Mapping Register Values) . . 2-8
2.2.8	/-SP (Do Not Spool) 2-8
2.2.9	/STB (File Specified Contains the Executive Symbol Table) 2-8

CONTENTS

Page

CHAPTER 3 ANALYSIS LISTINGS

3.1 SYSTEM INFORMATION 3-1

3.1.1 Volatile Registers 3-2

3.1.2 Kernel Stack 3-5

3.1.3 System Common 3-6

3.1.4 System Common Alphabetized Dump 3-9

3.1.5 Pool Statistics 3-15

3.1.6 Assign Table 3-17

3.1.7 Group Global Event Flags 3-18

3.1.8 Error Log Packets 3-19

3.1.9 Low Core Memory Dump (RSX-11M-PLUS Only) 3-20

3.2 OPTIONAL INFORMATION 3-21

3.2.1 Active Tasks 3-21

3.2.2 Active Task (MCR) 3-26

3.2.3 Task Headers 3-28

3.2.4 CLI Parser Block 3-31

3.2.5 Partition Information 3-31

3.2.6 Common Block Directory 3-36

3.2.7 Device Information 3-38

3.2.8 System Task Directory 3-44

3.2.9 Pool Dump 3-45

3.2.10 Task Dump 3-48

3.2.11 Clock Queue 3-50

3.2.12 Controller Information 3-52

3.2.13 Kernel Data Space 3-54

3.2.14 Kernel Instruction Space 3-54

3.2.15 Task Data Space 3-54

3.2.16 Task Instruction Space 3-54

CHAPTER 4 INTERPRETING A CRASH DUMP LISTING

4.1 HELPFUL CONCEPTS 4-1

4.1.1 Determining What Was Mapped 4-1

4.1.2 Interpreting the Kernel Stack 4-2

APPENDIX A CDA MESSAGES

APPENDIX B RSX-11M SYSTEM DATA STRUCTURES AND SYMBOLIC DEFINITIONS

APPENDIX C RSX-11M-PLUS SYSTEM DATA STRUCTURES AND SYMBOLIC DEFINITIONS

INDEX

FIGURES

FIGURE 3-1 Volatile Registers 3-3

3-2 Kernel Stack 3-5

3-3 System Common 3-7

3-4 System Common Alphabetized Dump 3-14

3-5 Pool Statistics 3-16

3-6 Logical Device Assignment Table 3-17

3-7 Group Global Event Flags 3-18

CONTENTS

		Page
3-8	Error Log Packets	3-19
3-9	Low Core Memory	3-20
3-10	Active Tasks (Truncated)	3-25
3-11	Active Task (MCR)	3-27
3-12	Task Headers (Truncated)	3-30
3-13	CLI Parser Blocks	3-31
3-14	Partition Information	3-32
3-15	Partition Control Blocks and Attachment Descriptors	3-35
3-16	Common Block Directory	3-37
3-17	Device Information and I/O Packet (Truncated)	3-43
3-18	System Task Directory (Truncated)	3-44
3-19	Pool Dump (Truncated)	3-46
3-20	Task Dump (Truncated)	3-49
3-21	Clock Queue	3-51
3-22	Controller Information	3-53
3-23	Kernel Data Space	3-55
3-24	Kernel Instruction Space	3-56
3-25	Task Data Space	3-57
3-26	Task Instruction Space	3-58
4-1	Kernel Page Address Registers	4-1

TABLES

TABLE	1-1	File Default Values	1-4
	2-1	Summary of CDA Analysis Switches	2-1
	2-2	Summary of CDA Function Switches	2-6
	B-1	Summary of System Data Structure Macros	B-1
	C-1	Summary of System Data Structure Macros	C-2

PREFACE

MANUAL OBJECTIVES

This manual describes the operation of the Crash Dump Analyzer. It does not describe the operation of the RSX-11M-PLUS Executive or the significance of the individual data structures. The Executive Reference Manual and the Guide to Writing an I/O Driver for RSX-11M and RSX-11M-PLUS describe these data structures.

INTENDED AUDIENCE

This manual is intended for system managers who are responsible for interpreting system failures or system operators who run CDA to generate dumps. Understanding CDA output requires a working knowledge of assembly language programming and the Executive data structures.

STRUCTURE OF THIS DOCUMENT

Chapter 1 explains the purpose of the Crash Dump Analyzer. It describes the system resources and the procedures necessary for obtaining a crash dump. It explains how to run CDA and describes the command string format. Finally, Chapter 1 describes indirect command files as they pertain to CDA.

Chapter 2 describes the switches associated with CDA. Two summary tables provide quick reference on switch operation. Expanded descriptions for each switch follow each table.

Chapter 3 consists of actual CDA output listings. Each entry of each listing is numbered to correspond to the numbered explanatory text preceding it. Cross-reference information is provided where necessary.

Chapter 4 contains helpful hints for interpreting CDA output listings.

Appendix A contains a short description of each CDA error message.

Appendix B lists system macros that supply symbolic offsets for system data structures for RSX-11M.

Appendix C lists system macros that supply symbolic offsets for system data structures for RSX-11M-PLUS.

PREFACE

ASSOCIATED DOCUMENTS

Refer to the RSX-11M/RSX-11S Information Directory and Index for a brief description of each manual in the RSX-11M documentation set.

Refer to the RSX-11M-PLUS Information Directory and Index for a brief description of each manual in the RSX-11M-PLUS documentation set.

CONVENTIONS USED IN THIS DOCUMENT

Red ink in the examples of this manual denotes user input.

The symbol `␣` indicates a carriage return.

Pink shading in this manual denotes features that appear only on RSX-11M systems.

Gray shading denotes features that appear only on RSX-11M-PLUS systems.

SUMMARY OF TECHNICAL CHANGES

This manual contains documentation for the following new features in the Crash Dump Analyzer:

- New format for the system data base
- /DENS switch specifies the density of a crash input tape
- Displays parent/offspring task relationships
- Displays group global event flags and task overlay segments
- /TCB dumps tasks installed in primary and secondary pool
- /TIS and /TDS dumps task instruction or data space
- /TAS dumps task instruction and data space between a range of addresses
- /POOL dumps primary pool
- /SECPOL dumps secondary pool on RSX-11M-PLUS systems
- /HDR dumps both I and D space windows
- System information includes an alphabetized list of lowcore memory symbols

In addition, this version of CDA adds the following RSX-11M-PLUS features to RSX-11M:

- Displays the Assign Table
- Modifies the /ADV switch to dump the control blocks of all devices
- Modifies the /DEV switch to dump the registers of active devices only
- Modifies the /DUMP switch to accept a starting virtual address label for a dump
- Adds the /LINES switch to specify the number of lines per page in a dump.

CHAPTER 1

INTRODUCTION

The Crash Dump Analyzer (CDA) is a specialized utility that helps you establish the cause of system crashes. CDA reads the contents of a memory dump created by the Executive Crash Dump Routine. It formats the dump using the information contained in the Executive Symbol Table file RSX11M.STB. Finally, CDA outputs the dump to a line printer in human-readable format.

CDA is a nonprivileged task that any user can run.

1.1 SYSTEM REQUIREMENTS

To use CDA, you must request Crash Dump Analysis support and specify a crash notification device and a crash dump device at system generation. This causes system generation to build an Executive Crash Dump Routine which writes all of memory onto the crash dump device when the system crashes. You can change the crash dump or notification devices only by doing another system generation. (See the RSX-11M or RSX-11M-PLUS System Generation and Installation Guide for details on including CDA in your system.) To include CDA support, you must also have one of the following mass storage devices in addition to your system disk:

- MT magnetic tape
- MS magnetic tape
- MM magnetic tape
- DD cassette
- DT DECTape
- DX floppy diskette (RSX-11M only)
- DY floppy diskette
- DK disk cartridge
- DL disk cartridge
- DM disk cartridge
- DR disk pack
- DB disk pack

INTRODUCTION

1.2 OBTAINING A CRASH DUMP

To obtain a crash dump, control of the processor must be transferred to the Executive Crash Dump Routine following a system crash. How this control is transferred depends on the way in which the crash occurred and whether you built the Executive Debugging Tool (XDT) into your system at SYSGEN.

System crashes occur in three ways:

1. The processor encounters a program condition that causes it to trap to location 40 or to XDT.
2. An infinite loop condition occurs.
3. The processor encounters an unintentional halt instruction in kernel mode (000000).

When a program condition causes a processor trap and XDT is included in your system, control transfers automatically to XDT. You can then type X at the console terminal, and XDT transfers control to the crash dump routine. (Refer to the RSX-11M or RSX-11M-PLUS Guide to Writing an I/O Driver for a description of XDT.)

When your system does not include XDT, a processor trap causes control to transfer to the Executive Crash Dump Routine.

When a system crash is the result of a HALT instruction or an infinite loop condition, you must restart the processor manually at location 40.

Regardless of how control is transferred, once the processor enters the crash dump routine, the routine prints the following informational message on the crash notification device:

```
CRASH-CONT WITH SCRATCH MEDIA ON (device mnemonic)
```

After displaying the message, the crash dump routine halts the processor so you can put the crash dump device on line. When the device is on line, depress the continue switch on the processor console. The routine then dumps memory on the crash dump device and halts the processor again when the dump finishes. At this point, the volume in the crash dump device contains a binary representation of the contents of memory at the time of the crash to use as input to CDA. You can then reboot the system and run CDA to analyze the dump.

If you attempt to crash to an illegal device, the CRASH routine displays the following message on the crash notification device and halts:

```
CRASH -- ILLEGAL CRASH DEVICE
```

This error occurs if the crash device is a fixed media device. If you have a removable media device on the same controller, you can switch the physical unit number plugs on the devices to make the removable media device the crash device. Then press continue on the operator's console and the CRASH routine will attempt the dump again.

INTRODUCTION

1.3 RUNNING CDA

You can run CDA as either an installed or an uninstalled task.

If CDA is installed, use the following format to return control to the monitor (CLI) upon completion of the analysis:

```
>CDA command line (RET)
```

To return control to CDA upon completion of the analysis, use the following format:

```
>CDA (RET)  
CDA>command line (RET)
```

When you run CDA as an uninstalled task, control always returns to CDA after the analysis completes. The command sequence for running an uninstalled CDA is:

```
RUN $CDA (RET)  
CDA>command line (RET)
```

These commands require CDA.TSK to be present in the UFD corresponding to the system UIC on device LB: for RSX-11M, or the library UIC for RSX-11M-PLUS.

An alternate command sequence is:

```
RUN CDA (RET)  
CDA>command line (RET)
```

These commands require CDA.TSK to be present in the UFD corresponding to the current UIC on SY:.

1.4 CDA COMMAND LINES

Use the following format to input commands to CDA:

```
[listfile/sw],[binaryfile/sw]=[symbolfile/STB],crash-input[/sw]
```

listfile

The optional human-readable CDA output listing file. This file is described in Chapter 3.

binaryfile

An optional binary file. This file is a copy of the binary data that the crash dump routine wrote on the crash dump device. It allows you to selectively create a historical record of crash dumps. If you create this file during an initial analysis, you can use it for input to CDA at a later time. Since the crash dump routine overwrites the information on the crash dump volume with each dump to it, this feature allows you to use a single volume for all crash dumps.

Specifying this file can significantly reduce the analysis time if the input is from a secondary storage device, particularly if it is a sequential device.

INTRODUCTION

symbolfile/STB

The symbol definition file for the crashed system. The /STB switch is an integral part of this file specification. If you omit this file specification and switch, CDA defaults to the file RSX11M.STB under the current UIC.

crash-input

The source of the binary input to CDA. This specification can be either a device name (the crash dump device) or a binary file that was created during a previous CDA analysis. If it is a binary file, the "binaryfile" field in the output must be left blank.

/sw

An optional CDA switch. Each switch is associated with a specific file and cannot be used without a file specification or with any other file specifications. Chapter 2 describes CDA switches in detail.

Output file specifications are position dependent meaning that when you include both output specifications, you must place them in the command line in the positions shown. If you omit the list file, you must place a comma before the binary file specification.

Input file specifications are position independent and can appear in either order.

File specifications in the command line can appear in complete FILES-11 format, with device, UFD, file name, file type, and version number. When you omit any of these elements, CDA uses the defaults shown in Table 1-1. Note that not all of the elements in file specifications have defaults.

Table 1-1
File Default Values

File	Device	UFD	Default Value	
			File Name	File Type
listing file	SY:	current	none	.LST
binary file	SY:	current	none	.CDA
symbol file/STB	SY:	current	RSX11M	.STB
crash-input	SY:	current	none	.CDA

The following examples illustrate the CDA file default values. Assume that the user in these examples is logged in under UIC [301,356] and that the crash dump device is DT1:. Also, assume that CDA is running as an installed task.

INTRODUCTION

Example 1

```
>CDA RET  
CDA>19OCT81,19OCT81=RSX11M.STB/STB,DT1: RET
```

This command line creates:

- A listing file, 19OCT81.LST, in UFD [301,356], which is printed automatically.
- A binary file, 19OCT81.CDA, in UFD [301,356]. CDA reads the binary input from DECTape Unit 1 and analyzes it according to the information in the symbol definition file RSX11M.STB in UFD [301,356].

Example 2

```
>CDA RET  
CDA>,19OCT81=[1,54]/STB,DT1: RET
```

This command line creates a binary file, 19OCT81.CDA, in UFD [301,356].

CDA reads the binary input from DECTape Unit 1 and analyzes it according to the information in the symbol definition file RSX11M.STB in UFD [1,54].

Example 3

```
>CDA RET  
CDA>LP:=[1,54]/STB,19OCT81 RET
```

This command line creates an output listing on device LP:.

CDA reads the binary input from a previously created binary file, 19OCT81.CDA, and analyzes it in accordance with the information contained in the symbol definition file RSX11M.STB under UFD [1,54].

1.5 INDIRECT COMMAND FILES

As with other utilities, you can enter CDA command lines directly from the terminal or from an indirect command file. CDA indirect command files must not contain a reference to another command file.

1.6 BASIC CDA OUTPUT LISTING

While the Crash Dump Analyzer provides many output listing options, fundamental system information appears on the first six pages of output listing. However, you may suppress this information by using the /-SYS switch. These six pages contain the following information:

- Page 1 -- Volatile registers
- Page 2 -- Kernel stack
- Page 3 -- System common
- Page 4 -- System common labeled dump

INTRODUCTION

Page 5 -- Pool statistics

Page 6 -- Assign table

Sections 3.1.1 through 3.1.6 of this manual describe these pages in detail.

The system information section also includes three more pages if the relevant information is in memory at the time of the crash. These pages display group global event flags, error log packets, and, on RSX-11M-PLUS systems, the contents of low core memory. Section 3.1.7 describes the group global event flag page, Section 3.1.8 describes the error log page and Section 3.1.9 describes the RSX-11M-PLUS low core memory page that is part of the system common dump.

CHAPTER 2

SWITCHES

Two kinds of switches allow you to control CDA operation: analysis switches and function switches.

Analysis switches determine which analysis routines CDA applies to the crash input, depending on what information you want. For example, the analysis switches might list information on all devices in the system or only on active devices.

Function switches provide a number of control options. For example, such switches might terminate an analysis after CDA encounters a specified number of errors, or limit the number of pages of output listing.

Both types of switches are file specific. That is, each switch applies to a particular file and may not be used either alone or with any other file.

2.1 ANALYSIS SWITCHES

Table 2-1 summarizes the analysis switches and gives a brief description of their effects. Following Table 2-1 is an expanded description of each switch. Some of the switches in Table 2-1 have synonyms or alternate mnemonics. These are shown under each switch.

Table 2-1
Summary of CDA Analysis Switches

Switch	Meaning	Applies to File
/ACT /ATL	Lists the contents of the Task Control Block for each active task	crash-input
/ADV	Lists information on all devices in the system	crash-input
/ALL	Lists the output of all analysis routines	crash-input
/CLI /CPB	Lists the contents of the CLI parser blocks in the system	crash-input
/CLQ	Lists the contents of the clock queue	crash-input

(continued on next page)

SWITCHES

Table 2-1 (Cont.)
Summary of CDA Analysis Switches

Switch	Meaning	Applies to File
/CTL	Lists information on each device controller	crash-input
/DEV /DCB /SCB /UCB	Lists information on all active devices in the system	crash-input
/DUMP:a:b:c /DMP:a:b:c	Lists the contents of physical memory between address a and address b; (c is an optional virtual starting address)	crash-input
/HDR	Lists the contents of the task headers for each task resident in memory	crash-input
/KDS:a:b	Lists contents of kernel data space from virtual address a to virtual address b	crash-input
/KIS:a:b	Lists contents of kernel instruction space from virtual address a to virtual address b	crash-input
/PCB /PAR	Lists the contents of each Partition Control Block	crash-input
/POOL	Lists the contents of the system pool	crash-input
/SECPOL	Lists the contents of the system secondary pool (RSX-11M-PLUS only).	
/-SYS	Suppresses listing of the system information	crash-input
/TASK:name:a:b /TAS:name:a:b /TSK:name:a:b	Lists the contents of task "name" between virtual address a and virtual address b; Lists the contents of task data space (if task includes data space) on RSX-11M-PLUS	crash-input
/TCB /TAL /STD	Lists the contents of the Task Control Block for every task in the System Task Directory	crash-input
/TDS:name:a:b	Lists the contents of task data space (RSX-11M-PLUS only)	
/TIS:name:a:b	Lists the contents of task instruction space (RSX-11M-PLUS only)	crash-input

SWITCHES

2.1.1 /ACT or /ATL (Task Control Blocks for Active Tasks)

File: crash-input

Effect: CDA lists the contents of the Task Control Block for each active task.

2.1.2 /ADV (All Devices)

File: crash-input

Effect: CDA lists the contents of the control blocks for all devices in the system. To list active devices, use the /DEV switch.

2.1.3 /ALL (All Analysis Routines)

File: crash-input

Effect: CDA applies all of its analysis routines (except those associated with memory and task dumps) to the specified crash-input. The output from these routines is listed in the following order:

1. System information
2. Active tasks
3. Task headers
4. Partition information
5. Common block directory
6. Device information
7. Clock queue
8. Controller information
9. Pool dump

2.1.4 /CLI or /CPB (Command Line Interpreter Parser Blocks)

File: crash-input

Effect: CDA lists the contents of all Command Line Interpreter Parser Blocks (CPBs) in the system.

2.1.5 /CLQ (Clock Queue)

File: crash-input

Effect: CDA lists the contents of the clock queue.

SWITCHES

2.1.6 CTL (Device Controllers)

File: crash-input

Effect: CDA lists the contents of the controller table and controller request block for each device controller in the system.

2.1.7 /DEV, /DCB, /SCB, or /UCB (Devices in System)

File: crash-input

Effect: CDA scans the system device tables and lists the contents of the control blocks for each active device in the system. To list all devices, use the /ADV switch.

2.1.8 /DUMP:a:b:[c] or /DMP (Physical Memory)

File: crash-input

Effect:

a:b - CDA dumps the contents of physical addresses a through b inclusive and labels them with their physical addresses.

a:b:c - CDA dumps the contents of physical addresses a through b, but labels them with dummy virtual addresses, starting at c.

CDA allows you to specify a virtual starting address because RSX-11M/M-PLUS systems use physical memory in terms of virtual addresses. If you dump physical memory, labeled with the corresponding virtual addresses, you do not have to translate physical to virtual addresses as you read the dump.

2.1.9 /HDR (Headers for Memory-Resident Tasks)

File: crash-input

Effect: CDA lists the contents of the task headers for each task resident in memory.

2.1.10 /KDS:a:b (Kernel Data Space)

File: crash-input

Effect: CDA lists the contents of kernel data space between the virtual addresses a and b inclusive.

2.1.11 /KIS:a:b (Kernel Instruction Space)

File: crash-input

Effect: CDA lists the contents of kernel instruction space between the virtual addresses a and b inclusive.

SWITCHES

2.1.12 /PCB or /PAR (Partition Control Blocks)

File: crash-input

Effect: CDA outputs a map that lists all the occupants of memory and the contents of each Partition Control Block.

2.1.13 /POOL:a:b (System Pool)

File: crash-input

Effect: CDA lists the system pool in octal, RAD50, and ASCII.

2.1.14 /SECPOOL[:a:b] (Secondary Pool)

File: crash-input

Effect: Lists the contents of secondary pool on RSX-11M-PLUS systems.

2.1.15 /STD, TCB, or /TAL (System Task Directory)

File: crash-input

Effect: CDA lists the contents of all Task Control Blocks in the System Task Directory.

2.1.16 /-SYS (System Information)

File: crash-input

Effect: CDA suppresses the system information listing.

2.1.17 /TASK:name:a:b, /TAS, or /TSK (Task Virtual Address Space)

File: crash-input

Effect: CDA lists the virtual address space of task "name" between the 16-bit virtual addresses a and b inclusive. If you do not specify addresses, CDA lists the task's entire virtual address space.

2.1.18 /TDS:name[:a:b]

File: crash-input

Effect: CDA lists the contents of the task data space between the virtual addresses a and b inclusive. If you do not specify addresses, CDA lists the entire task data space.

SWITCHES

2.1.19 /TIS:name:a:b

File: crash-input

Effect: CDA lists the contents of the task instruction space between the virtual addresses a and b inclusive. If you do not specify addresses, CDA lists the entire task instruction space.

2.2 FUNCTION SWITCHES

Table 2-2 summarizes the function switches and gives a brief description of their effects. Following Table 2-2 is an expanded description of each switch.

Table 2-2
Summary of CDA Function Switches

Switch	Meaning	Applies to File	Default ¹
/BL:n	Identifies the starting block number of the crash-input device (The value of n must be less than 65535.)	crash-input	n=1
/DENS:n :HIGH :LOW	Sets density of crash input tape to 800 or 1600 bits per inch (bpi)	crash-input	n=800
/EXIT:n	Terminates analysis after encountering n analysis errors	list file	--
/LIMIT:n	Limits output listing to n pages	list file	n=300.
/LINES:n	Limits page length to n lines	list file	n=60.
/MEMSIZ:n	Saves nK memory from crash in a binary file	binary file	n=124.
/KMR	Forces the assignment of Kernel Address Register values for the crashed system	crash-input	/-KMR
/-SP	Does not print analysis output listing	list file	/SP
/STB	Identifies the file specification that contains the Executive Symbol Table	symbol file	--

1. n can be expressed as an octal or decimal number. A decimal point (.) following the number denotes decimal.

SWITCHES

2.2.1 /BL:n (Identify Starting Block Number)

File: crash-input

Effect: CDA reads the dump from the input device beginning at block n. If the crash dump device is not a disk or DECTape, CDA ignores this switch.

Default: n = 1

2.2.2 /DENS:n (Sets Tape Density)

:HIGH

:LOW

File: crash-input

Effect: CDA reads the crash input tape at the density specified: 800 or 1600 bpi. You can also use LOW to indicate 800 bpi or HIGH to indicate 1600 bpi.

Default: n=800

2.2.3 /EXIT:n (Exit After n Errors)

File: list file

Effect: CDA maintains an error count. As it encounters inconsistencies in the system data structure, it increments this count. If you specify the /EXIT:n switch, CDA terminates analysis after n errors. If you specify the /EXIT switch but do not specify n, CDA exits after one error.

Default: CDA runs to completion.

2.2.4 /LIMIT:n (Limit Output Listing)

File: list file

Effect: The /LIMIT:n switch limits the number of pages of analysis output. When CDA has generated n pages, it terminates the analysis and prints a message on the user terminal indicating that it has done so.

Default: n = 300.

2.2.5 /LINES:n (Print n Lines per Page)

File: list file

Effect: This switch lets you specify the number of lines you want CDA to print per page. After n lines are printed, a new page is ejected.

Default: n=60.

SWITCHES

2.2.6 /MEMSIZ:n (Establish Size of Binary Output File)

File: binary file

Effect: This switch causes CDA to create a Binary Output File 4*n blocks long and to transfer nK words to it from the crash-input file. The value of n must be greater than 16.

This switch is particularly useful when transferring binary crash dumps from disk or DECTape. Since disks and DECTapes have no physical EOFs, it is necessary to specify the size of the actual memory dump.

When the crash input resides on magtape, the binary output file is filled with zeroes if the EOF is read before nK words are transferred.

Default: n = 124.

2.2.7 /KMR (Assign Kernel Mapping Register Values)

File: crash-input

Effect: On mapped systems, when CDA reads incorrect Page Address Register (PAR) values from the crash stack, it aborts the analysis and prints an error message on the terminal. When this happens, you can use the /KMR switch to retry the analysis. When you specify /KMR, CDA uses standard mapping values to convert kernel virtual addresses to physical memory addresses.

Default: CDA uses existing Page Address Registers.

2.2.8 /-SP (Do Not Spool)

File: list file

Effect: CDA does not print the analysis output listing. It creates an output listing file on the device indicated in the output file specification. If you do not specify a device with /-SP, CDA creates the file on SY0:.

Default: /SP

2.2.9 /STB (File Specified Contains the Executive Symbol Table)

File: symbol file (RSX11M.STB)

Effect: The /STB switch identifies a file containing the Executive Symbol Table. This file must correspond to the crashed system. CDA opens the specified file and extracts the necessary symbol values. If it fails to find any required symbol values, CDA aborts the analysis and prints an error message on the console terminal user's.

Default: [current UIC]RSX11M.STB

CHAPTER 3
ANALYSIS LISTINGS

The CDA output listings in this chapter illustrate CDA operation. Each item of each listing is keyed to the brief explanatory text that precedes it.

Dumps shown in offset mode use relative addresses. They are offset from the beginning of the displayed data. They are not physical or virtual addresses of the data.

NOTE

These listings came from several different crash dumps. Therefore, values that would normally correlate across the various listings do not necessarily correlate here. Those listings that extend across several pages in an actual dump of a crashed system are truncated here and reflect only a typical printout format for them.

3.1 SYSTEM INFORMATION

The first six pages of a CDA output listing normally contain the system information described in Sections 3.1.1 through 3.1.6. The system information consists of the following:

- Volatile registers
- Kernel stack
- System common
- System common alphabetized dump
- Pool statistics
- Assign table

ANALYSIS LISTINGS

If group global event flag blocks are in memory when the system crashes, the listing described in Section 3.1.7 appears. If Error Log Packets are in memory at the time of the crash, the listing described in Section 3.1.8 appears. On RSX-11M-PLUS systems, CDA generates the listing of low core memory shown in Section 3.1.9 as part of the system common dump.

3.1.1 Volatile Registers

Figure 3-1 is a listing that reflects the state of the hardware registers at the time of the crash. Refer to the appropriate PDP-11 processor handbook for detailed information on these registers. Each item in the following list describes a correspondingly numbered item in Figure 3-1.

Item	Description
1.	Contents of Processor Status Word and kernel and user stack pointers after crash
2.	Program counter and Processor Status Word (that the system pushed onto the kernel stack) just prior to system crash (These values are valid only if the system trapped.)
3.	General registers
4.	Contents of memory management registers
5.	Contents of Page Address and Page Description Registers (See Section 4.1.1 for information on how to interpret this information.)
6.	UNIBUS map registers (This field is suppressed if the processor does not have a UNIBUS map.)
7.	CPU error register - identifies the source of the abort or trap that used the vector at location 4. (On RSX-11M-PLUS systems, this field is suppressed if the processor does not have a UNIBUS map.)
8.	Memory system error register (On RSX-11M-PLUS systems, this field is suppressed if the processor does not have a UNIBUS map.)
9.	Cache control register (On RSX-11M-PLUS systems, this field is suppressed if the processor does not have a UNIBUS map.)

ANALYSIS LISTINGS

RSX-11M CRASH DUMP ANALYZER V3.2 21-MAY-79 10:58 PAGE 1
VOLATILE REGISTERS

AFTER CRASH: PS=000000 SP(K)=000616 SP(U)=001674 (1)
BEFORE CRASH: PC=000000 PS=120476 (2)
R0=007760 R1=007377 R2=007530 R3=000000 R4=000001 R5=000000 (3)
MMR0=000000 MMR1=000000 MMR2=002256 MMR3=000000 (4)

USER				UNIBUS MAP			
I SPACE		D SPACE					
PDR	PAR	PDR	PAR				
077506	000000	000000	000000	1	00000000		
077406	000200	000000	000000	2	00020000		
077506	000400	000000	000000	3	00040000		
077406	000600	000000	000000	4	00060000		
077406	001000	000000	000000	5	00100000		
037506	001600	000000	000000	6	00120000		
000000	003123	000000	000000	7	00140000		
077406	177600	000000	000000	8	00327024		
				9	01132134		
				10	01152134		
				11	01157134		
				12	01200134		
				13	01674220		
				14	00430770		
				15	01636100		
				16	17416700		
				17	17416700		
				18	17416700		
				19	17416700		
				20	17416700		
				21	17416700		
				22	17416700		
				23	17416700		
				24	17416700		
				25	17416700		
				26	17416700		
				27	17416700		
				28	17416700		
				29	17416700		
				30	17416700		
				31	17416700		

SUPERVISOR

I SPACE		D SPACE	
PDR	PAR	PDR	PAR
000000	000000	000000	000000
000000	000000	000000	000000
000000	000000	000000	000000
000000	000000	000000	000000
000000	000000	000000	000000
000000	000000	000000	000000
000000	000000	000000	000000
000000	000000	000000	000000
000000	000000	000000	000000

KERNEL

I SPACE		D SPACE	
PDR	PAR	PDR	PAR
077506	000000	000000	000000
077506	000200	000000	000000
077506	000400	000000	000000
077506	000600	000000	000000
077506	001000	000000	000000
077406	001600	000000	000000
077406	003123	000000	000000
077506	177600	000000	000000

Figure 3-1 Volatile Registers

RSX-11M-PLUS CRASH DUMP ANALYZER V01 21-FEB-79 14103 PAGE 1
VOLATILE REGISTERS

AFTER CRASH: PS=000344 SP(K)=000604 SP(S)=001212 SP(U)=120362
CPU ERR = 000100 MEM SYS ERR = 000000 CACHE CTL REG = 000001

BEFORE CRASH: PC=045210 PS=030005

R0=000401 R1=053550 R2=000000 R3=000010 R4=000102 R5=120526

MMR0=000001 MMR1=000000 MMR2=011710 MMR3=000066

USER

UNIBUS MAP

I SPACE		D SPACE	
PDR	PAR	PDR	PAR
015006	000000	000000	000000
077406	000744	000000	000000
077406	001144	000000	000000
077406	001344	000000	000000
077406	001544	000000	000000
037506	001744	000000	000000
000000	027255	000000	000000
077406	177600	000000	000000

1	00000000
2	00074400
3	00114400
4	00134400
5	00154400
6	00243400
7	00263400
8	00461124
9	02642064
10	02662064
11	02702064
12	02722064
13	02742064
14	02762064
15	15350622
16	17776366
17	07720376
18	13340176
19	11420312
20	14020346
21	12100272
22	03140176
23	04410272
24	00020200
25	06335600
26	04637510
27	17567456
28	17357734
29	10217500
30	00217404
31	11357560

SUPERVISOR

I SPACE		D SPACE	
PDR	PAR	PDR	PAR
077402	006210	077406	020347
004402	006410	014406	020547
000000	000000	000000	022713
000000	000000	000000	023113
000000	000000	000000	023313
000000	000000	000000	016267
000000	000000	074406	004750
000000	000000	000000	005142

KERNEL

I SPACE		D SPACE	
PDR	PAR	PDR	PAR
077506	000000	077506	000000
077406	000200	077506	000744
077406	000400	077506	001144
077406	000600	077506	001344
077406	001000	077506	001544
077406	001744	077406	001744
077406	027255	077406	027255
077406	177600	077506	177600

Figure 3-1 (Cont.) Volatile Registers

ANALYSIS LISTINGS

3.1.2 Kernel Stack

Figure 3-2 shows the contents of the kernel stack area beginning at V\$\$CTR and ending at \$STACK. The kernel stack pointer points to a location within this area. See Section 4.1.2 for information on interpreting the contents of the kernel stack.

RSX-11M CRASH DUMP ANALYZER V4.0 21-MAY-81 15:13 PAGE 2
 KERNEL STACK

KERNEL STACK:

000400	000000	000000	000000	000000	000000	000000	000000	000000
000420	000000	000000	000000	000000	000000	000000	000000	000000
000440	000000	000000	000000	000000	000000	000000	000000	000000
000460	000000	000000	000000	000000	000000	000000	000000	000000
000500	000000	000000	000000	000000	000000	000000	000000	000000
000520	000000	000000	000000	000000	000000	000000	000000	000000
000540	000000	000000	000000	000000	000000	000000	000000	000000
000560	000000	000000	000000	123064	177613	120204	000251	000251
000600	123224	116506	000000	122710	000014	120344	123064	001446
000620	120204	123064	123064	001446	120204	161121	006066	110160
000640	114514	025160	000000	023540	006066	133362	126570	000000
000660	140672	130054	160020	136744	122026	000000	137062	160020
000700	130110	130054	006066	105664	000000	120644	022402	011762
000720	030011	000700	007736	121000	003306	120212	025616	177777
000740	106036	000000	106004	120220	170000			

Figure 3-2 Kernel Stack

ANALYSIS LISTINGS

3.1.3 System Common

The listing in Figure 3-3 provides a selective interpretation of some of the items in system common. Each item in the list describes the correspondingly numbered item in Figure 3-3. (Refer to the RSX-11M Guide to Writing an I/O Driver or the RSX-11M-PLUS Guide to Writing an I/O Driver for more information.)

Item	Description
1.	Time and date of crash, as set in the system
2.	The task that was running at the time of the crash (If no task was running, this field contains the null task. This condition could develop if all the active tasks are blocked at the time of the crash. For information on determining which task or driver was mapped at the time of the crash, see Section 4.1.1.)
3.	The address of the Task Control Block of the current task
4.	The contents of the 4-byte system ID indicating system base level
5.	The first address available for partitions (the last address of the Executive + 1)
6.	The system size in 32-word blocks and in total words
7.	System UIC
8.	Stack depth count
9.	Contents of the global event flag words
10.	Name of the system for which dump is generated
11.	Network UIC
12.	Device from which the system was booted
13.	Logical block number of the beginning of the system image
14.	Size of system image file in blocks
15.	The octal value of the system feature masks and the meaning of each set bit
16.	Octal dump of system common in offset mode in numerical order by address

ANALYSIS LISTINGS

RSX-11M CRASH DUMP ANALYZER
SYSTEM COMMON

V4.0

21-MAY-81 15:13

PAGE 3

CRASH OCCURRED AT 09:53:51 21-MAY-81 (1)

CURRENT TASK = LDR... TCB ADDRESS = 112050
 S\$SYSID = 30E \$EXSIZ = 115000 S\$SYSIZ = 16384./512K S\$YUIC = [2,54]
 S\$TKDP = 000000 S\$COMEFL: <33-48> 000000 <49-64> 000000
 SYSTEM NAME = QUASAR S\$NTUIC = [102,54]
 LOAD DEVICE = DB0 LBN = 00124461 FILE SIZE = 496.
 SYSTEM FEATURE MASK (FIRST WORD) = 033377

BIT SET	MEANING
EXT	22-BIT EXTENDED MEMORY SUPPORT
MUP	MULTI-USER PROTECTION SUPPORT
EXV	20K EXEC SUPPORTED
DRV	LOADABLE DRIVER SUPPORT
PLA	PLAS SUPPORT
CAL	DYNAMIC CHECKPOINT SPACE ALLOCATION
PKT	PREALLOCATION OF I/O PACKETS
EXP	EXTEND TASK DIRECTIVE SUPPORTED
OFF	PARENT/OFFSPRING TASKING SUPPORTED
FDT	FULL DUPLEX TERMINAL DRIVER
DYM	DYNAMIC MEMORY ALLOCATION SUPPORTED
CEX	COMMUNICATIONS EXEC IS LOADED

SYSTEM FEATURE MASK (SECOND WORD) = 167400

BIT SET	MEANING
DPR	DIRECTIVE PARTITION SUPPORT
IRR	INSTALL, REQUEST, AND REMOVE TASK SUPPORT
GGF	GROUP GLOBAL EVENT FLAG SUPPORT
RAS	RECEIVE/SEND DATA PACKET SUPPORT
RBN	ROUND ROBIN SCHEDULING SUPPORTED
SWP	EXECUTIVE LEVEL DISK SWAPPING SUPPORTED
STP	EVENT FLAG MASK IS IN THE TCB

SYSTEM FEATURE MASK (THIRD WORD) = 025215

BIT SET	MEANING
CLI	MULTIPLE CLI SUPPORT
EIS	SYSTEM REQUIRES THE EXTENDED INSTRUCTION SET
CRA	SYSTEM SPONTANEOUSLY CRASHED (1=YES)
STM	SYSTEM HAS SET SYSTEM TIME DIRECTIVE
AST	SYSTEM HAS AST SUPPORT

Figure 3-3 System Common

ANALYSIS LISTINGS

RSX-11M CRASH DUMP ANALYZER
SYSTEM COMMON DUMP

V4.0

21-MAY-81 15:13

PAGE 4

			⑩					
ADDR	LABEL	VALUE	ADDR	LABEL	VALUE	ADDR	LABEL	VALUE
007660		000760	010020	\$POLST	000403	010160		000000
		010316		\$PRIHL	003100			000000
		000207		\$PRILL	001130			000000
	\$HEADR	111700		\$PFRSZ	000310			000000
		174000		\$POLBP	000063			000000
	\$COMEFL	000000		\$POLFL	000200			000000
		000000		\$POLLW	000144			000000
	\$SYSID	030063		\$PARPT	017226			000000
007700		020105	010040	\$CLKHD	044414	010200		000000
	\$TKNPT	107134		\$COPT	037356			000000
	\$SHFPT	106704		\$PARHD	114734			000000
	\$CKCNT	177546		\$LDRPT	112050			000000
	\$CKCSR	177546		\$TSKHD	112050			000000
	\$CKLDC	000000		\$XCOM1	001600			000000
	\$SYUIC	001054		\$XCOM2	001746			000000
		000000		\$GGEF	000000			000000
007720	\$EXSIZ	115000	010060	\$GFTCB	010064	010220		000000
	\$PWRFL	000000		\$GEFPT	010064		\$ERBAF	051423
	\$SIGFL	000000		\$GEFDM	000356			030131
	\$LOGHD	052254		\$IDLCT	000000			055472
	\$MCRCB	104360		\$IDLPT	103741			026061
	\$LSTLK	103640		\$DYPMN	020035			056466
		000003			020037			040502
	\$CRAVL	045074			020037			045503
007740		000000	010100		017440	010240		050125
	\$ACTHD	112050			017440			042456
	\$DICSV	001051			020040			051122
	\$TKTCB	112050		\$BTMSK	000001			000000
	\$LBUIC	000454			000002			000000
	\$ABTIM	007572			000004			000000
	\$RQSCH	000000			000010			000000
	\$STKDP	000000			000020			000000
007760	\$DEVHD	063460	010120		000040	010260		000000
	\$RNDCT	000005			000100			000000
	\$SWPCT	000036			000200			000000
	\$ERRPT	000000			000400		\$ERFID	000000
	\$CFLPT	046444			001000			000000
		000000			002000			000000
		026222			004000			000000
	\$INTCT	177777			010000			000000
010000	\$FRKHD	000000	010140		020000	010300	\$PRMOD	000000
		010000			040000		\$SYSIZ	040000
	\$FMASK	033377			100000			000000
		167400		\$ERHEA	000000			124461
		025215			010146			041104
	\$HFMSK	000003		\$ENTSQ	000001			000760
	\$PTTCB	053510		\$ERRSQ	000000			177777
	\$PRISZ	003370		\$ERFLA	000000			000015

Figure 3-3 (Cont.) System Common

ANALYSIS LISTINGS

3.1.4 System Common Alphabetized Dump

The listing in Figure 3-4 represents an alphabetical list of the locations in system common that have a label associated with them. The octal numbers represent the contents of those locations, not the addresses of the labels. The following summary lists the labels and their meanings. Note that some of these labels may not appear on your listing, or additional labels may appear, depending upon the options you selected at system generation.

\$ABTIM	Absolute time counter
\$ACCLK	Absolute time clock for accounting
\$ACNFE	Accounting feature mask word
\$ACTHD	Active task listhead
\$ACTPS	Clock rate for accounting
\$APLIM	Free secondary pool space ACNT reserves
\$AVRHD	Automatic volume recognition listhead
\$BTTIM	Absolute time when system was booted
\$CBDHD	Common block directory listhead
\$CFLPT	Checkpoint file PCB listhead
\$CKCNT	Address of clock count register
\$CKCSR	Clock Control Status Register (CSR)
\$CKLDC	Clock load count
\$CKUAB	UAB for task run from clock queue
\$CKURM	URM of processor that keeps the clock
\$CLICQ	Command queue listhead
\$CLKHD	Clock queue listhead
\$COPT	Pointer to Console Output (CO0:) Unit Control Block (UCB)
\$CPMSK	Processor bit clear mask
\$CPPAR	Pointer to partition for CPU local memory
\$CPTBL	Pointer to CLI Parser Block Table
\$CRAVL	Free system pool listhead
\$CRCSR	Crash device CSR address with no KRB
\$CRFLG	Flag indicating saved registers
\$CRFPR	Number of first processor to crash
\$CRKRB	Crash dump device KRB address

ANALYSIS LISTINGS

\$CRLCK	One CPU dumps memory
\$CRSUN	Crash physical unit number
\$CTLST	Start of the CTB list
\$CURPR	Current task priority
\$CXDBL	Context switching disabled flag
\$DEVHD	Pointer to first Device Control Block (DCB)
\$DICSV	Temporary storage for directive services
\$DRAPR	APR value to map directive partition
\$DVSAV	Saved CSR contents for error logging
\$ENTSQ	Error log entry sequence number
\$ERFLA	Error Logger flag word
\$ERHEA	Error Log message queue listhead
\$ERRPT	Pointer to Error Logger Task Control Block (TCB)
\$ERRSQ	Universal error sequence number
\$EVBSQ	Buffer sequence number
\$EVDIS	Buffer position for next event
\$EVKS6	KISAR6 offset to buffer
\$EVLEN	Pointer to word beyond end of buffer
\$EVLOS	Number of events lost through saturation
\$EVSEQ	Event sequence number
\$EVTCB	TCB address of event logger task
\$EXCRC	Executive read-only code CRC
\$EXECL	Serialize access to executive data lock
\$XSIZ	Executive size
\$FMASK	System feature mask
\$FORKL	Serialize access to fork list lock
\$FRKHD	Fork queue listhead
\$FXRPT	Pointer to parity error task
\$GEFDM	Group global dummy mask address word
\$GEFPT	Group global mask address pointer
\$GFTCB	Group global user TCB pointer
\$GGEF	Group global event flags listhead
\$GNLST	General use pool packet listhead

ANALYSIS LISTINGS

\$HEADR	Pointer to current task header
\$HFMSK	Hardware system feature mask
\$HRCPT	Pointer to HRC... task
\$ICAVL	ICB pool, same as core pool if no D space on system
\$IDLCT	Idle pattern count byte
\$IDLFL	Idle pattern flag in bytes
\$IDLPT	Idle pattern word
\$IICPU	Mask of URMs that have been interrupted
\$IIFNL	Serialize access to \$MPTAB lock
\$IIMSK	Iist interrupt mask word
\$IINXT	Round robin word for \$IISVC
\$IIPND	Pending URM work word
\$INTCT	Clock interrupt ticks count
\$LBUIC	Library UIC
\$LDPCB	Current loader PCB pointer
\$LDRPT	Pointer to loader TCB
\$LOGHD	Logical device assignment listhead
\$LSTLK	Lock word -- TCB address of owner
\$MCRPT	Pointer to MCR TCB
\$MOULS	Mount listhead
\$MXEXT	Last address in system common
\$NCPU	Number of processors in system
\$NTUIC	Network UIC
\$PARHD	Pointer to partition list
\$PASTH	Partition AST listhead
\$PFRSZ	Minimum size of largest fragment in pool
\$PFURM	URM to powerfail
\$PKAVL	Pointer to first preallocated I/O packet
\$PKMAX	Maximum number of preallocated I/O packets
\$PKNUM	Number of preallocated I/O packets currently in list
\$PLPAR	Pointer to secondary pool PCB
\$POLBP	Minimum priority for nonprivileged task to execute at low pool

ANALYSIS LISTINGS

\$POLFL	Exec pool usage control flags
\$POLHD	Listhead for secondary pool free list
\$POLST	Exec-pool communications word
\$PRIFR	Current amount of free pool
\$PRIHL	Upper limit for pool monitoring
\$PRILL	Lower limit for pool monitoring
\$PRISZ	Minimum size of largest pool fragment
\$PRMOD	Processor model number
\$PRTAB	Processor current task priority table
\$PTCBL	Prototype TCB listhead
\$PTCPT	KISAR6 bias of prototype TCB
\$PTTCB	TCB address of pool recovery task
\$PWRFL	Powerfail recovery request flag
\$PWRLK	Serialize access to \$PWRMK lock
\$PWRMK	Mask of CPU in powerfail code
\$RNDC	Clock ticks for each scheduling interval
\$RNDCT	Number of clock ticks until next schedule interval
\$RNDH	Highest priority class to consider
\$RNDL	Lowest priority class to consider
\$ROEND	End of read-only part of the executive
\$RQSCH	Schedule request TCB address
\$RQTAB	Reschedule pointer to TCB table
\$SABPT	Pointer to system account block
\$SAHDB	Bias of current task header
\$SAHPT	Virtual address of current task header
\$SAVSP	Saved stack pointer
\$SCCTB	CTB if \$SCDEV CONTAINS KRB
\$SCDEV	UCB or KRB for status change
\$SCERR	Error return from driver
\$SCMOF	Offset to data space
\$SCOFL	On-line or off-line parameter
\$SECFR	Number of free blocks in secondary pool
\$SGFFR	Pointer into stack for \$SGFIN

ANALYSIS LISTINGS

\$SHERR	Points to TCB of shadow error task
\$SHFCT	Minimum ticks between shuffler requests
\$SHFPT	Pointer to shuffler TCB
\$SHFTM	Time remaining before next possible request to shuffler
\$SHLIM	Error packet limit
\$SHLOS	Number of packets lost from saturation
\$SHPCT	Current shadow error count
\$SHUMB	Root for UMB list
\$SIGFL	Task waiting for significant event
\$STALR	Sanity timer alarm enabled on CPU
\$STENB	Sanity timer enabled
\$STKDP	Stack depth indicator
\$SWPC	Clock ticks for each swapping interval
\$SWPCT	Number of clock ticks to next swapping interval
\$SWPR	Swapping priority
\$SWR	Multiprocessor console switch register
\$SYLHD	Listhead for Syslog input queue
\$SYSIZ	Size of memory in 32K-word blocks
\$SYUAB	Address of UAB for system tasks
\$SYUIC	System User Identification Code (UIC)
\$TKNPT	Pointer to TKTN TCB
\$TKPS	Ticks per second
\$TNAME	Multiuser task name
\$TSKHD	Pointer to System Task Directory (STD)
\$TTNS	Tick of second
\$ULDPT	Microcode loader task TCB address
\$UMRST	Unibus run mask status table
\$VECTR	Highest vector address
\$XDFTL	XDT initialization table
\$XDTPR	Flag for prompts from XDT

ANALYSIS LISTINGS

RSX-11M CRASH DUMP ANALYZER V4.0
 SYSTEM COMMON ALPHABETIZED DUMP

21-MAY-81 15:13

PAGE 6

\$ABTIM 007572	\$ERRPT 000000	\$NETPF 000000	\$SWPCT 000036
\$ACTHD 112050	\$ERRSQ 000000	\$NTUIC 041054	\$SYSIZ 040000
\$AVRHD 000000	\$XSIZ 115000	\$PARHD 114734	\$SYSNM 052521
\$CFLPT 046444	\$FMASK 033377	\$PARPT 017226	\$SYUIC 001054
\$CKCNT 177546	\$FRKHD 000000	\$PFRSZ 000310	\$TEMP0 110160
\$CKCSR 177546	\$GEFDM 000356	\$PKAVL 072230	\$TEMP1 064170
\$CKLDC 000000	\$GEFPT 010064	\$PKMAX 017	\$TEMP2 013356
\$CLICQ 000000	\$GFTCB 010064	\$PKNUM 012	\$TEMP4 000000
\$CLKHD 044414	\$GGEF 000000	\$POLBP 000063	\$TKNPT 107134
\$COPT 037356	\$HEADR 111700	\$POLFL 000200	\$TKPS 000074
\$CPTBL 010472	\$HFMSK 000003	\$POLLW 000144	\$TKTCB 112050
\$CRAVL 045074	\$IDLCT 000	\$POLST 000403	\$TSKHD 112050
\$CURPR 370	\$IDLFL 000	\$PRIHL 003100	\$TTNS 000066
\$CXDBL 000	\$IDLP1 103741	\$PRILL 001130	\$UMRHD 052642
\$DEVHD 063460	\$INTCT 177777	\$PRISZ 003370	\$UMRPT 170200
\$DICSV 001051	\$LBUIC 000454	\$PRMOD 000000	\$UMRWT 000000
\$DPM 000040	\$LDRPT 112050	\$PTTCB 053510	\$WTCSR 017226
\$ENTSQ 000001	\$LOGHD 052254	\$PWRFL 000000	\$WTDUM 017226
\$ERBAF 023	\$LSTLK 103640	\$RNDCT 000005	\$XCOM1 001600
\$ERFID 000000	\$MCRCB 104360	\$RQSCH 000000	\$XCOM2 001746
\$ERFLA 000	\$MCRPT 110160	\$SHFPT 106704	
\$ERHEA 000000	\$MOULS 046614	\$SIGFL 000000	
\$ERLOF 000	\$MXEXT 177777	\$STKDP 000000	

Figure 3-4 System Common Alphabetized Dump

ANALYSIS LISTINGS

3.1.5 Pool Statistics

The listing in Figure 3-5 contains information concerning the system pool. CDA derives Items 2, 3, and 4 by scanning the free block pointers of the pool. The minimum block size (item 5) (that is, pool granularity), comes from the contents of \$CRAVL-2. Each item in the following list describes a correspondingly numbered item in Figure 3-5.

Item	Description
1.	Pool size in decimal bytes
2.	The largest fragment of pool space
3.	Total number of free bytes in pool
4.	Number of fragments not allocated
5.	Smallest possible block (This is the minimum number of bytes which may be requested at a time. The minimum block size is always four bytes.)
6.	Bit map in octal

Each bit in the bit map represents one 4-byte block. If the bit is set, the block is free. The first block in pool is bit 0 of the first octal word in the bit map. The bits are numbered as follows:

Bit Number	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Binary	0	0	1	1	1	0	1	1	1	1	1	1	1	0	0	0
Octal	0		3			5		7		7		7				0

Any bits left over in the last word of the bit map are cleared.

ANALYSIS LISTINGS

R8X-11M CRASH DUMP ANALYZER
POOL STATISTICS

V3.2

21-MAY-79 10150

PAGE 5

POOL SIZE (BYTES) = 16532, ⁽¹⁾

LARGEST FREE BLOCK (BYTES) = 12416, ⁽²⁾

TOTAL FREE BYTES = 12676, ⁽³⁾

NUMBER OF FRAGMENTS = 10, ⁽⁴⁾

MINIMUM BLOCK SIZE (BYTES) = 4, ⁽⁵⁾

POOL BITMAP (CONSTRUCTED FROM LINKED POOL, BLOCK FREE IF BIT SET):

000000	100434	000000	007000	000040	140000	002001	000000
000000	000000	000000	000000	000004	000000	000000	000000
176000	177777	177777	017777	000000	000000	177740	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
177777	177777	177777	177777	177777	177777	177777	177777
000037	000000	000000	000000	000000	000000	000000	000000
000000	000000	000000	000000	000000	000000	000000	000000
000000	000000	000000	000000	000000	000000	000000	000000
000000	000000	000000	000000	000000	000000	000000	000000
000000	000000	000000	000000	000000	000000	000000	000000
000000	000000	000000	000000	000000	000000	000000	000000




Figure 3-5 Pool Statistics

ANALYSIS LISTINGS

3.1.6 Assign Table

Figure 3-6 is a listing of the logical device assignment table.

- | Item | Description |
|------|---|
| 1. | Logical name assigned to device |
| 2. | Physical name of device |
| 3. | Whether assignment is login, local, or global |
| 4. | Terminal that made the logical assignment |

RSX-11M CRASH DUMP ANALYZER V4.0 21-MAY-81 15:13 PAGE 8
 ASSIGN TABLE

LOGICAL ----- ①	PHYSICAL ----- ②	TYPE ----- ③	④
SY0:	DB0:	LOCAL	TI = TT54;
SY0:	DB2:	LOCAL	TI = TT15;
SY0:	DB1:	LOCAL	TI = TT51;
OU0:	DM0:	LOCAL	TI = TT51;
OU0:	DB0:	LOCAL	TI = TT57;
IN0:	DB1:	LOCAL	TI = TT57;
SY0:	DB2:	LOCAL	TI = TT24;
MP0:	DB0:	GLOBAL	

Figure 3-6 Logical Device Assignment Table

ANALYSIS LISTINGS

3.1.7 Group Global Event Flags

Figure 3-7 shows a group global event flag dump. If there are no group global event flags, this dump does not appear.

Item	Description
1.	Group number
2.	Access count
3.	Group Global Event Flag block dump The last two words are the group global event flags.

RSX-11M-PLUS CRASH DUMP ANALYZER V2.0 26-AUG-81 10:17 PAGE 18
GROUP GLOBAL EVENT FLAGS

```

      ①
GROUP NUMBER =1          ACCESS COUNT =177476
      ②
GGEF DUMP:             ③
000000 056660 000401 177476 000015 000000

GROUP NUMBER =7          ACCESS COUNT =006332
GGEF DUMP:
000000 000000 000007 006332 000014 000000
```

Figure 3-7 Group Global Event Flags

ANALYSIS LISTINGS

3.1.8 Error Log Packets

The listing shown in Figure 3-8 contains error logging information that was residing in memory at the time of the crash. This page does not appear if no error log packets were in memory at the time of the crash. This data is not written to the Error Log file on disk.

- | Item | Description |
|------|-------------------------------------|
| 1. | Address of error log buffer |
| 2. | Error log packet entry type code |
| 3. | Error log packet entry type subcode |
| 4. | Time the packet was logged. |
| 5. | Dump of error log packet in octal |

RSX-11M CRASH DUMP ANALYZER V4.0 14-JUL-81 13:58 PAGE 8
 ERROR LOG BUFFERS

①	②	③
BUFFER ADDRESS = 072304	ENTRY TYPE CODE = 00002	ENTRY TYPE SUBCODE = 00001
TIME = 7-JUL-81 07:46:11	④	
000000 000000 000210 000034 000055 000401 030463 020040 003401		
000020 000025 000013 000402 003521 003407 005456 000106 000001		
000040 000046 046504 000001 000001 000000 047115 052105 031526		
000060 041117 000112 000000 000000 000000 000001 064766 000000		
000100 011532 000000 000000 000030 045662 131574 000424 047503 ⑤		
000120 000400 001000 000003 000017 004010 177000 000000 000056		
000140 101220 172741 044702 000424 004301 100301 000000 000000		
000160 000253 177777 033065 022000 004066 000000 010341 100000		
000200 101721 000001 000001 105262 030111		

Figure 3-8 Error Log Packets

ANALYSIS LISTINGS

3.1.9 Low Core Memory Dump (RSX-11M-PLUS Only)

The listing shown in Figure 3-9 contains a dump of RSX-11M-PLUS low core memory, alphabetized by label.

The following summary lists labels found in RSX-11M-PLUS low core memory and their meanings:

\$CRSBF	Internal crash stack
\$CRUPC	Scratch user PC
\$CRUST	Scratch user PS
\$CURPR	Pointer to current task priority
\$CXDBL	Context switch disable flag
\$DICSV	Temporary storage for directive service
\$DXDEP	Entry point to dynamic executive debugger interface
\$DXDK5	Saved KINAR5 for dynamic executive debugger interface
\$DXDRL	Relocation bias for dynamic executive debugger interface
\$HEADR	Pointer to current task header
\$PARLV	Interrupt recursion level counter
\$RQSCH	Pointer to current reschedule pointer
\$SAHDB	Bias of current task header
\$SAHPT	Virtual address of current task header
\$SAVSP	Saved stack pointer
\$SIRWF	Supervisor instruction space read/write flag
\$STKDP	Stack depth indicator
\$SUPFL	Supervisor window flag
\$TKTCB	Pointer to current task TCB

RSX-11M-PLUS CRASH DUMP ANALYZER V2.0 9-OCT-81 15144 PAGE 3
 LOWCORE ALPHABETIZED DUMP

\$CRSBF 000000	000000	000000	\$RQSCH 021712
000000	000000	000000	\$SAHDB 000000
000000	000000	000000	\$SAHPT 000000
000000	000000	000000	\$SAVSP 000000
\$CRUPC 000000	000000	\$DXDEP 000000	\$SIRWF 000
\$CRUST 000000	000000	\$DXDK5 000000	\$STKDP 000000
\$CURPR 021722	000000	\$DXDRL 000000	\$SUPFL 000
\$CXDBL 000	000000	\$HEADR 000000	\$TKTCB 000000
\$DICSV 000000	000000	\$PARLV 177777	

Figure 3-9 Low Core Memory

ANALYSIS LISTINGS

3.2 OPTIONAL INFORMATION

CDA gives you additional information when you use the analysis switches described in Chapter 2. Figures 3-10 through 3-24 illustrate the output CDA provides when you use these switches.

3.2.1 Active Tasks

The listing shown in Figure 3-10 contains active task information. The Receive Queue, AST Queue, Receive by Reference Queue, and Offspring Control Block sections of this example appear only if the task has them; otherwise, they are suppressed. Section 3.2.2 describes the additional information in the active task listing when the active task is MCR.

Item	Description
1.	Task name
2.	Address of Task Control Block for the task
3.	The name of the partition in which the task runs
4.	Address of Partition Control Block
5.	The base address for the partition in which the task runs
6.	The device that contains task image
7.	The beginning Logical Block Number of the task on the device
8.	The running priority
9.	The number of outstanding QIO requests
10.	Current UIC (either the login UIC or the UIC specified with a SET command)
11.	Physical name of task's pseudo-device
12.	Maximum size of task image in 32.-word blocks
13.	State of local event flags for task
14.	First status word (blocking bits). The 3-letter codes have the following meanings: <ul style="list-style-type: none">-EXE - Task not executingRDN - I/O rundown in progressCIP - Task blocked for checkpoint in progressMSG - Abort message being outputCKR - Task has checkpoint request (M-PLUS only)BLC - Increment blocking countSTP - Task stopped by CLI command

ANALYSIS LISTINGS

15. Second status word (state bits). The 3-letter codes have the following meanings:
- AST - Asynchronous system trap (AST) in progress
 - SIO - Task stopped for buffered I/O
 - DST - AST recognition disabled
 - AFF - Task installed with affinity
 - CHK - Task not checkpointable
 - SEF - Stopped for event flag
 - REX - Exit AST specified
 - HLT - Task being halted
 - ABO - Task marked for abort
 - STP - Task stopped
 - SPN - Task suspended
 - WFR - Task in wait-for state
16. Third status word (attribute bits). The 3-letter codes have the following meanings:
- ACP - Task is an Ancillary Control Processor.
 - PMD - Task not dumped on synchronous abort.
 - CMD - Task is executing a CLI command
 - REM - Remove task on exit.
 - PRV - Task is privileged.
 - MCR - Task requested as an external MCR function.
 - SLV - Task is a slave task.
 - CLI - Task is a command line interpreter.
 - RST - Task is restricted.
 - NSD - Task does not allow send data.
 - CAL - Task has checkpoint space in task image.
 - ROV - Task has resident overlays.
 - NET - Network protocol level.
 - GFL - Group global event flags are locked.
 - SWS - Reserved for Software Services.
 - MPC - Mapping change with outstanding I/O.

ANALYSIS LISTINGS

17. Fourth status word. The three-letter codes have the following meanings:

MUT - Task is a multiuser task

LDD - Task load device is dismounted

PRO - TCB is a prototype

PRV - Task was privileged but has cleared TB.PRV with the GIN directive

DSP - Task was built for user D space

SNC - Task uses common sync

18. Octal dump of Task Control Block in offset mode

RECEIVE QUEUE (if task has one)

19. Starting address of receive block

20. Name of task

21. Octal dump of receive block in offset mode

AST QUEUE (if task has one)

An item appearing in the AST queue may be one of the following things:

- An unsolicited AST
- floating point AST
- Receive data AST
- Receive by reference AST
- Parity error AST
- Requested exit AST
- Power fail
- CLI command arrival AST
- A buffered I/O AST
- Offspring task AST
- Segmented buffered I/O completion AST
- Task force T-bit trap AST
- Delayed I/O completion AST
- Group global rundown AST

ANALYSIS LISTINGS

- An I/O Request packet
 - Address of AST block
 - A 2-byte indicator (The high-order byte is an offset into the header of the AST control block; the low-order byte is the length of the AST control block in bytes.)

NOTE

If the low-order byte is negative, the block is not an AST block, but an I/O request packet internal to the system. If the low-order byte is 0, the block is an unsolicited character AST.

- Number of bytes allocated on task stack
- Entry point of AST routine
- Number of AST parameters
- Octal dump of the AST block in offset mode (On RSX-11M-PLUS systems, two additional negative offset words appear in the dump.)

RECEIVE BY REFERENCE QUEUE (if task has one)

- Address of Receive by Reference queue block
- Address of the Task Control Block (TCB) for the task that initiated the Send by Reference
- Contents of event flag mask
- Address of event flag mask
- Pointer to created attachment descriptor
- Offset into partition as specified in window definition
- Length to be mapped
- The receiving task's access rights to region being mapped
- Octal dump of Receive by Reference block in offset mode

OFFSPRING CONTROL BLOCK (OCB) LIST (if task has one)

22. Exit event flag number of offspring task
23. Name of parent task
24. Octal dump of offspring control block in offset mode

ANALYSIS LISTINGS

RSX-11M-PLUS CRASH DUMP ANALYZER V2.0 27-DEC-81 13:02 PAGE 13
ACTIVE TASKS

...LDR (1)

(2) (3) (4)
TCB ADDRESS = 111650 PAR = SYSPAR PCB ADDRESS = 111434
(5) (6) (7)
LOAD ADDRESS = 00461600 LOAD DEVICE = LB0: LBN = 00076636
(8) (9) (10) (11)
PRI = 248. I/O COUNT = 0. UIC = (1,24) TI = C00:
(12) (13)
MAX SIZE = 000035 EVENT FLAGS = <1-16> 000001 <17-32> 000000
T,STAT: 000000 (14)
T,ST2: 020020 -CHK STP (15)
T,ST3: 050200 -PMD PRV NSD (16)
T,ST4: 000000 (17)

TCB DUMP:

000000	000000	000370	000000	131574	045662	000000	111662	000000
000020	111666	000001	000000	022370	111300	000000	020020	050200
000040	000370	076636	031420	111434	000035	033500	111426	111426 (18)
000060	000000	000000	000000	000001	111672	000035	000000	000000
000100	000000	111750	000000	111754	000000	000000	000000	000000
:	:	:	:	:	:	:	:	:

RECEIVE QUEUE

(19) (20)
RECEIVE BLOCK ADDRESS = 062000 TASK NAME = TUSKRD
000000 000000 100143 043624 062640 050210 016000 121502 024172 (21)
000020 140002 133406 000000 000000 000000 000000 000000 000000
000040 046522 000000
:
:

OCB LIST:

EXIT EVENT FLAG (O.EFN) = 000000 (22)
PARENT TASK NAME = QMG... (23)
OCB DUMP:
000000 000000 000000 106424 121350 000000 000000 066117 131574 (24)
000020 000000 000000 000000 000000 000000 000000

Figure 3-10 Active Tasks (Truncated)

ANALYSIS LISTINGS

3.2.2 Active Task (MCR)

The active task listing for MCR... contains more information than the active task listing for other tasks. Figure 3-11 shows a listing in which the first 17 items are the same as those in Figure 3-10. The following list describes only the items that are different from those in the previous figure, when the active task is MCR....

Item	Description
1.	Address of MCR input buffer
2.	Address of Unit Control Block of the requesting terminal
3.	Device name and unit number of the terminal that sent block to MCR (ASCII characters)
4.	Octal dump of the MCR input buffer in offset mode
5.	Address of command buffer
6.	Address of Task Control Block of the requesting task
7.	ASCII dump of command buffer
8.	Octal dump of command buffer in offset mode

ANALYSIS LISTINGS

RSX-11M-PLUS CRASH DUMP ANALYZER V01 21-FEB-79 16:23 PAGE 10
ACTIVE TASKS

MCR...

TCB ADDRESS = 114610 PAR = SYSPAR PCB ADDRESS = 037050
LOAD ADDRESS = 00174400 LOAD DEVICE = LB0 LBN = 00073747
PRI = 160. I/O COUNT = 0. UIC = [1,24] TI = TT3
MAX SIZE = 000100 EVENT FLAGS = <1-16> 000001 <17-32> 040000
T,STAT: 000000
T,ST2: 000020 STP
T,ST3: 051300 -PMD PRV CLI NSD CAL

TCB DUMP

000000	000000	000240	000000	050712	131574	000000	114622	000000
000020	114626	000001	040000	024552	113760	000000	000020	051300
000040	000240	073747	035636	037050	000100	112330	036046	036046
000060	000000	000000	000000	114674	000000	114700	000000	000000
000100	004256							

RECEIVE QUEUE

COMMAND LINE INPUT BUFFER ADDRESS = 036730 UCB = 030245
TT50 : 3

000000	043214	030245	035770	000050	000020	000000	030244	000400
000020	120430	001750	140030	000000	001751	140010	000027	000361
000040	000040	000000	000000	000000	000000	000000	000000	000214
000060	026226	000000	000000	117404	005627	000362	000000	000362
000100	000000	113234	000010	037050	000000	036120	036120	000000

MCR COMMAND BLOCKS

BUFFER ADDRESS = 103100 TCB = 102730
ASN DB01:=SY:/LOGIN

000000	000000	102730	051501	020116	041104	030460	036472	054523
000020	027472	047514	044507	015516	026226	000000	000000	117404
000040	024600	000420	000000	000420	000000	103020	000010	104074
000060	000000	060440	060440	060370	103370	000114	000612	033406
000100	170000	126102	000000	000000	000000	000000	000012	000137
000120	000000	000000						

Figure 3-11 Active Task (MCR)

ANALYSIS LISTINGS

3.2.3 Task Headers

Figure 3-12 is an example of a task header listing. The following list describes its contents.

Item	Description
1.	Task name
2.	Pointer to the first word in the task header
3.	Pointer to the first word in the Task Control Block
4.	Contents of Processor Status Word and program counter
5.	Contents of the general registers
6.	Initial contents of the Processor Status Word, the program counter, and the stack pointer
7.	The task header size in decimal bytes, the number of windows required to map the task, and the number of logical unit numbers assigned to the task
8.	Current and default UIC
9.	Pointer to number of window blocks
10.	Pointer to header guard word
11.	Work area extension vector pointer
12.	Priority difference for swapping
13.	Directive Status Word
14.	Address of File Control Services (FCS) impure area
15.	Address of FORTRAN impure area
16.	Address of overlay impure storage

LOGICAL UNIT TABLE

17.	Logical Unit Number
18.	Physical device name before redirect
19.	Window pointer in header

ANALYSIS LISTINGS

20. The low-order byte of this word indicates the number of map entries active; the high-order byte has the following bit assignments:
 - WI.RDV=400 - read virtual address allowed if set
 - WI.WRV=1000 - write virtual block allowed if set
 - WI.EXT=2000 - extend allowed if set
 - WI.LCK=4000 - set if locked against shared access
 - WI.DLK=10000 - set if deaccess lock enabled
 - WI.BPS=100000 - bypass access interlock if set
21. Address of File Control Block
22. File number
23. File sequence number
24. File Control Block status word
25. Number of accesses
26. Number of block locks

WINDOW BLOCKS

27. The name of the partition in which the task runs
28. The virtual limits of the task
29. Address of attachment descriptor
30. Window size in 32-word blocks
31. Offset into partition
32. Address of the first Page Description Register (PDR) used to map the window
33. Number of PDRs used
34. The contents of the last PDR used
35. Octal dump of task header in offset mode

ANALYSIS LISTINGS

RSX=11M CRASH DUMP ANALYZER
TASK HEADERS

V4.0

21-MAY-81 15:13

PAGE 37

TKTN (1)

(2) HEADER ADDRESS = 076060 (3) TCB ADDRESS = 107134
PS=170000 PC=122630 (4)
R0=120254 R1=000065 R2=000060 R3=140354 R4=120702 R5=051024 SP=120226 (5)
INITIAL PS = 170017 INITIAL PC = 120764 INITIAL SP = 120230 (6)
HEADER SIZE = 102, NO. OF WINDOWS = 1, NO. OF LUNS = 1, (7)
CURRENT UIC = [1,24] DEFAULT UIC = [1,24] (8)
H,WND = (9) 076162 H,GARD = (10) 076224 H,VEXT = (11) 000000 H,SPRI = (12) 5,
DSW = (13) 000001 H,FCS = (14) 000000 H,FORT = (15) 000000 H,OVLY = (16) 000000

LOGICAL UNIT TABLE:

(17) #	(18) DEV	(19) WINDOW	(20) W.CTL	(21) W.FCB	(22) F.FNUM	(23) F.FSEQ	(24) F.STAT	(25) NAC	(26) NLCK
1	TI0:	000000							

WINDOW BLOCKS:

(27) PAR	(28) VIRT LIMITS	(29) ATT DESC	(30) WND SIZE	(31) OFFSET	(32) 1ST PDR	(33) NO.	(34) LAST PDR
TKNPAR	120000 127777	045220	000100	000000	177612	1	037406

HEADER:

000000	120226	000146	140354	163500	000424	000424	170017	120764
000020	120230	000000	000000	000000	000000	000000	000000	000000
000040	000000	000000	076162	000001	000000	000000	000000	000000
000060	000005	000000	000000	000000	000000	076224	000001	044570 (35)
000100	000000	000001	114450	120000	127777	045220	000100	000000
000120	000612	037406	170000	122630	051024	120702	140354	000060
000140	000065	120254	000000					

Figure 3-12 Task Headers (Truncated)

ANALYSIS LISTINGS

3.2.4 CLI Parser Block

The listing shown in Figure 3-3 contains the CLI Parser Block for MCR.

Item	Description
1.	Task name of the command line interpreter
2.	Starting address of the command line interpreter parser block (CPB)
3.	C.PSTS - CPB status word
4.	Dump of the CLI parser block in octal


```

RSX-11M CRASH DUMP ANALYZER      V4.0      21-MAY-81   15:13      PAGE 9
CLI PARSER BLOCKS

CLI TASK NAME   MCR... ①
CPB ADDRESS = 010472  CLI NAME = MCR ②
C.PSTS:   SGL ③

CPB DUMP:
000000   110160 050712 000000 000040 003404 005015 000076 005015 ④
000020   041515 037122 000000
    
```

Figure 3-13 CLI Parser Blocks

3.2.5 Partition Information

CDA outputs partition information in two segments. The listing shown in Figure 3-14 contains system partition information, and the listing shown in Figure 3-15 represents individual partition information. The following list describes elements of Figure 3-14. Individual partitions include attachment Descriptors and Wait Queues when they apply.

Item	Description
1.	Partition names
2.	Partition Control Block address
3.	Base address of partition in memory
4.	Size of the partition
5.	Type of partition
6.	Task or tasks occupying the partition

ANALYSIS LISTINGS

RSX-11M CRASH DUMP ANALYZER
PARTITION INFORMATION

V4.0

21-MAY-81 15:13

PAGE 54

M E M O R Y M A P

① PARTITION -----	② PCB ADR -----	③ BASE ----	④ SIZE ----	⑤ TYPE -----	⑥ OCCUPIED BY -----
<EXEC>		00000000	00044700		
<POOL>		00044700	00050100		
CEXPAR	114734	00115000	00003000	MAIN COMMON	
TTPAR	114670	00120000	00040000	MAIN DRIVER	TT:
EXCOM1	114624	00160000	00014600	MAIN COMMON	
EXCOM2	114560	00174600	00006100	MAIN COMMON	
SYSPAR	114514	00202700	00010000	MAIN TASK	MCR...
TKNPAR	114450	00212700	00010000	MAIN TASK	TKTN
DRVPAR	114404	00222700	00030200	MAIN SYS	
	114340	00222700	00002100	SUB DRIVER	DB:
	114240	00225000	00001200	SUB DRIVER	DK:
	114140	00226200	00003000	SUB DRIVER	DM:
	114040	00231200	00003000	SUB DRIVER	DR:
	113740	00234200	00001000	SUB DRIVER	EM:
		00235200	00000100	<HOLE>	
	113640	00235300	00001100	SUB DRIVER	DT:
	113540	00236400	00001400	SUB DRIVER	DX:
	113440	00240000	00002200	SUB DRIVER	DL:
	113340	00242200	00002600	SUB DRIVER	DD:
	113240	00245000	00001300	SUB DRIVER	LP:
	113104	00246300	00004300	SUB DRIVER	MM:
	112450	00252600	00000300	SUB DRIVER	CO:
LDRPAR	112404	00253100	00002500	MAIN TASK	LDR...
BASIC2	112340	00255600	00040000	MAIN COMMON	
FCSRES	112274	00315600	00040000	MAIN COMMON	
TSTPAR	112230	00355600	00100000	MAIN TASK	
GEN	112164	00455600	03322200	MAIN SYS	
	045620	00455600	00024000	SUB TASK	DB2FCP
	057144	00501600	00025500	SUB TASK	NETACP
		00527300	00005200	<HOLE>	
	064060	00534500	00023300	SUB TASK	RMHACP
	053004	00560000	00005200	SUB TASK	CA.T6
	073534	00565200	00005200	SUB TASK	CA.T30
		00572400	00005700	<HOLE>	
	045010	00600300	00005700	SUB TASK	PMT...

Figure 3-14 Partition Information

ANALYSIS LISTINGS

Each item in the following list describes a correspondingly numbered item in Figure 3-15.

Item	Description
PARTITION CONTROL BLOCK	
1.	Partition name
2.	Pointer to first word of Partition Control Block
3.	Type of partition
4.	Name of main partition
5.	Physical base address of partition in 32-word blocks
6.	Partition size in 32-word blocks
7.	Pointer to the first word of the Task Control Block of attached task
8.	Partition protection word (mapped system only)
9.	Priority of attached task or partition
10.	I/O count of attached task or partition
11.	Partition status flags. The 3-letter codes have the following meanings: OUT - Partition is out of memory. CKP - Partition checkpoint in progress. CKR - Partition checkpoint is requested. CAF - Checkpoint space allocation failure. -CHK - Partition is not checkpointable. FXD - Partition is fixed. LFR - Last head of region failure. PER - Parity error in partition. LIO - Marked by shuffler for long I/O. NSF - Partition cannot be shuffled. COM - Library or common block. DEL - Partition should be deleted when not attached.
12.	Octal dump of Partition Control Block in offset mode.

ANALYSIS LISTINGS

Item	Description
ATTACHMENT DESCRIPTOR	
13.	Address of attachment descriptor
14.	Partition to which attachment occurs
15.	Name of attaching task
16.	Partition Control Block attachment queue thread word
17.	Task Control Block (TCB) attachment queue thread word
18.	Priority of highest priority task attached to this partition
19.	I/O count of attached task on RSX-11M systems; I/O count of attached partition on RSX-11M-PLUS systems
20.	The number of times task is mapped through this attachment descriptor
21.	Attachment descriptor status byte. The 3-letter codes have the following meaning: DEL - task has delete access EXT - task has extend access WRT - task has write access RED - task has read access PRO - TCB is secondary pool TCB bias SPB - Cache bypass request RBP - Request to not bypass cache
22.	Octal dump of attachment descriptors in offset mode

PARTITION WAIT QUEUE ITEM DESCRIPTION

23.	Name of the task awaiting access to the partition
24.	Address of Task Control Block for the task
25.	TI: device for the task
26.	Task's priority
27.	Second status word (state bits)--same as item 15 of the active task dump (Section 3.2.1)

RSX-11M-PLUS SYSTEMS ONLY ADDITIONAL ITEM DESCRIPTION

28.	Resident mapped task count
29.	Wait queue contains partition description rather than task description if this is an RSX-11M-PLUS system

ANALYSIS LISTINGS

PARTITION	PCB ADR	TYPE	MAIN	BASE	SIZE	P,TCB	PRO	PRI	IOC
DRVPAR	117270	SUB	DRVPAR	001312	000260	040754	000000	0.	0.

P,STAT: SYS DRV

000000	000000	000000	015746	062072	000000	117734	001312	000000	000000
000020	000000	000000	000000	040754	000000	000000	000000	000000	000000
000040	117326								

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩
PARTITION	PCB ADR	TYPE	MAIN	BASE	SIZE	P,TCB	PRO	PRI	IOC
SYS PAR	117074	MAIN	SYS PAR	001372	000105	115264	000000	0.	0.

P,STAT: ⑪

000000	117030	000000	075273	062072	000000	117074	001372	000105	
000020	115764	115764	100200	115264	000000	042760	000000	042000	
000040	041764								

} ⑫

WAIT QUEUE:

⑬	⑭	⑮	⑯	⑰
TASK	TCB ADR	TI	T,PRI	STATE BITS (T,ST2)
F11ACP	115764	CO0	149.	CAF STP

ATTACHMENT DESCRIPTORS:

⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳
ADDRESS	PARTITION	ATT TASK	A,PCBL	A,TCBL	PRI	IOC	MAP COUNT
042000	SYS PAR	...MCR	041764	000000	160.	0.	0.

A,STAT: WRT RED ⑳

000000	041764	000240	115264	000000	000000	117074	㉑
--------	--------	--------	--------	--------	--------	--------	---

Figure 3-15 Partition Control Blocks and Attachment Descriptors

ANALYSIS LISTINGS

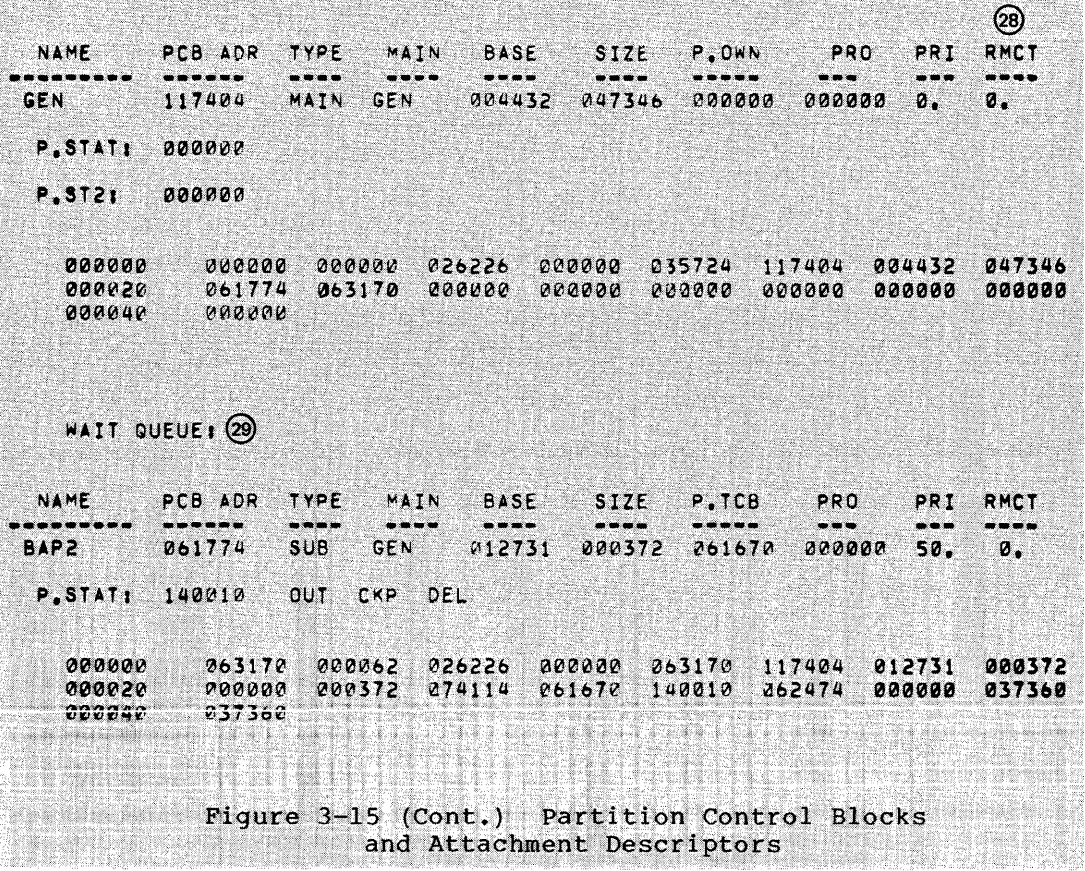


Figure 3-15 (Cont.) Partition Control Blocks and Attachment Descriptors

3.2.6 Common Block Directory

CDA lists partition information, status words, and PCBs for each installed, named common region. The listing in Figure 3-16 shows a common block directory entry. The following list describes the items in Figure 3-16.

- | Item | Description |
|------|---|
| 1. | Name of the installed common region partition |
| 2. | Address of Partition Control Block (PCB) |
| 3. | Type of partition |
| 4. | Name of the main partition |
| 5. | Physical base address of partition |
| 6. | Size of partition in 32. word blocks |
| 7. | Owning UIC of the common region |
| 8. | Partition protection word |

ANALYSIS LISTINGS

9. Resident mapped task count
10. Partition status words (refer to Section 3.2.4)
11. Octal dump of Partition Control Block
12. Address of PCB of the common task image file
13. Address of Unit Control Block of the device on which the common resides
14. Starting logical block number (LBN) of the common task image file
15. This word always contains a 0.

RSX-11M-PLUS CRASH DUMP ANALYZER V01 21-FEB-79 14:03 PAGE 75
COMMON BLOCK DIRECTORY

①	②	③	④	⑤	⑥	⑦	⑧	⑨	
NAME	PCB ADR	TYPE	MAIN	BASE	SIZE	P.OWN	PRO	PRI	RMCT
BASIC2	043254	SUB	GEN	017747	000400	001454	000000	0.	0.
P.STAT:	000200	COM	} ⑩						
P.ST2:	000006	APR							
									} ⑪
000000	000000	000000	006273	034330	040370	117404	017747	000400	
000020	053550	000000	045240	001454	000200	000006	000000	000000	

COMMON TASK IMAGE FILE PCB

⑫	⑬	⑭	⑮
PCB ADR	P.UCB	P.LBN	P.REL
045240	035662	000001,023653	000000

NAME	PCB ADR	TYPE	MAIN	BASE	SIZE	P.OWN	PRO	PRI	RMCT
FCSSUP	053550	SUB	GEN	000000	000212	000401	000000	0.	0.
P.STAT:	100200	OUT COM							
P.ST2:	000000								
000000	000000	000400	023013	075030	000000	117404	000000	000212	
000020	047304	000212	040114	000401	100200	000000	000000	000000	
000040	053606								

COMMON TASK IMAGE FILE PCB

PCB ADR	P.UCB	P.LBN	P.REL
040114	035662	000002,001071	000000

Figure 3-16 Common Block Directory

ANALYSIS LISTINGS

3.2.7 Device Information

CDA lists information on all devices known to the system. The listing in Figure 3-17 shows a typical terminal device listing with an I/O packet. The Terminal Status Words (items 15, 16, and 17) appear only in listings for terminal devices. The codes given for Items 15, 16, and 17 apply only to the full duplex terminal driver. The section labeled I/O Request Packets appears only for devices that have an I/O request in progress or an I/O request queued at the time of the system crash. The following list describes the items in Figure 3-17.

Item	Description
1.	Device name
2.	Address of offset 0 in Unit Control Block (UCB)
3.	Address of offset 0 in Device Control Block (DCB)
4.	Address of offset 0 in Status Control Block (SCB)
5.	Device to which unit is redirected
6.	Name of Ancillary Control Processor (ACP)
7.	Name of attached task
8.	Pointer to the Unit Control Block (UCB) name of owning terminal
9.	User Identification Code (UIC) used to log onto the system
10.	Unit status byte. The 3-letter codes have the following meanings: BSY - unit is busy -MNT - unit is not mounted FOR - unit is mounted as a foreign volume MDM - unit is marked for dismount PWF - powerfail occurred WCK - write check enabled SPU - unit is spinning up VV - volume is valid
11.	Unit status extension byte. The 3-letter codes have the following meanings: OFL - unit off line -RED - unit is not redirectable PUB - unit is public device UMD - unit attached for diagnostics PDF - privileged diagnostic functions only

ANALYSIS LISTINGS

12. Control Processing flags. The 3-letter codes have the following meanings:

- ALG - byte alignment not allowed
- NPR - device is a NPR device
- QUE - call driver before queuing
- PWF - always call driver at power fail entry point
- ATT - call driver on attach/detach
- KIL - always call driver at I/O kill

13. First device characteristics word. The 3-letter codes have the following meanings:

- REC - record-oriented device
- CCL - carriage control device
- TTY - terminal device
- DIR - file-structured device
- SDI - single directory device
- SQD - sequential device
- MSD - mass storage device
- EXT - unit on extended 22-bit Unibus controller
- UMD - user-mode diagnostics supported
- MBC - MASSbus device
- SWL - unit software write locked
- ISP - input spooled device
- OSP - output spooled device
- PSE - pseudo device
- COM - device is mountable as COM channel
- F11 - device is mountable as Files-11 device
- MNT - device is mountable

14. Second device characteristics word. The 3-letter codes have the following meanings:

- DH1 - unit is a multiplexer
- DJ1 - unit is a DJ11
- RMT - unit is remote
- HFF - unit handles hardware form feeds
- NEC - solicited input not echoed

ANALYSIS LISTINGS

CRT - unit is a CRT
ESC - unit generates escape sequences
-LOG - user not logged on terminal
SLV - unit is a slave terminal
DZ1 - unit is a DZ11
HLD - terminal is in hold screen mode
AT. - MCR command AT. is being processed
PRV - unit is privileged terminal
L3S - unit is a LA30S terminal
VT5 - unit is a VT05B terminal
LWC - lowercase to uppercase conversion

15. Terminal status word. The codes have the following meaning:

RST - read with special terminators in progress
RUB - rubout sequence (non-CRT) in progress
ESC - escape sequence in progress
RAL - read pass all in progress
RNE - echo suppressed
CTO - output disabled
OBY - output busy
IBY - input busy
BEL - bell pending
DPR - defer processing of character in buffer
DEC - defer echo of character in buffer
DSI - input processing disabled
CTS - output stopped by CTRL-S
USI - unsolicited input in progress
OBF - buffered output in progress
IBF - buffered input in progress

ANALYSIS LISTINGS

16. Second terminal status word. The codes have the following meanings:

ACR - wrap-around required
CR - trailing carriage return required on output
BRQ - break-through write is queued
WRA - control for wraparound
SRQ - special request is queued
WRB - low bit in 52-WRA bit pattern
ORQ - output request is queued
IRQ - input request is queued
HFL - horizontal fill required
VFL - vertical fill required
HHT - hardware horizontal tab is present
HFF - hardware form-feed is present
FLF - force line feed before next echo
FDX - line is full duplex mode

17. Fourth terminal status word. The codes have the following meanings:

RAL - terminal is in read-pass-all mode
WES - task waiting for escape sequence
RPO - read with prompt output in progress
TAB - type-ahead buffer allocation requested
8BC - pass eight bits on input
ABD - autobaud speed detection enabled
RCU - restore cursor
ABP - autobaud speed detection in progress
WAL - terminal is in write-pass-all mode
VER - last character in type-ahead buffer has a parity error
BCC - last character in type-ahead buffer has a framing error

ANALYSIS LISTINGS

DAO - last character in type-ahead buffer has a data overrun error

PCU - position cursor

NOTE

On RSX-11M systems that use the half duplex terminal driver, CDA dumps two terminal status words.

UNIT CONTROL BLOCK

18. Octal dump of Unit Control Block, including negative offsets, and octal dump of Unit Control Block Extension if a UCB extension is present

DEVICE CONTROL BLOCK

19. Octal dump of Device Control Block

STATUS CONTROL BLOCK

20. Octal dump of Status Control Block

I/O REQUEST PACKETS

21. Address of the first word of the I/O packet
22. The name of the task requesting I/O
23. The priority of the task requesting I/O
24. Event flag number used to signal I/O completion
25. Logical unit number used by requesting task

NOTE

If the task was checkpointed while the packet was queued, this number may not be correct. If the address in I.LN2 is within the task header, the logical unit number is correct.

26. I/O function codes (for detailed information on the legal I/O function codes for each device, refer to the RSX-11M/M-PLUS I/O Drivers Reference Manual)
27. Status of the I/O request - current or queued
28. Octal dump of I/O request packet in offset mode
29. I.LN2 - pointer to the second word of the LUN

ANALYSIS LISTINGS

RSX-11M CRASH DUMP ANALYZER V4.0 21-MAY-81 15:13 PAGE 110
 DEVICE INFORMATION

TT11:

UCB ADR	DCB ADR	SCB ADR	REDIRECT	ACP	ATT	OWNER	LOGIN	UIC
-----	-----	-----	-----	---	---	-----	-----	-----
040474	037630	044266			...	MAI	NONE	[7,37]

U.STS:

U.ST2:

U.CTL: QUE PWF ATT KIL

U.CW1: TTY CCL REC

U.CW2: DH1 CRT PRV LWC

U.TSTA: IBY IBF

U.TSTA+2: ACR ORQ IRQ HHT FLF

U.TSTA+4: TAB

UNIT CONTROL BLOCK:

040466	000000	003437	000000	037630	040474	000474	000010	000007
040506	102011	000335	000120	044266	056604	145100	100200	050301
040526	000100	141730	000030	000001	013400	003437	000015	000004
040546	000000	000000	000000					

UNIT CONTROL BLOCK EXTENSION:

145100	075670	146730	146734	000044	000054	146730	000000	000000
145120	127147	000001	146734	146470	000000	000000	002400	000022
145140	000000	013400	000000	023531				

DEVICE CONTROL BLOCK:

037630	044434	037674	052124	030001	000060	121274	163177	000130
037650	160000	000000	000007	000000	000001	000006	114670	

STATUS CONTROL BLOCK:

044260	100200	000011	000004	000000	044266	034240	001000	000000
044300	160020	067454	031000	170500	000000	000000	001200	000000
044320	044316	035240	001000	000002	160040			

I/O REQUEST PACKETS:

PACKET ADR	REQUESTOR	PRI	EFN	LUN	FUNCTION CODE	STATUS
-----	-----	---	---	---	-----	-----
075670	...	MAI	65.	32.	5.	IO,RLB INPUT
000000	000000	020101	056604	074354	040474	001000 057220 017645
000020	140020	000000	000572	140040	000120	100000 000000 000056
000040	000000	075624				

Figure 3-17 Device Information and I/O Packet (Truncated)

ANALYSIS LISTINGS

3.2.8 System Task Directory

CDA scans the System Task Directory and outputs the information contained in Figure 3-18. The information in this format is identical to the first 17 items described in Figure 3-11 of this manual.

RSX-11M CRASH DUMP ANALYZER V3.2 21-MAY-79 15:15 PAGE 31
SYSTEM TASK DIRECTORY

. LDR.

TCB ADDRESS = 041572 PAR = LDR PCB ADDRESS = 041536
LOAD ADDRESS = 00000000 LOAD DEVICE = L80 LBN = 00000000
PRI = 248. I/O COUNT = 0. UIC = [1,1] TI = C00
MAX SIZE = 000000 EVENT FLAGS = <1-16> 000001 <17-32> 000000
T.STAT:
T.ST2: -CHK FXD STP
T.ST3: PRV

000000	000000	000370	000000	127414	015754	000000	041604	000000
000020	041610	000001	000000	041304	114564	000000	022020	010000
000040	000370	000000	041354	041536	000000	115264	000000	041646
000060	000000	000000	000000	041656	000000	041662	000000	000000

TKTN

TCB ADDRESS = 114564 PAR = SYSPAR PCB ADDRESS = 117074
LOAD ADDRESS = 00137200 LOAD DEVICE = L80 LBN = 00057410
PRI = 248. I/O COUNT = 0. UIC = [0,0] TI = NONE
MAX SIZE = 000105 EVENT FLAGS = <1-16> 000000 <17-32> 000000
T.STAT: -EXE OUT
T.ST2:
T.ST3: -PMD PRV CAL

000000	000000	000370	000000	077314	053600	000000	114576	000000
000020	114602	000000	000000	000000	116064	100400	000000	050100
000040	000370	057410	041354	117074	000105	000000	000000	000000
000060	114642	000000	000000	000000	114652	000000	114656	000000

Figure 3-18 System Task Directory (Truncated)

ANALYSIS LISTINGS

3.2.9 Pool Dump

As shown in Figure 3-19, CDA prints the system pool in octal, RAD50, and ASCII. On RSX-11M-PLUS systems with secondary pool support, CDA prints a dump of secondary pool with the /SECPOL switch. If a line is repeated more than nine times, CDA prints it once and then prints a message indicating the number of identical lines.

The symbols in Figure 3-19 have the following meanings:

- * indicates that the next word is allocated.
- + indicates that the next word is contained in an unused, preallocated I/O packet (in \$PKAVL free list).

NOTE

\$PKAVL is a list containing fixed-size blocks. The blocks in this list are used for fast allocation, and I.LGTH determines the length of these blocks.

- indicates that the next word is allocated in both \$CRAVL and \$PKAVL (This is an error condition).

NOTE

\$CRAVL is the free pool list head.

ANALYSIS LISTINGS

RSX-11M CRASH DUMP ANALYZER
POOL DUMP

V3.2

21-MAY-79 15:15

PAGE 42

S Y S T E M P O O L

* = NEXT WORD ALLOCATED FIRST FREE BLOCK (\$SCRAVL) = 041760
+ = NEXT WORD IS IN \$PKAVL LIST \$PKAVL = 042120
- = NEXT WORD IS IN \$PKAVL AND ALSO IN \$SCRAVL

```

041674 * 000000 * 042710 * 042164 * 042164 | KFX J8D J8D11 HEtDtD|
041704 * 000400 * 000002 * 003204 * 000407 | FP B AA, FW11 |
041714 * 000007 * 002400 * 002112 * 000401 | G 2 $R FQ11 J |
041724 * 000000 * 000030 * 160000 * 000000 | X 53X 11 ' |
041734 * 177400 * 002347 * 051522 * 030530 | 2 10 MMJ G5211 g RSX1|
041744 * 046461 * 046102 * 032462 * 000000 |LNA LHB HTR 111MBL25 |
041754 * 000000 * 044506 042014 000004 | K.8 J5T D11 FI d |
041764 * 000000 * 000225 * 115764 * 000000 | C/ X8D 11 t |
041774 * 000003 * 117074 * 041764 * 000240 | C YL, J46 D 11 < tC |
042004 * 115264 * 000000 * 000003 * 117074 |X0D C YL,114 < |
042014 042064 000004 + 042264 + 000044 |J6T D J9, 6114D 4DS |
042024 + 000020 + 000000 + 040212 + 001010 | P JMB M 11 |
042034 + 121200 + 002111 + 140000 + 000000 |Z $Q 0.2 11 "I |
042044 + 000020 + 012054 + 001350 + 000000 | P CID RX 11 , h |
042054 + 000553 + 001016 + 000000 + 000000 | IC MF 11k |
042064 042240 000034 115264 007422 |J9H , X0D 0PR11 D 4 |
042074 000000 000000 100000 115306 | TSH X0V11 | F |
042104 042240 000014 000000 000000 |J9H L 11 D |
042114 000003 000011 + 042020 + 000044 | C I J5X 611 DS |
042124 + 000020 + 000000 + 041016 + 000400 | P JV0 FP11 8 |
042134 + 120426 + 001376 + 140026 + 000000 |Y08 SF 0/N 11 1" |
042144 + 001412 + 140047 + 000003 + 000000 | SR 0/1 C 11 ' |
042154 + 000000 + 000000 + 000000 + 041260 | JZ211 0B |
042164 = 000000 = 000001 = 000001 = 000000 | A A 11 |
042174 * 000401 * 000000 * 000000 * 000000 | FQ 11 |
042204 * 000003 * 000000 * 000000 * 000000 | C 11 |
042214 * 002112 * 000401 * 000000 * 000000 | SR FQ 11J |
042224 * 000000 * 000000 * 000000 * 000001 | 11 |
042234 * 000000 * 122022 042330 000024 | ZJ6 K X T11 SXD |
042244 115264 005374 000000 000000 |X0D A0L 114 |
042254 100000 115306 042760 000004 |TSH X0V KGX D11 F DE |
042264 + 042504 + 002114 + 140054 + 000000 |KCL ST 0/6 11DEL , |
042274 + 040212 + 001000 + 120636 + 001400 |JMB L2 Y4N SH11 |
042304 + 140036 + 000000 + 000000 + 141750 |0/V 1M211 |
042314 + 001000 + 000000 + 000040 + 000025 | L2 U11 |
042324 + 000000 + 000020 042550 000154 | P KDH B,11 HE1 |
042334 050061 020105 030066 000415 |L3I EFU G,V F/11PE 60 |
042344 170017 120374 120252 000000 |8PO Y0L Y,J 11 pl * |
042354 000000 120712 000016 000000 | YSR N 11 J1 |
042364 000000 000000 000000 000000 | 11 |
042374 042436 000001 000000 000000 |KBN A 11 E |
042404 123550 000000 000375 000000 |Z1P FM 11h' } |
042414 000000 000000 000000 042500 | KCH11 |
042424 000002 040212 000000 041354 | B JMB J,LI1 |
042434 000000 000001 117074 120000 | A YL, YX 11 < |
042444 130477 041764 000105 000000 |,NO J46 A/ 11?1tCE |
    
```

Figure 3-19 Pool Dump (Truncated)

ANALYSIS LISTINGS

RSX-11M-PLUS CRASH DUMP ANALYZER V2.0 12-NOV-81 13155 PAGE 1
 SECONDARY POOL DUMP

S E C O N D A R Y P O O L

NUMBER OF FREE BYTES = 00037500 FIRST FREE BYTE = 00656700
 LENGTH = 00120000 BYTES
 START ADDRESS = 00625000 ENDING ADDRESS = 00627500

00625000	000000	000101	000000	131574	I	AY	...	11	A	131
00625010	003273	000000	140012	000000	I	ACC	R/B	11		
00625020	140016	002040	000000	000000	I	0/F	ZP	11		
00625030	006314	100000	020000	050000	I	BA6	TSH	ED2	L2	11L
00625040	001101	041072	042334	113634	I	NQ	JW4	K	XJL	11A
00625050	000415	000000	000000	140054	I	F/		0/6	11	
00625060	000010	000000	000000	000000	I	H	B	11		
00625070	000000	000143	000002	000000	I	BS	B	11		c
00625100	000000	140100	000000	140104	I	00P		00T	11	00
00625110	000000	000000	000000	000000	I			11		
00625120	000000	000000	000000	000000	I			11		
00625130	000000	000000	000000	000000	I			11		
00625140	000000	000000	000000	000000	I			11		
00625150	000000	000000	000000	000000	I			11		
00625160	000000	000000	000000	000000	I			11		
00625170	000000	000000	000000	000000	I			11		
00625200	000000	000106	000000	131574	I	A0	...	11	F	131
00625210	003313	000000	140012	000000	I	ACS	R/B	11	K	
00625220	140016	001660	000000	000000	I	0/F	WX	11		00
00625230	006651	100000	020000	050000	I	BG0	TSH	ED2	L2	11)
00625240	000506	002346	042334	113634	I	HF	1N	K	XJL	11F
00625250	000164	000000	000000	140054	I	B6		0/6	11	t
00625260	000010	000000	000000	000000	I	H	B	11		
00625270	000000	000162	000002	000000	I	B4	B	11		r
00625300	000000	140100	000000	140104	I	00P		00T	11	00
00625310	000000	000000	000000	000000	I			11		
00625320	000000	000000	000000	000000	I			11		
00625330	000000	000000	000000	000000	I			11		
00625340	000000	000000	000000	000000	I			11		
00625350	000000	000000	000000	000000	I			11		
00625360	000000	000000	000000	000000	I			11		
00625370	000000	000000	000000	000000	I			11		
00625400	000000	141504	141510	000044	I	11.	112	611		DCHCS
00625410	000120	141504	000000	000000	I	B	11.			11P DC
00625420	022126	000000	000000	142514	I	E2V		1V.	11VS	LE
00625430	000000	000000	000400	000072	I			FP	AR	11
00625440	000000	022126	000000	007517	I	E2V		LSW	11	VS
00625450	053000	015563	071517	047433	I	M0P	D0S	R09	LZK	11
00625460	047563	047563	047560	047560	I	L.S	L.S	L.P	L.P	11
00625470	047520	077560	077577	077577	I	LSX	TOX	T09	T09	11P0p
00625500	077577	077577	077564	077577	I	T09	T09	T0.	T09	11
00625510	077541	077577	077577	077577	I	T0I	T09	T09	T09	11a
00625520	077577	077577	077577	077577	I	T09	T09	T09	T09	11
00625530	077577	077577	077577	077577	I	T09	T09	T09	T09	11

Figure 3-19 (Cont.) Pool Dump (Truncated)

ANALYSIS LISTINGS

3.2.10 Task Dump

CDA prints all or a portion of the task's virtual address space if the /TASK switch is specified. Figure 3-20 and the following list illustrate this output.

Item	Description
1.	Task name
2.	Address of the first word of the Task Control Block for the task
3.	Address of the first word of the task's header

WINDOW BLOCKS

4. Name of the partition to which the task is mapped
5. Task virtual address limits
6. Address of the attachment descriptor
7. Size of window in 32-word blocks
8. Offset to memory region within partition in 32-word blocks
9. First Page Description Register used to map the task
10. Number of Page Description Registers used to map task
11. Contents of the last Page Description Register used to map the task
12. Task virtual address limits
13. Physical starting address of the memory region being dumped
14. Dump of the data within the window, formatted in octal, RAD50, and ASCII

ANALYSIS LISTINGS

RSX-11M CRASH DUMP ANALYZER
TASK DUMP

V3.2

22-MAY-79

13:52

PAGE 1

TASK DUMP OF ...MCR ①

② TCB ADDRESS = 115264 ③ HEADER ADDRESS = 042760

WINDOW BLOCKS:

④ PAR	⑤ VIRT LIMITS	⑥ ATT DESC	⑦ WND SIZE	⑧ OFFSET	⑨ 1ST PDR	⑩ NO.	⑪ LAST PDR
SYSPAR	120000 130477	042000	000105	000000	177612	1	042006

WINDOW #1 -- TASK VIRTUAL LIMITS 120000-130477 ⑫

PHYSICAL STARTING ADDRESS = 00137200 ⑬

120000	120362	000162	040000	115310	1Y08	B4 JIX	X0X11	r r	0H	!
120010	000424	000424	170017	120636	!	F6 F6	8PO Y4N11		p	!!
120020	120362	000000	000000	000000	1Y08		11r			!
120030	000000	000000	000000	000000	!		11			!
120040	000000	000000	043076	000001	!		KIV	All	>F	!
120050	000000	000000	121176	000000	!		Y98	11	"	!
120060	000004	000000	000000	000000	!	D		11		!
120070	000000	043140	000004	041260	!	KJP	D JZ211	'F	0B!	
120100	000000	041400	000000	041400	!	J.2	J.211	C	C!	
120110	000000	041354	000000	000001	!	J.L	All	1B		!
120120	117074	120000	130477	042000	1YL	YX	.NO J5H11	<	?1	D!
120130	000105	000000	000612	042006	!	A/	I4 J5N11E			D!
120140	170000	122360	000000	000000	18P	ZOX		11	pps	!
120150	120426	000070	120472	000000	1Y08	AP	Y14	11	18	!!
120160	000000	000000	000000	000000	!			11		!

[ABOVE LINE REPEATED 10. TIMES]

120310	000000	000000	006001	001010	!		A63	M	11	!
120320	000004	000037	121202	000000	!	D	1 Z B	11	"	!
120330	121634	004130	000000	000001	!	ZGD	AMP	All	#X	!
120340	125512	060100	120515	000000	!	SPJ	OP	Y2M	11J+0	M!
120350	121232	001453	001047	125040	!	Z Z	TK	M1	\$H211	" + ' *!

Figure 3-20 Task Dump (Truncated)

ANALYSIS LISTINGS

3.2.11 Clock Queue

The example in Figure 3-21 shows a clock queue listing. The following list explains the example.

Item	Description
1.	Address of the clock queue entry.
2.	The type of time schedule request. There are six types: Type 0 - mark time request Type 2 - request with periodic rescheduling Type 4 - single-shot task request Type 6 - single-shot internal system subroutine with system subroutine identification Type 10- single-shot internal system subroutine without system subroutine identification Type 12- clear stop bit (shuffler)
3.	Task Control Block address or system subroutine identification.
4.	Task issuing the clock request.
5.	The hour, minute, and second that time request comes due.
6.	This field varies with each type of time schedule request.

For a Mark Time request, the following labels apply:

C.AST - AST address
C.SRC - event flag mask word
C.DST - event flag mask address
Event Flag Number

For a request with periodic rescheduling the labels are:

C.RSI - reschedule internal
C.UIC - scheduling UIC

ANALYSIS LISTINGS

For a single-shot task request the field contains only one label:

C.UIC - scheduling UIC

For a single-shot internal subroutine (both with and without system subroutine identification), the field contains:

C.SUB - subroutine address

C.AR5 - relocation base address (for loadable drivers)

7. Octal dump of clock queue in offset mode.

RSX-11M CRASH DUMP ANALYZER V4.0 21-MAY-81 15:13 PAGE 116
CLOCK QUEUE

```

    ADDRESS = 054210    REQUEST TYPE = 0    TCB = 107134    TASK = TKTN
    TIME REQUEST BECOMES DUE = 09:54:06.8
    C.AST = 000000    C.SRC = 100000    C.DST = 107156    EVENT FLAG = 16.
    000000    057250    010000    107134    011374    000000    000000    100000    107156 }
    ADDRESS = 057250    REQUEST TYPE = 0    TCB = 053510    TASK = PMT...
    TIME REQUEST BECOMES DUE = 09:54:10.2
    C.AST = 124602    C.SRC = 000002    C.DST = 053532    EVENT FLAG = 2.
    000000    046760    001000    053510    011707    000000    124602    000002    053532
    ADDRESS = 046760    REQUEST TYPE = 0    TCB = 053510    TASK = PMT...
    TIME REQUEST BECOMES DUE = 09:54:50.2
    C.AST = 000000    C.SRC = 000004    C.DST = 053532    EVENT FLAG = 3.
    000000    000000    001400    053510    016447    000000    000000    000004    053532
  
```

Figure 3-21 Clock Queue

ANALYSIS LISTINGS

3.2.12 Controller Information

Figure 3-22 shows the information associated with a device controller. This information appears only in crash dumps of RSX-11M-PLUS systems. The following list explains the items in Figure 3-22.

Item	Description
1.	Name of the device controller
2.	Address of the Controller Table (CTB)
3.	Address of the DCB for this device
4.	CTB status byte. The following is a list of 3-letter status codes that may appear in this byte: CLK - there is a clock block at the top of the CTB MDC - this is a multidriver CTB CBL - the clock block is linked into the clock queue CIN - the controller uses the common interrupt dispatch table NET - this is a DECnet device
5.	Octal dump of the CTB
6.	Common Interrupt Address
7.	DCB for each device interfaced by this controller
8.	Name of each device interfaced by this controller
9.	Address of the Controller Request Block (KRB)
10.	Controller status. The following is a list of possible status values and their meanings: OFL - controller is off line MOF - controller is marked for off line UOP - controller supports overlapped operations MBC - device is a MASSbus controller SDX - seek operations allowed during data transfers POE - parallel operations enabled UCB - UCB table present DIP - data transfer in progress PDF - privileged diagnostic functions only
11.	Octal dump of Controller Request Block (KRB) in one or two parts

ANALYSIS LISTINGS

RSX-11M-PLUS CRASH DUMP ANALYZER V01 21-FEB-79 15:08 PAGE 149
 CONTROLLER INFORMATION

RH (1)

 (2) CTB ADDRESS = 020454 (3) L.DCB = 022020
 (4) L.STS: MDC CIN
 CONTROLLER TABLE BLOCK

020454 022200 044122 022020 005004 022044 022102 022134 022160 } (5)

DEVICES INTERFACED BY THIS CONTROLLER
 COMMON INTERRUPT ADDRESS = 017526 (6)

(7) DCB (8) DEVICE NAME

 020474 DB
 021142 DR
 021410 DS
 021616 MM

KRB ADDRESS = 022044 (9)
 K.STS: SDX UOP MBC POE UCB DIP (10)

022026 021410 021616 000000 177777 025640 000400 000374 176700
 022046 000016 000003 020534 021112 021112 000050 020534 020602
 022066 020650 020716 177777 015240
 022046 000016 000003 020534 021112 021112 000050 020534 020602
 022066 020650 020716 } (11)

KRB ADDRESS = 022102
 K.STS: SDX UOP MBC POE UCB

022064 020602 020650 020716 177777 015240 000002 000174 176300
 022104 000016 000001 000000 000000 022112 000050 021202 021252
 022124 177777 020640 000004 000030
 022104 000016 000001 000000 000000 022112 000050 021202 021252

KRB ADDRESS = 022134
 K.STS: SDX MBC

022116 000050 021202 021252 177777 020640 000004 000030 172040
 022136 000016 000001 021516 000000 022144 000030 022640 000006
 022156 000030 172440 000016 000000
 022136 000016 000001 021516 000000 022144 000030 022640 000006

KRB ADDRESS = 022160
 K.STS: SDX MBC

022142 021516 000000 022144 000030 022640 000006 000030 172440
 022162 000016 000000 000000 000000 022170 000034 004270 022454
 022202 045504 022212 000001 022372
 022162 000016 000000 000000 000000 022170 000034 004270

Figure 3-22 Controller Information

3.2.13 Kernel Data Space

Figure 3-23 shows a dump of kernel data space from the specified starting virtual address to the specified ending virtual address.

3.2.14 Kernel Instruction Space

Figure 3-24 shows a dump of kernel instruction space from the specified starting virtual address to the specified ending virtual address.

3.2.15 Task Data Space

Figure 3-25 shows a dump of task data space. This dump occurs only on RSX-11M-PLUS systems.

3.2.16 Task Instruction Space

Figure 3-26 shows a dump of task instruction space. This dump occurs only on RSX-11M-PLUS systems.

ANALYSIS LISTINGS

RSX-11M-PLUS CRASH DUMP ANALYZER V01 16-MAY-79 12:51 PAGE 6
 KERNEL DATA SPACE DUMP

VIRTUAL ADDRESS: 001000 PHYSICAL ADDRESS: 00001000

001000 000000 000000 000000 000000 | | |

[ABOVE LINE REPEATED 28. TIMES]

```

001350 000000 000000 020422 000000 | EKZ | | |
001360 177400 000000 000000 020416 | 2 | EKV | | |
001370 005015 025052 042452 042530 | AXM F/4 KBZ KC2 | ***EXE |
001400 020103 040520 044522 054524 | EFS JR K/J NK. | IC PARITY |
001410 042440 051122 051117 051440 | KBP MF4 MF1 ML | IC ERROR S |
001420 047524 025120 025052 005015 | LS, F02 F/4 AXM | IITOP*** |
001430 000012 177777 172020 003110 | J 80 9B A H | | TH |
001440 160377 177401 000366 000000 | 599 2A FF | | v |
001450 000001 001450 001450 001450 | A TH TH TH | | ( ( ( |
001460 001450 001450 001450 001450 | TH TH TH TH | | ( ( ( |
001470 001450 001450 001450 001450 | TH TH TH TH | | ( ( ( |
001500 001450 001450 001450 001450 | TH TH TH TH | | ( ( ( |
001520 177746 177750 177752 177766 | 70 72 74 8F | | f h j v |
001530 000000 000000 000000 000000 | | | | |
001540 000000 000000 050044 000000 | | L26 | | SP |
001550 120030 000000 000000 000001 | YXX | | | |
001560 000001 042220 005015 041412 | A J82 AXM J/B | | D C |
001570 040522 044123 026440 020055 | JRB KV5 GH2 EE7 | | IRASH -- |
001600 047503 052116 053440 052111 | L3K MSV M7X MSQ | | IICONT WIT |
001610 020110 041523 040522 041524 | EFX J05 JRB J06 | | IIR SCRATC |
001620 020110 042515 044504 020101 | EFX KCU K.6 EFQ | | IIR MEDIA |
001630 047117 042040 030113 005015 | LUG J6 G/C AXM | | IION DK0 |
001640 000012 005015 051103 051501 | J AXM MFS ML3 | | IIR CRAS |
001650 020110 026455 044440 020117 | EFX GIE K. EF | | IIR -- IO |
001660 051105 047522 020122 047117 | MFU L8Z EF4 LUG | | IIR ERROR ON |
001670 041440 040522 044123 042040 | J/X JRB KV5 J6 | | IIR CRASH D |
001700 046525 020120 042504 044526 | LN7 EF2 KCL K/N | | IIR IUMP DEV |
001710 042503 006400 041412 040522 | KCK BCH J/B JRB | | IIR ICE CRA |
001720 044123 026440 020055 040523 | KV5 GH2 EE7 JRC | | IIR SH -- SA |
001730 044516 054524 052040 046511 | K/F NK, MRP LNY | | IIR INITY TIM |
001740 051105 042440 050130 051111 | MFU KBP L4H MFY | | IIR EXPIR |
001750 042105 047440 020116 051120 | J67 LZP EF0 MF2 | | IIR IED ON PRI |
001760 041517 051505 047523 020122 | J01 ML7 L88 EF4 | | IIR ICESSOR |
001770 050103 006400 041412 040522 | L38 BCH J/B JRB | | IIR ICP CRA |
002000 044123 026440 000003 116301 | KV5 GH2 C YC | | IIR SH - A |
    
```

[END OF ANALYSIS OUTPUT]

Figure 3-23 Kernel Data Space

ANALYSIS LISTINGS

VIRTUAL ADDRESS: 001000 PHYSICAL ADDRESS: 00001000

001000	000000	000000	000000	000000	1			11	1
[ABOVE LINE REPEATED 28. TIMES]									
001350	000000	000000	020422	000000	1	EKZ	11	1	1
001360	177400	000000	000000	020416	1	2	EKV11		11
001370	005015	025052	042452	042530	1	AXM F/4 KBZ	KC211	***EXE1	
001400	020103	040520	044522	054524	1	EFS JR K/J	NK.11C	PARITY1	
001410	042440	051122	051117	051440	1	KBP MF4 MF1	ML 11	ERROR S1	
001420	047524	025120	025052	005015	1	LS. F02 F/4	AXM11TOP***		1
001430	000012	177777	172020	003110	1	J 80 9B	A H11	CH 1	
001440	160377	177401	000366	000000	1	599 2A FF	11	v 1	
001450	000001	001450	001450	001450	1	A TH TH	TH11	(((1	
001460	001450	001450	001450	001450	1	TH TH TH	TH11	(((1	
001470	001450	001450	001450	001450	1	TH TH TH	TH11	(((1	
001500	001450	001450	001450	001450	1	TH TH TH	TH11	(((1	
001520	177746	177750	177752	177766	1	70 72 74	BF111	h j v 1	
001530	000000	000000	000000	000000	1		11		1
001540	000000	000000	050044	000000	1	L26	11	SP 1	
001550	120030	000000	000000	000001	1	YXX	All		1
001560	000001	042220	005015	041412	1	A J82 AXM	J/B11	D C1	
001570	040522	044123	026440	020055	1	JRB KV5 GH2	EE711	RASH -- 1	
001600	047503	052116	053440	052111	1	LSK MSV M7X	MSQ11	CONT WIT1	
001610	020110	041523	040522	041524	1	EFX J05 JRB	J0611	H SCRATC1	
001620	020110	042515	044504	020101	1	EFX KCU K.6	EFQ11	H MEDIA 1	
001630	047117	042040	030113	005015	1	LUG J6 G/C	AXM11	ON DK0 1	
001640	000012	005015	051103	051501	1	J AXM MFS	ML311	CRAS1	
001650	020110	026455	044440	020117	1	EFX GIE K.	EF111	H -- IO 1	
001660	051105	047522	020122	047117	1	MFU L3Z EF4	LUG11	ERROR ON1	
001670	041440	040522	044123	042040	1	J/X JRB KV5	J6 11	CRASH D1	
001700	046525	020120	042504	044526	1	LN7 EF2 KCL	K/N11	UMP DEVI1	
001710	042503	006400	041412	040522	1	KCK BCH J/B	JRB11	ICE CRA1	
001720	044123	026440	020055	040523	1	KV5 GH2 EE7	JRC11	ISH -- SA1	
001730	044516	054524	052040	046511	1	K/F NK, MRP	LN11	INITY TIM1	
001740	051105	042440	050130	051111	1	MFU KBP L4H	MFY11	IER EXPIR1	
001750	042105	047440	020116	051120	1	J67 LZP EF0	MF211	ED ON PR1	
001760	041517	051505	047523	020122	1	J01 ML7 L3S	EF411	CESSOR 1	
001770	050103	006400	041412	040522	1	L3S BCH J/B	JRB11	ICP CRA1	
002000	044123	026440	000003	116301	1	KV5 GH2 C	YCI11	ISH - A 1	

Figure 3-24 Kernel Instruction Space

ANALYSIS LISTINGS

TASK DUMP OF LITT27

DATA SPACE

TCB ADDRESS = 042204 HEADER ADDRESS = 011323

WINDOW BLOCKS:

PAR	VIRT LIMITS	ATT DESC	WND SIZE	OFFSET	1ST PDR	NO.	LAST PDR
GEN	000000 002077 160000 160177	040030 041040	000021 000002	000015 000010	177620 177636	1 1	010006 000402

WINDOW #2 == TASK VIRTUAL LIMITS 000000-002077

PHYSICAL STARTING ADDRESS = 01134000

000000	000000	000252	140313	160400	!	DJ 035 6	11	* K0 al
000010	003471	003471	170017	160000	!	IAFI AFI 8PO	53X119 9	p '1
000020	001334	000000	000000	000000	!	RL	11\	!
000030	000000	000000	000000	000000	!		11	!
000040	000000	140252	140126	000001	!	03B 008	All	*0V0 !
000050	000000	000000	000000	000000	!		11	!
000060	000000	000000	000000	000000	!		11	!
000070	000000	140250	000006	022520	!	03 F E0211	(0	Px1
000100	000000	022520	000000	022520	!	E02	E0211	PX Px1
000110	000000	022520	000000	037462	!	E02	JDR11	PX 271
000120	000000	037506	000000	000004	!	JDB	D11	F? !
000130	107544	000000	001077	000000	!	1V7,	NO	11d ? !
000140	000011	000004	000600	004006	!	I D IX	AKN11	!
000150	107544	000000	002077	000000	!	1V7,	SG	11d ? !
000160	000021	000021	000620	010006	!	Q Q J	BVV11	!
000170	040144	160000	160577	000000	!	IJLD 53X	6CG	11d0 ' a !
000200	000006	000000	000616	002402	!	F	I8 2B11	!
000210	040144	160000	160177	000000	!	IJLD 53X	561	11d0 ' ' !
000220	000002	000010	000636	000402	!	B H JN	FR11	!
000230	017747	000004	000000	160400	!	EDG D	6 11g	al
000240	140313	046174	131574	000000	!	1035 LIT ...	11K0 L13	!
000250	000000	000000	000000	000000	!		11	!

[ABOVE LINE REPEATED 63, TIMES]

⋮

Figure 3-25 Task Data Space

ANALYSIS LISTINGS

TASK DUMP OF ...LDR

INSTRUCTION SPACE

TCB ADDRESS = 117300 HEADER ADDRESS = 117130

WINDOW BLOCKS:

PAR	VIRT LIMITS	ATT DESC	WND SIZE	OFFSET	1ST PDR	NO.	LAST PDR
SYSPAR	120000 123777	117114	000040	000000	177612	1	017406

WINDOW #1 -- TASK VIRTUAL LIMITS 120000-123777

PHYSICAL STARTING ADDRESS = 00530100

120000	000000	000146	140664	140630	!	BV 09, 09 !!	+ 4A A!
120010	000424	100424	170017	120226	!	F6 F6 8PO YS0!!	p !
120020	120166	000000	000000	000000	!	YZ8	!!v !
120030	000000	000000	000000	000000	!		!! !
120040	000000	000000	000102	000000	!	AZ	!! B !
120050	000000	000000	000000	000000	!		!! !
120060	000000	000000	000000	000000	!		!! !
120070	000000	000144	000001	037602	!	BT A JFR!!	d ?!
120100	000000	000001	117610	120000	!	A YU YX !!	!
120110	123777	000000	000040	000000	!	Z5G 2 !!	' !
120120	000612	017406	000143	000003	!	I4 D8V BS C!!	c !
120130	000000	140630	140664	045662	!	09 09, LDR!!	A4A2K!
120140	131574	000000	000000	000000	!	...	!!13 !
120150	000000	000000	000000	140630	!		09 !! A!
120160	000002	120166	102700	006003	!	B YZ8 UP A65!!	v * !
120170	001000	000001	000001	120214	!	L2 A A YST!!	!
120200	000000	140000	101700	000000	!	0.2 UCH !!	00 !
120210	000000	000000	047660	000000	!	L0 - !!	00 !
120220	000000	000000	031401	104376	!	HFQ U60!!	3~ !
120230	120454	005067	100570	016700	!	IY1T AYO T.X D0P!!	,17 x 0 !
120240	061024	062700	000012	004767	!	10S, PKH J AW1!!	b0e w !
:							
:							
:							

Figure 3-26 Task Instruction Space

CHAPTER 4
INTERPRETING A CRASH DUMP LISTING

This chapter introduces basic concepts that are helpful in analyzing a CDA output listing to determine the cause of a crash. The chapter is not intended as a complete guide to interpreting a crash dump.

4.1 HELPFUL CONCEPTS

Two concepts are helpful in using CDA output listings to determine the cause of a system failure:

- Determining what was mapped at the time of the crash
- Interpreting stack depth and the kernel stack

4.1.1 Determining What Was Mapped

To determine what was mapped at the time of the crash, look at the dump of the Kernel Page Address Registers on the first page of the CDA listing (I-space registers on RSX-11M systems, both I- and D-space registers on RSX-11M-PLUS systems). This listing, titled Volatile Registers, is shown in Figure 3-1.

The contents of the sixth and seventh words (shown in Figure 4-1) of this dump are the block numbers of the task or driver that was mapped at the time of the crash. You can find out what occupied that portion of memory from the memory map on the first page of partition information in the CDA output listing under the heading BASE (for base address of the mapped partition.)

This information should be used along with the current task at the time of the crash, which is listed on page three of the CDA listing.

K E R N E L			
I S P A C E		D S P A C E	
PDR	PAR	PDR	PAR
077506	000000	000000	000000
077506	000200	000000	000000
077506	000400	000000	000000
077406	000600	000000	000000
077506	001000	000000	000000
077406	001372	000000	000000
077406	002077	000000	000000
077506	007600	000000	000000

Figure 4-1 Kernel Page Address Registers

4.1.2 Interpreting the Kernel Stack

\$STKDP, appearing on the first page of system common information, is the stack depth indicator. It indicates which state the system was in at the time of the crash:

```
User state          $STKDP = 1
System state       $STKDP = 0
Interrupt state    $STKDP = -1,-2,-3,-4,...
```

Two things can decrement stack depth:

- SST - a synchronous system trap:
 - a directive
 - switch stack
 - trap instruction
 - other SST
- INTSV - an interrupt save

When an SST occurs, the following information from the current task is pushed onto the stack:

```
PS
PC
R5 - on mapped systems only
R4 - on mapped systems only
R3
R2
R1
R0
```

Address of return to DIRSV

SST specific information

When an interrupt occurs, the following are pushed onto the stack:

```
PS
PC
```

If a call to INTSV is then issued, the following are pushed onto the stack after the PC:

```
R5
R4
```

Address of return to INTSV

Then \$STKDP is decremented. If \$STKDP is 0 and the currently mapped driver issues a call to FORK, the following items are pushed onto the stack:

```
R3 - which replaces the return to INTSV
R2
R1
R0
```

Return to FORK

If the driver issues a call to FORK when \$STKDP is not 0, the registers are saved in a fork block, which is queued for later execution.

INTERPRETING A CRASH DUMP LISTING

Since interrupts can still occur, more of both basic types of stack contents (interrupt or INTSV) can be pushed. If an SST occurs in the EXEC, SST information will be pushed onto the stack, possibly followed by a system crash.

This information, along with the kernel stack pointer SP(K), which appears on the first page of the CDA listing, can be used to interpret the contents of the dump of the kernel stack.

The PC and PS before the crash appear on the first page of the CDA listing, and may be used along with the PS and PC on the stack to help locate the cause of the crash.

(See the RSX-11M or RSX-11M-PLUS Guide to Writing an I/O Driver for further description of the contents of the kernel stack.)

APPENDIX A
CDA MESSAGES

CDA displays a message on your terminal when it detects one of the error conditions described below. These messages reflect operational conditions. Do not confuse these messages with the diagnostic analysis messages that CDA generates during the analysis and prints in the analysis listing.

Note that not all of the messages listed below terminate the analysis. Some provide information, while others are nonfatal errors.

CDA -- ACP out of memory or not in execution

Type: Analysis Diagnostic

Explanation: The partition containing the File Control Block (FCB) for the current logical unit number (LUN) was not in memory.

CDA -- Address out of range

Type: Fatal

Explanation: CDA was unable to read a block from the crash-input file. Possible causes for this are:

1. A device failure
2. A bad block on the volume
3. The crashed system had a corrupted data base
4. The binary file does not contain all of the crashed system's memory

CDA -- Analysis output must be directed to an explicit device or file

Type: Fatal

Explanation: CDA requires an explicit output file specification. There are no default output file names.

CDA -- Analysis terminated after n. pages

Type: Informational

CDA MESSAGES

Explanation: CDA terminated the analysis after generating n pages of analysis output. If you have not specified the /LIMIT switch in the CDA command string, this message indicates that CDA has generated more than 300. pages of output.

CDA -- Command I/O error

Type: Fatal

Explanation: The system returned an error when CDA attempted to read a command line.

CDA -- Command line syntax error

Type: Fatal

Explanation: CDA detected an error in the syntax of a CDA command line. CDA will point to the beginning of the error within the command line.

CDA -- Crash dump must be input from an explicit device or file

Type: Fatal

Explanation: The crash dump input file specification must be explicit. There is no default file specification for the crash dump input.

CDA -- Device driver missing

Type: Fatal

Explanation: You have not loaded the driver for the crash dump input device.

CDA -- Dump aborted - kernel PARs clobbered

Type: Fatal

Explanation: This message appears on mapped systems only. It indicates that the values contained in the kernel PARs are invalid. To restart the analysis, you must specify the /KMR switch. This switch forces CDA to use standard mapping values when converting kernel virtual addresses to physical memory addresses.

CDA -- Error reading crash dump

Type: Fatal

Explanation: The system returned an error when CDA attempted to read the crash dump file. This could be caused by:

1. A device failure
2. A bad block on the volume
3. On RSX-11M-PLUS systems, the device might not be mounted foreign

CDA MESSAGES

CDA -- Error reading file filename

Type: Fatal

Explanation: The system returned an error when CDA attempted to read the crash dump file. This could be caused by:

1. A device failure
2. A bad block on the volume

CDA -- Error reading symbol file filename

Type: Fatal

Explanation: The system returned an error when CDA attempted to read the symbol table file indicated. Possible causes for the error are:

1. A device failure
2. A bad block on the volume
3. The specified symbol file was not an STB file

CDA -- Errors detected: n.

Type: Informational

Explanation: CDA has detected n analysis errors during the run.

CDA -- Error writing analysis file

Type: Fatal

Explanation: The system returned an error when CDA attempted to write a line into the analysis listing file. This could be caused by:

1. A full volume
2. A problem with the device
3. A bad block on the volume

CDA -- Error writing dump file filename

Type: Fatal

Explanation: The system returned an error when CDA attempted to write into the binary output file. This condition could be caused by:

1. A full volume
2. A problem with the device
3. A bad block on the volume

CDA MESSAGES

CDA -- Exiting due to illegal trap -- snapshot dump being attempted

Type: Fatal

Explanation: CDA has aborted after detecting an odd address or some other type of fault. If PMD is installed in the system, the system will generate a snapshot dump. This is an indication of a software problem. You should include any available dumps when you send to DIGITAL your SPRs related to this type of failure.

Also preserve the following until your SPR is answered:

1. From the crashed system:
 - All applicable user task images
 - RSX11M.SYS
 - RSX11M.STB
 - RSXMC.MAC
 - All applicable privileged task images
 - Crash dump volume
2. From the system used for analysis:
 - RSX11M.SYS
 - RSX11M.STB
 - CDA.TSK

CDA -- Failed to assign LUN to input device ddu

Type: Fatal

Explanation: The Assign LUN directive failed when CDA attempted to use it to attach the specified input device before reading the crash dump from the device. The Assign LUN will fail if the device name in the CDA command line is invalid.

CDA -- Failed to extend page buffer - n. pages available

Type: Informational

Explanation: The Extend Task directive failed when CDA attempted to use it to expand the page buffer. This problem will cause the analysis to take longer, but the analysis will continue with a buffer of n pages, each 256 words long.

NOTE

CDA uses the extend task directive to obtain additional buffering space. CDA does not use space allocated by a /INC= qualifier on the INStall command.

CDA MESSAGES

CDA -- Failed to open input file filename

Type: Fatal

Explanation: One of the following conditions exists:

1. Specified device does not exist.
2. The volume is not mounted.
3. A problem exists with the device.
4. Specified UFD does not exist.
5. Specified file does not exist.
6. You do not have read access privileges.

CDA -- Failed to open output file filename

Type: Fatal

Explanation: One of the following conditions exists:

1. Specified device does not exist.
2. The volume is not mounted.
3. A problem exists with the device.
4. Specified UFD does not exist.
5. The volume is full or the device is write-protected.
6. You do not have write access privilege to UFD.

CDA -- Illegal switch

Type: Fatal

Explanation: You have specified an unknown switch or have used a legal switch after the wrong file specification. CDA will point to the error within the command line.

CDA -- Inconsistency in dynamic storage

Type: Informational

Explanation: CDA detected an inconsistency while scanning the pool pointers. This condition could be associated with the crash. However, it may mean that you specified the wrong executive symbol table file.

CDA -- Indirect command syntax error

Type: Fatal

Explanation: The name of the indirect command file (@filename) is syntactically incorrect.

CDA MESSAGES

CDA -- Indirect file open failure

Type: Fatal

Explanation: CDA could not open an indirect command file specified as "@filename" in the CDA command line.

CDA -- Invalid address range

Type: Fatal

Explanation: You specified an address that was not consistent with APR mapping.

CDA -- List count expired

Type: Analysis diagnostic

Explanation: The linked list of data structures has too many entries. The list may be corrupted, or contains a loop.

CDA -- Maximum indirect file depth exceeded

Type: Fatal

Explanation: You have exceeded the maximum allowable number of nested indirect command files. (Only one level of indirection is permitted in CDA.)

CDA -- No input file specified

Type: Fatal

Explanation: You did not supply an input file specification for the crash dump.

CDA -- No output file specified

Type: Fatal

Explanation: You have not specified an output file.

CDA -- Output dump filename must be explicit

Type: Fatal

Explanation: You have not specified an output file.

CDA -- Pool link error found - continuing

Type: Analysis diagnostic

Explanation: CDA detected a link error while scanning the pool free block pointers (\$CRAVL). This condition can be associated with the crash. It can also mean that you specified the wrong Executive symbol table file. If the latter is true, the entire analysis will be meaningless and you should abort CDA.

CDA MESSAGES

CDA -- Premature end of dump input - filename being zero-filled

Type: Informational

Explanation: CDA reached the end of the medium (or-end-of-file mark, if magtape) before the crash dump output file had been completely filled. If you expected the file to be completely filled by the dump, this condition could indicate a problem.

CDA -- Processor n failed to dump its registers

Type: Informational

Explanation: On a multiprocessor system, when the system crashes, each on-line processor is notified by an interrupt. If the processor does not respond to the interrupt (for example, if it halted or is off line), it won't dump its registers into the crash buffer. CDA notes this and prints the informational message.

CDA -- Redirect error (U.RED=0)

Type: Analysis Diagnostic

Explanation: CDA detected an error in the pointer to the UCB of a redirected unit. This condition may be associated with the cause of the crash.

CDA -- Symbol symbolname not defined in symbol file

Type: Fatal

Explanation: CDA did not find a symbol that it required for the analysis in the specified Executive symbol table file. You have probably entered the wrong File name or have mistakenly used the default file name.

CDA -- Symbol file filename has illegal format

Type: Fatal

Explanation: The specified Executive symbol table file has an improper format, probably caused by entry of the wrong file name. However, this message could also indicate a problem with the device or medium on which the file is located.

CDA -- Task 'taskname' not in memory

Type: Analysis Diagnostic

Explanation: The above message can be caused by two conditions:

1. You have requested a dump of a task which does not have an entry in the System Task Directory, or
2. The task has an entry in the System Task Directory, but it is marked out of memory.

You can verify the state of the task by examining a dump of the Task Control Blocks.

CDA MESSAGES

CDA -- Transfer complete - ddu may be unloaded

Type: Informational

Explanation: The transfer of the crash dump to the output file is finished; you may unload the crash dump device. This message occurs only when you have specified a binary file in the output of the command string to CDA.

CDA -- Unknown AST type

Type: Analysis Diagnostic

Explanation: CDA has detected an AST block which is not one of the following valid types of ASTs:

1. Unsolicited character AST
2. Buffered I/O AST
3. Emit status AST
4. Completion AST from:

QIOS\$
MRKT\$
SPWN\$
CNCT\$
CINT\$

5. Specified AST from:

SFPA\$
SRDA\$
SRRAS\$
SPFA\$

CDA -- Unknown get command line error

Type: Fatal

Explanation: An unrecognized error occurred when CDA attempted to read a command line.

CDA -- \$PKVAL link error at n --FWD PTR = n

Type: Analysis diagnostic

Explanation: CDA detected a link error while scanning the pool free packet list \$PKVAL. This condition can be associated with the crash. It can also mean that you specified the wrong executive symbol table file.

APPENDIX B

RSX-11M SYSTEM DATA STRUCTURES AND SYMBOLIC DEFINITIONS

This appendix describes the RSX-11M system macros that supply symbolic offsets for data structures listed in Table B-1.

The data structures are defined by macros in the Executive macro library. To reference any of the data structure offsets from your code, include the macro name in an .MCALL directive and invoke the macro. For example:

```
.MCALL DCBDF$
DCBDF$ ;Define DCB offsets
```

NOTE

All physical offsets and bit definitions are subject to change in future releases of the operating system. Code that accesses system data structures should always use the symbolic offsets rather than the physical offsets.

The first two arguments, <:> and <=>, make all definitions global. If they are left blank, the definitions will be local. The SYSDEF argument causes the variable part of a data structure to be defined.

All of these macros are in the Executive macro library LB:[1,1]EXEMC.MLB. All except ITBDF\$ and MTADF\$ are also in the Executive definition library LB:[1,1]EXELIB.OLB.

Table B-1
Summary of System Data Structure Macros

Macro	Arguments	Data Structures
ABODF\$	<:>, <=>	Task abort and termination notification message codes
CLKDF\$	<:>, <=>	Clock queue control block
DCBDF\$	<:>, <=>	Device Control Block
EPKDF\$	<:>, <=>	Error message block

(continued on next page)

RSX-11M SYSTEM DATA STRUCTURES AND SYMBOLIC DEFINITIONS

Table B-1 (Cont.)
Summary of System Data Structure Macros

Macro	Arguments	Data Structures
F11DF\$	<:,>,<=>,SYSDEF	Files-11 data structures (volume control block, mount list entry, file Control Block, file window block, locked block list node)
HDRDF\$	<:,>,<=>	Task header and window block
HWDDF\$	<:,>,<=>	Hardware register addresses and feature mask definitions
ITBDF\$	<:,>,<=>,SYSDEF	Interrupt transfer block
LCBDF\$	<:,>,<=>	Logical assignment control block
MTADF\$	<:,>,<=>	ANSI magtape data structures (volume set control block)
PCBDF\$	<:,>,<=>,SYSDEF	Partition Control Block and attachment descriptor
PKTDF\$	<:,>,<=>	I/O packet, AST control block, offspring control block, group global event flag control block, and CLI parser block
SCBDF\$	<:,>,<=>,SYSDEF	Status Control Block and UMR assignment block
TCBDF\$	<:,>,<=>,SYSDEF	Task Control Block
UCBDF\$	<:,>,<=>,TTDEF,SYSDEF	Unit Control Block

ABODF\$

```

;
; TASK ABORT CODES
;
; NOTE: S.COAD-S.CFLT ARE ALSO SST VECTOR OFFSETS
;
S.CACT=-4.           ;TASK STILL ACTIVE
S.CEXT=-2.           ;TASK EXITTED NORMALLY
S.COAD=0.            ;ODD ADDRESS AND TRAPS TO 4
S.CSGF=2.            ;SEGMENT FAULT
S.CBPT=4.            ;BREAK POINT OR TRACE TRAP
S.CIOT=6.            ;IOT INSTRUCTION
S.CILI=8.            ;ILLEGAL OR RESERVED INSTRUCTION
S.CEMT=10.           ;NON RSX EMT INSTRUCTION
S.CTRP=12.           ;TRAP INSTRUCTION
S.CFLT=14.           ;11/40 FLOATING POINT EXCEPTION
S.CSST=16.           ;SST ABORT-BAD STACK
S.CAST=18.           ;AST ABORT-BAD STACK
S.CABO=20.           ;ABORT VIA DIRECTIVE
S.CLRF=22.           ;TASK LOAD REQUEST FAILURE
S.CCRF=24.           ;TASK CHECKPOINT READ FAILURE
S.IOMG=26.           ;TASK EXIT WITH OUTSTANDING I/O
S.PRTY=28.           ;TASK MEMORY PARITY ERROR
S.CPMD=30.           ;TASK ABORTED WITH PMD REQUEST
S.CINS=32.           ;TASK INSTALLED IN TWO SYSTEMS

;
; TASK TERMINATION NOTIFICATION MESSAGE CODES
;
T.NDNR=0             ;DEVICE NOT READY
T.NDSE=2             ;DEVICE SELECT ERROR
T.NCWF=4             ;CHECKPOINT WRITE FAILURE
T.NCRE=6             ;CARD READER HARDWARE ERROR
T.NDMO=8.            ;DISMOUNT COMPLETE
T.NUER=10.           ;UNRECOVERABLE ERROR
T.NLDN=12.           ;LINK DOWN (NETWORKS)
T.NLUP=14.           ;LINK UP (NETWORKS)
T.NCFI=16.           ;CHECKPOINT FILE INACTIVE
T.NUDE=18.           ;UNRECOVERABLE DEVICE ERROR
T.NMPE=20.           ;MEMORY PARITY ERROR
T.NKLF=22.           ;UCODE LOADER NOT INSTALLED
T.NDEB=24.           ;TASK HAS NO DEBUGGING AID
T.NRCT=26.           ;REPLACEMENT CONTROL TASK NOT INSTALLED
T.NWBL=28.           ;WRITE BACK CACHING DATA LOST
;UNIT WRITE LOCKED

```

CLKDF\$

CLKDF\$

```

;
; CLOCK QUEUE CONTROL BLOCK OFFSET DEFINITIONS
;
; CLOCK QUEUE CONTROL BLOCK
;
; THERE ARE SIX TYPES OF CLOCK QUEUE CONTROL BLOCKS. EACH CONTROL
; BLOCK HAS THE SAME FORMAT IN THE FIRST FIVE WORDS AND DIFFERS IN
; THE REMAINING THREE.
;
; THE FOLLOWING CONTROL BLOCK TYPES ARE DEFINED:
;
C.MRKT=0           ;MARK TIME REQUEST
C.SCHD=2          ;TASK REQUEST WITH PERIODIC RESCHEDULING
C.SSHT=4          ;SINGLE SHOT TASK REQUEST
C.SYST=6          ;SINGLE SHOT INTERNAL SYSTEM SUBROUTINE (IDENT)
C.SYTK=8.         ;SINGLE SHOT INTERNAL SYSTEM SUBROUTINE (TASK)
C.CSTP=10.        ;CLEAR STOP BIT (CONDITIONALIZED ON SHUFFLING)

;
; CLOCK QUEUE CONTROL BLOCK TYPE INDEPENDENT OFFSET DEFINITIONS
;
      .ASECT
      .=0
000000 C.LNK:  .BLKW  1      ;CLOCK QUEUE THREAD WORD
000002 C.RQT:  .BLKB  1      ;REQUEST TYPE
000003 C.EFN:  .BLKB  1      ;EVENT FLAG NUMBER (MARK TIME ONLY)
000004 C.TCB:  .BLKW  1      ;TCB ADDR OR SYSTEM SUBROUTINE IDENTIFICATION
000006 C.TIM:  .BLKW  2      ;ABSOLUTE TIME WHEN REQUEST COMES DUE

;
; CLOCK QUEUE CONTROL BLOCK-MARK TIME DEPENDENT OFFSET DEFINITIONS
;
      .=C.TIM+4          ;START OF DEPENDENT AREA
000012 C.AST:  .BLKW  1      ;AST ADDRESS
000014 C.SRC:  .BLKW  1      ;FLAG MASK WORD FOR 'BIS' SOURCE
000016 C.DST:  .BLKW  1      ;ADDRESS OF 'BIS' DESTINATION

;
; CLOCK QUEUE CONTROL BLOCK-PERIODIC RESCHEDULING DEPENDENT OFFSET
; DEFINITIONS
;
      .=C.TIM+4          ;START OF DEPENDENT AREA

```

RSX-11M SYSTEM DATA STRUCTURES AND SYMBOLIC DEFINITIONS

CLKDF\$ (Cont.)

```

000012 C.RSI:  .BLKW  2      ;RESCHEDULE INTERVAL IN CLOCK TICKS
000016 C.UIC:  .BLKW  1      ;SCHEDULING UIC

;
; CLOCK QUEUE CONTROL BLOCK-SINGLE SHOT DEPENDENT OFFSET DEFINITIONS
;
.=C.TIM+4      ;START OF DEPENDENT AREA
000012      .BLKW  2      ;TWO UNUSED WORDS
000016      .BLKW  1      ;SCHEDULING UIC

;
; CLOCK QUEUE CONTROL BLOCK-SINGLE SHOT INTERNAL SUBROUTINE OFFSET
; DEFINITIONS
;
; THERE ARE TWO TYPE CODES FOR THIS TYPE OF REQUEST:
;
;     TYPE 6 = SINGLE SHOT INTERNAL SUBROUTINE WITH A 16 BIT VALUE
;             AS AN IDENTIFIER.
;
;     TYPE 8 = SINGLE SHOT INTERNAL SUBROUTINE WITH A TCB ADDRESS
;             AS AN IDENTIFIER.
;
.=C.TIM+4      ;START OF DEPENDENT AREA
000012 C.SUB:  .BLKW  1      ;SUBROUTINE ADDRESS
000014 C.AR5:  .BLKW  1      ;RELOCATION BASE (FOR LOADABLE DRIVERS)
000016      .BLKW  1      ;ONE UNUSED WORD

000020 C.LGTH=.      ;LENGTH OF CLOCK QUEUE CONTROL BLOCK
          .PSECT

```


DCBDF\$

DCBDF\$

```

;
; DEVICE CONTROL BLOCK
;
; THE DEVICE CONTROL BLOCK (DCB) DEFINES GENERIC INFORMATION ABOUT
; A DEVICE TYPE AND THE LOWEST AND HIGHEST UNIT NUMBERS. THERE IS
; AT LEAST ONE DCB FOR EACH DEVICE TYPE IN A SYSTEM. FOR EXAMPLE,
; IF THERE ARE TELETYPES IN A SYSTEM, THEN THERE IS AT LEAST ONE
; DCB WITH THE DEVICE NAME 'TT'. IF PART OF THE TELETYPES WERE
; INTERFACED VIA DL11-A'S AND THE REST VIA A DH11, THEN THERE
; WOULD BE TWO DCB'S. ONE FOR ALL DL11-A INTERFACED TELETYPES,
; AND ONE FOR ALL DH11 INTERFACED TELETYPES.
;
;
      .ASECT
      .=0
000000 D.LNK:  .BLKW  1      ;LINK TO NEXT DCB
000002 D.UCB:  .BLKW  1      ;POINTER TO FIRST UNIT CONTROL BLOCK
000004 D.NAM:  .BLKW  1      ;GENERIC DEVICE NAME
000006 D.UNIT: .BLKB  1      ;LOWEST UNIT NUMBER COVERED BY THIS DCB
000007      .BLKB  1      ;HIGHEST UNIT NUMBER COVERED BY THIS DCB
000010 D.UCBL: .BLKW  1      ;LENGTH OF EACH UNIT CONTROL BLOCK IN BYTES
000012 D.DSP:  .BLKW  1      ;POINTER TO DRIVER DISPATCH TABLE
000014 D.MSK:  .BLKW  1      ;LEGAL FUNCTION MASK CODES 0-15.
000016      .BLKW  1      ;CONTROL FUNCTION MASK CODES 0-15.
000020      .BLKW  1      ;NOP'ED FUNCTION MASK CODES 0-15.
000022      .BLKW  1      ;ACP FUNCTION MASK CODES 0-15.
000024      .BLKW  1      ;LEGAL FUNCTION MASK CODES 16.-31.
000026      .BLKW  1      ;CONTROL FUNCTION MASK CODES 16.-31.
000030      .BLKW  1      ;NOP'ED FUNCTION MASK CODES 16.-31.
000032      .BLKW  1      ;ACP FUNCTION MASK CODES 16.-31.
000034 D.PCB:  .BLKW  1      ;LOADABLE DRIVER PCB ADDRESS

      .PSECT

;
; DRIVER DISPATCH TABLE OFFSET DEFINITIONS
;
D.VDEB=177776      ;DEALLOCATE INTERNAL BUFFERS (FD TTDRV)
D.VINI=0           ;DEVICE INITIATOR
D.VCAN=2          ;CANCEL CURRENT I/O FUNCTION
D.VOUT=4          ;DEVICE TIMEOUT
D.VPWF=6          ;POWERFAIL RECOVERY

```

EPKDF\$

EPKDF\$

```

;
; ERROR MESSAGE BLOCK DEFINITIONS
;

```

.ASECT

```

;
; HEADER SUBPACKET
;

```

+-----+-----+	
	SUBPACKET LENGTH IN BYTES
+-----+-----+	
	SUBPACKET FLAGS
+-----+-----+	
	FORMAT IDENTIFICATION
	OPERATING SYSTEM CODE
+-----+-----+	
	OPERATING SYSTEM IDENTIFICATION
+-----+-----+	
	FLAGS
	CONTEXT CODE
+-----+-----+	
	ENTRY SEQUENCE
+-----+-----+	
	ERROR SEQUENCE
+-----+-----+	
	ENTRY TYPE SUBCODE
	ENTRY TYPE CODE
+-----+-----+	
	TIME STAMP
+-----+-----+	
	RESERVED
	PROCESSOR TYPE
+-----+-----+	
	PROCESSOR IDENTIFICATION (URM)
+-----+-----+	

.=0

000000	E\$HLGH:	.BLKW	1	; SUBPACKET LENGTH IN BYTES
000002	E\$HSBF:	.BLKW	1	; SUBPACKET FLAGS
000004	E\$HSYS:	.BLKB	1	; OPERATING SYSTEM CODE
000005	E\$HIDN:	.BLKB	1	; FORMAT IDENTIFICATION
000006	E\$HSID:	.BLKB	4	; OPERATING SYSTEM IDENTIFICATION
000012	F\$HCTX:	.BLKB	1	; CONTEXT CODE
000013	E\$HFLG:	.BLKB	1	; FLAGS
000014	E\$HENS:	.BLKW	1	; ENTRY SEQUENCE NUMBER
000016	E\$HERS:	.BLKW	1	; ERROR SEQUENCE NUMBER
000020	E\$HENC:			; ENTRY CODE
000020	E\$HTYC:	.BLKB	1	; ENTRY TYPE CODE
000021	E\$HTYS:	.BLKB	1	; ENTRY TYPE SUBCODE
000022	E\$HTIM:	.BLKB	6	; TIME STAMP
000030	E\$HPTY:	.BLKB	1	; PROCESSOR TYPE
000031		.BLKB	1	; RESERVED
000032	E\$HURM:	.BLKW	1	; PROCESSOR IDENTIFICATION (URM)
		.EVEN		

EPKDF\$ (Cont.)

```

000034 E$HLEN:                ; LENGTH

;
; SUBPACKET FLAGS FOR E$HSBF
;
SM.ERR = 1 ; ERROR PACKET
SM.HDR = 1 ; HEADER SUBPACKET
SM.TSK = 2 ; TASK SUBPACKET
SM.DID = 4 ; DEVICE IDENTIFICATION SUBPACKET
SM.DOP = 10 ; DEVICE OPERATION SUBPACKET
SM.DAC = 20 ; DEVICE ACTIVITY SUBPACKET
SM.DAT = 40 ; DATA SUBPACKET
SM.MBC = 20000 ; 22-BIT MASSBUS CONTROLLER PRESENT
SM.CMD = 40000 ; ERROR LOG COMMAND PACKET
SM.ZER = 100000 ; ZERO I/O COUNTS

;
; CODES FOR FIELD E$HIDN
;
EH$FOR = 1 ; CURRENT PACKET FORMAT

;
; FLAGS FOR THE ERROR LOG FLAGS BYTE ($ERFLA) IN THE EXEC
;
ES.INI = 1 ; ERROR LOG INITIALIZED
ES.DAT = 2 ; ERROR LOG RECEIVING DATA PACKETS
ES.LIM = 4 ; ERROR LIMITING ENABLED
ES.LOG = 10 ; ERROR LOGGING ENABLED

;
; TYPE AND SUBTYPE CODES FOR FIELDS E$HTYC AND E$HTYS
;
; SYMBOLS WITH NAMES E$CXXX ARE TYPE CODES FOR FIELD E$HTYC,
; SYMBOLS WITH NAMES E$SXXX ARE SUBTYPE CODES FOR FIELD E$HTYS.
;
E$CCMD = 1 ; ERROR LOG CONTROL
E$SSTA = 1 ; ERROR LOG STATUS CHANGE
E$SSWI = 2 ; SWITCH LOGGING FILES
E$SAPP = 3 ; APPEND FILE
E$SBAC = 4 ; DECLARE BACKUP FILE
E$SSHO = 5 ; SHOW
E$SCHL = 6 ; CHANGE LIMITS

E$CERR = 2 ; DEVICE ERRORS
E$SDVH = 1 ; DEVICE HARD ERROR
E$SDVS = 2 ; DEVICE SOFT ERROR
E$STMO = 3 ; DEVICE INTERRUPT TIMEOUT
E$SUNS = 4 ; DEVICE UNSOLICITED INTERRUPT

E$CDVI = 3 ; DEVICE INFORMATION
E$SDVI = 1 ; DEVICE INFORMATION MESSAGE

E$CDCI = 4 ; DEVICE CONTROL INFORMATION
E$SMOU = 1 ; DEVICE MOUNT
E$SDMO = 2 ; DEVICE DISMOUNT
E$SRES = 3 ; DEVICE COUNT RESET
E$SRCT = 4 ; BLOCK REPLACEMENT

```

EPKDF\$ (Cont.)

```

E$CCPU = 5 ; CPU DETECTED ERRORS
E$SMEM = 1 ; MEMORY ERROR
E$SINT = 2 ; UNEXPECTED INTERRUPT

E$CSYS = 6 ; SYSTEM CONTROL INFORMATION
E$SPWR = 1 ; POWER RECOVERY

E$CCTL = 7 ; CONTROL INFORMATION
E$STIM = 1 ; TIME CHANGE
E$SCRS = 2 ; SYSTEM CRASH
E$SLOA = 3 ; DEVICE DRIVER LOAD
E$SUNL = 4 ; DEVICE DRIVER UNLOAD
E$SHRC = 5 ; RECONFIGURATION STATUS CHANGE
E$SMES = 6 ; MESSAGE

E$CSDE = 10 ; SOFTWARE DETECTED EVENTS
E$SABO = 1 ; TASK ABORT

;
; CODES FOR CONTEXT CODE ENTRY E$HCTX
;
EH$NOR = 1 ; NORMAL ENTRY
EH$STA = 2 ; START ENTRY
EH$CRS = 3 ; CRASH ENTRY

;
; CODES FOR FLAGS ENTRY E$HFLG
;
EH$VIR = 1 ; ADDRESSES ARE VIRTUAL
EH$EXT = 2 ; ADDRESSES ARE EXTENDED
EH$COU = 4 ; ERROR COUNTS SUPPLIED

;
; TASK SUBPACKET
;
; +-----+
; | TASK SUBPACKET LENGTH |
; +-----+
; | TASK NAME IN RAD50 |
; | |
; +-----+
; | TASK UIC |
; +-----+
; | TASK TI: DEVICE NAME |
; +-----+
; | FLAGS | TASK TI: UNIT NUMBER |
; +-----+
;
;
.=0
000000 E$TLGH: .BLKW 1 ; TASK SUBPACKET LENGTH
000002 E$TTSK: .BLKW 2 ; TASK NAME IN RAD50
000006 E$TUIC: .BLKW 1 ; TASK UIC
000010 E$TTID: .BLKB 2 ; TASK TI: DEVICE NAME
000012 E$TTIU: .BLKB 1 ; TASK TI: UNIT
000013 E$TFLG: .BLKB 1 ; FLAGS
.EVEN

```

EPKDF\$ (Cont.)

000014 E\$TLEN:

```

;
; FLAGS FOR ENTRY E$TFLG
;
    ET$PRV =      1 ; TASK IS PRIVILEGED
    ET$PRI =      2 ; TERMINAL IS PRIVILEGED

```

```

;
; DEVICE IDENTIFICATION SUBPACKET
;

```

+-----+-----+	
	DEVICE IDENTIFICATION SUBPACKET LENGTH
+-----+-----+	
	DEVICE MNEMONIC NAME
+-----+-----+	
	CONTROLLER NUMBER
	DEVICE UNIT NUMBER
+-----+-----+	
	PHYSICAL SUBUNIT #
	PHYSICAL UNIT #
+-----+-----+	
	PHYSICAL DEVICE MNEMONIC (RSX-11M-PLUS ONLY)
+-----+-----+	
	RESERVED
	FLAGS
+-----+-----+	
	VOLUME NAME OF MOUNTED VOLUME
+-----+-----+	
	PACK IDENTIFICATION
+-----+-----+	
	DEVICE TYPE CLASS
+-----+-----+	
	DEVICE TYPE
+-----+-----+	
	I/O OPERATION COUNT LONGWORD
+-----+-----+	
	HARD ERROR COUNT
	SOFT ERROR COUNT
+-----+-----+	
	BLOCKS TRANSFERRED COUNT (RSX-11M-PLUS ONLY)
+-----+-----+	
	CYLINDERS CROSSED COUNT (RSX-11M-PLUS ONLY)
+-----+-----+	

. = 0

```

000000 E$ILGH: .BLKW 1 ; DEVICE IDENTIFICATION SUBPACKET LENGTH
000002 E$ILDV: .BLKW 1 ; DEVICE MNEMONIC NAME
000004 E$ILUN: .BLKB 1 ; DEVICE UNIT NUMBER
000005 E$IPCO: .BLKB 1 ; CONTROLLER NUMBER
000006 E$IPUN: .BLKB 1 ; PHYSICAL UNIT NUMBER
000007 E$IPSU: .BLKB 1 ; PHYSICAL SUBUNIT NUMBER

```

EPKDF\$ (Cont.)

```

        .IF DF R$$MPL
E$IPDV: .BLKW 1 ; PHYSICAL DEVICE MNEMONIC
        .ENDC ; R$$MPL

000010 E$IFLG: .BLKB 1 ; FLAGS
000011 .BLKB 1 ; RESERVED
000012 E$IVOL: .BLKB 12. ; VOLUME NAME
000026 E$IPAK: .BLKB 4 ; PACK IDENTIFICATION
000032 E$IDEV: ; DEVICE TYPE
000032 E$IDCL: .BLKW 1 ; DEVICE TYPE CLASS
000034 E$IDTY: .BLKW 2 ; DEVICE TYPE
000040 E$IOPR: .BLKW 2 ; I/O OPERATION COUNT LONGWORD
000044 E$IERS: .BLKB 1 ; SOFT ERROR COUNT
000045 E$IERH: .BLKB 1 ; HARD ERROR COUNT
    
```

.IF DF R\$\$MPL

```

E$IBLK: .BLKW 2 ; BLOCKS TRANSFERRED COUNT
E$ICYL: .BLKW 2 ; CYLINDERS CROSSED COUNT
    
```

.ENDC ; R\$\$MPL

.EVEN

```

000046 E$ILEN: ; SUBPACKET LENGTH
    
```

```

;
; FLAGS FOR FIELD E$IFLG
;
EISUB = 1 ; SUBCONTROLLER DEVICE
    
```

```

;
; DEVICE OPERATION SUBPACKET
;
    
```

```

;
; +-----+
; | DEVICE OPERATION SUBPACKET LENGTH |
; +-----+
; | TASK NAME IN RAD50 |
; | |
; +-----+
; | TASK UIC |
; +-----+
; | TASK TI: LOGICAL DEVICE MNEMONIC |
; +-----+-----+
; | RESERVED | TASK TI: DEVICE UNIT |
; +-----+-----+
; | I/O FUNCTION CODE |
; +-----+-----+
; | RESERVED | OPERATION FLAGS |
; +-----+-----+
; | TRANSFER OPERATION ADDRESS |
; | |
; +-----+-----+
; | TRANSFER OPERATION BYTE COUNT |
; +-----+-----+
; | CURRENT OPERATION RETRY COUNT |
; +-----+-----+
;
;
    
```

.=0

EPKDF\$ (Cont.)

```

000000 E$OLGN: .BLKW 1 ; SUBPACKET LENGTH
000002 E$OTSK: .BLKW 2 ; TASK NAME IN RAD50
000006 E$OUIC: .BLKW 1 ; TASK UIC
000010 E$OTID: .BLKB 2 ; TASK TI: LOGICAL DEVICE MNEMONIC
000012 E$OTIU: .BLKB 1 ; TASK TI: LOGICAL DEVICE UNIT
000013 .BLKB 1 ; RESERVED
000014 E$OFNC: .BLKW 1 ; I/O FUNCTION CODE
000016 E$OFLG: .BLKB 1 ; OPERATION FLAGS
000017 .BLKB 1 ; RESERVED
000020 E$OADD: .BLKW 2 ; TRANSFER OPERATION ADDRESS
000024 E$OSIZ: .BLKW 1 ; TRANSFER OPERATION BYTE COUNT
000026 E$ORTY: .BLKW 1 ; CURRENT OPERATION RETRY COUNT
.EVEN
000030 E$OLEN: ; DEVICE OPERATION SUBPACKET LENGTH

```

```

;
; FLAGS FOR FIELD E$OFLG
;

```

```

E$OTRA = 1 ; TRANSFER OPERATION
E$ODMA = 2 ; DMA DEVICE
E$OEXT = 4 ; EXTENDED ADDRESSING DEVICE
E$OPIP = 10 ; DEVICE IS POSITIONING

```

```

;
; I/O ACTIVITY SUBPACKET
;

```

```

; +-----+
; | I/O ACTIVITY SUBPACKET LENGTH |
; +-----+
;

```

```

.=0

```

```

000000 E$ALGH: .BLKW 1 ; SUBPACKET LENGTH

```

EPKDF\$ (Cont.)

```

;
; I/O ACTIVITY SUBPACKET ENTRY
;
; -----+-----
; | LOGICAL DEVICE NAME MNEMONIC |
; -----+-----
; | CONTROLLER NUMBER | LOGICAL DEVICE UNIT |
; -----+-----
; | PHYSICAL SUBUNIT # | PHYSICAL UNIT NUMBER |
; -----+-----
; | PHYSICAL DEVICE MNEMONIC (RSX-11M-PLUS ONLY) |
; -----+-----
; | TASK TI: LOGICAL UNIT | DEVICE FLAGS |
; -----+-----
; | REQUESTING TASK NAME IN RAD50 |
; | |
; -----+-----
; | REQUESTING TASK UIC |
; -----+-----
; | TASK TI: LOGICAL DEVICE NAME |
; -----+-----
; | I/O FUNCTION CODE |
; -----+-----
; | RESERVED | FLAGS |
; -----+-----
; | TRANSFER OPERATION ADDRESS |
; | |
; -----+-----
; | TRANSFER OPERATION BYTE COUNT |
; -----+-----
;
.=0
000000 E$ALDV: .BLKW 1 ; LOGICAL DEVICE NAME MNEMONIC
000002 E$ALUN: .BLKB 1 ; LOGICAL DEVICE UNIT
000003 E$APCO: .BLKB 1 ; CONTROLLER NUMBER
000004 E$APUN: .BLKB 1 ; PHYSICAL UNIT NUMBER
000005 E$APSU: .BLKB 1 ; PHYSICAL SUBUNIT NUMBER

; .IF DF R$$MPL
E$APDV: .BLKW 1 ; PHYSICAL DEVICE MNEMONIC
; .ENDC ; R$$MPL

000006 E$ADFG: .BLKB 1 ; DEVICE FLAGS
000007 E$ATIU: .BLKB 1 ; TASK TI: LOGICAL UNIT
000010 E$ATSK: .BLKW 2 ; REQUESTING TASK NAME IN RAD50
000014 E$AUIC: .BLKW 1 ; REQUESTING TASK UIC
000016 E$ATID: .BLKW 1 ; TASK TI: LOGICAL DEVICE NAME
000020 E$AFNC: .BLKW 1 ; I/O FUNCTION CODE
000022 E$AFLG: .BLKB 1 ; FLAGS
000023 .BLKB 1 ; RESERVED
000024 E$AADD: .BLKW 2 ; TRANSFER OPERATION ADDRESS
000030 E$ASIZ: .BLKW 1 ; TRANSFER OPERATION BYTE COUNT
; .EVEN
000032 E$ALEN: ; SUBPACKET ENTRY LENGTH
    
```


EPKDF\$ (Cont.)

```
;
; FLAGS FOR FIELD E$ADFG
;
    EA$SUB =    1 ; SUBCONTROLLER DEVICE

;
; FLAGS FOR FIELD E$AFLG
;
    EA$TRA =    1 ; TRANSFER OPERATION
    EA$DMA =    2 ; DMA DEVICE
    EA$EXT =    4 ; DEVICE HAS EXTENDED ADDRESSING
    EA$PIP =   10 ; DEVICE IS POSITIONING

.PSECT
```

```

F11DF$  ,,SYSDEF

;
; VOLUME CONTROL BLOCK
;
      .ASECT
      .=0
000000 V.TRCT: .BLKW  1      ; TRANSACTION COUNT
      .IF DF R$$11M

000002 V.TYPE: .BLKB  1      ; VOLUME TYPE DESCRIPTOR
      VT.SL1= 1      ; FILES-11 STRUCTURE LEVEL 1
      VT.ANS= 10     ; ANSI LABELED TAPE
      VT.UNL= 11     ; UNLABELED TAPE
000003 V.VCHA: .BLKB  1      ; VOLUME CHARACTERISTICS
      VC.SLK= 1      ; CLEAR VOLUME VALID ON DISMOUNT
      VC.HLK= 2      ; UNLOAD THE VOLUME ON DISMOUNT
      VC.DEA= 4      ; DEALLOCATE THE VOLUME ON DISMOUNT
      VC.PUB= 10     ; SET (CLEAR) US.PUB ON DISMOUNT
000004 V.LABL: .BLKB  14     ; VOLUME LABEL (ASCII)
000020 V.PKSR: .BLKW  2      ; PACK SERIAL NUMBER FOR ERROR LOGGING

000024 V.SLEN:          ; LENGTH OF SHORT VCB
      .ENDC ;R$$11M

000024 V.IFWI: .BLKW  1      ; INDEX FILE WINDOW
      .IF DF R$$11D
      V.STD: .BLKW  1      ; STD OF TASK CHARGED WITH NODE
      .ENDC ;R$$11D

000026 V.FCB: .BLKW  2      ; FILE CONTROL BLOCK LIST HEAD
000032 V.IBLB: .BLKB  1      ; INDEX BIT MAP 1ST LBN HIGH BYTE
000033 V.IBSZ: .BLKB  1      ; INDEX BIT MAP SIZE IN BLOCKS
000034 .BLKW  1      ; INDEX BITMAP 1ST LBN LOW BITS
000036 V.FMAX: .BLKW  1      ; MAX NO. OF FILES ON VOLUME
000040 V.WISZ: .BLKB  1      ; DEFAULT SIZE OF WINDOW IN RTRV PTRS
      ; VALUE IS < 128.
000041 V.SBCL: .BLKB  1      ; STORAGE BIT MAP CLUSTER FACTOR
000042 V.SBSZ: .BLKW  1      ; STORAGE BIT MAP SIZE IN BLOCKS
000044 V.SBLB: .BLKB  1      ; STORAGE BIT MAP 1ST LBN HIGH BYTE
000045 V.FIEX: .BLKB  1      ; DEFAULT FILE EXTEND SIZE
000046 .BLKW  1      ; STORAGE BIT MAP 1ST LBN LOW BITS
      .IF DF R$$11M

000050 V.VOWN: .BLKW  1      ; VOLUME OWNER'S UIC
000052 V.VPRO: .BLKW  1      ; VOLUME PROTECTION
      .ENDC ;R$$11M

```

F11DF\$ (Cont.)

```

000054 V.FPRO: .BLKW 1 ; VOLUME DEFAULT FILE PROTECTION
000056 V.FRBK: .BLKB 1 ; NUMBER OF FREE BLOCKS ON VOLUME HIGH BYTE
000057 V.LRUC: .BLKB 1 ; COUNT OF AVAILABLE LRU SLOTS IN FCB LIST
000060 .BLKW 1 ; NUMBER OF FREE BLOCKS ON VOLUME LOW BITS
000062 V.STS: .BLKB 1 ; VOLUME STATUS BYTE, CONTAINING THE FOLLOWING
VS.IFW= 1 ; INDEX FILE IS WRITE ACCESSED
VS.BMW= 2 ; STORAGE BITMAP FILE IS WRITE ACCESSED
000063 V.FFNU: .BLKB 1 ; FIRST FREE INDEX FILE BITMAP BLOCK
000064 V.EXT: .BLKW 1 ; POINTER TO VCB EXTENSION

000066 V.LGTH: ; SIZE IN BYTES OF VCB

;
; MOUNT LIST ENTRY
;
; EACH ENTRY ALLOWS ACCESS TO A SPECIFIED USER FOR A NON-PUBLIC DEVICE
;
; TO ALLOW EXPANSION, ONLY THE ONLY TYPE CODE DEFINED IS "1" FOR
; DEVICE ACCESS BLOCKS
;
.ASECT
.=0
000000 M.LNK: .BLKW 1 ; LINK WORD
000002 M.TYPE: .BLKB 1 ; TYPE OF ENTRY
MT.MLS= 1 ; MOUNTED VOLUME USER ACCESS LIST
000003 M.ACC: .BLKB 1 ; NUMBER OF ACCESSES
000004 M.DEV: .BLKW 1 ; DEVICE UCB
000006 M.TI: .BLKW 1 ; ACCESSOR TI: UCB

000010 M.LEN: ; LENGTH OF ENTRY

;
; FILE CONTROL BLOCK
;
.ASECT
.=0
000000 F.LINK: .BLKW 1 ; FCB CHAIN POINTER

.IF DF R$$11D

F.FEXT: .BLKW 1 ; POINTER TO EXTENSION FCB
F.STD: .BLKW 1 ; STD OF TASK CHARGED WITH NODE

.ENDC ;R$$11D

000002 F.FNUM: .BLKW 1 ; FILE NUMBER
000004 F.FSEQ: .BLKW 1 ; FILE SEQUENCE NUMBER
000006 .BLKB 1 ; NOT USED
000007 F.FSQN: .BLKB 1 ; FILE SEGMENT NUMBER
000010 F.FOWN: .BLKW 1 ; FILE OWNER'S UIC
000012 F.FPRO: .BLKW 1 ; FILE PROTECTION CODE
000014 F.UCHA: .BLKB 1 ; USER CONTROLLED CHARACTERISTICS
000015 F.SCHA: .BLKB 1 ; SYSTEM CONTROLLED CHARACTERISTICS
000016 F.HDLB: .BLKW 2 ; FILE HEADER LOGICAL BLOCK NUMBER

```

RSX-11M SYSTEM DATA STRUCTURES AND SYMBOLIC DEFINITIONS

F11DF\$ (Cont.)

```

000022 F.LBN: .BLKW 2 ; BEGINNING OF STATISTICS BLOCK
; LBN OF VIRTUAL BLOCK 1 IF CONTIGUOUS
; 0 IF NON CONTIGUOUS
000026 F.SIZE: .BLKW 2 ; SIZE OF FILE IN BLOCKS
000032 F.NACS: .BLKB 1 ; NO. OF ACCESSES
000033 F.NLCK: .BLKB 1 ; NO. OF LOCKS

000012 S.STBK=-F.LBN ; SIZE OF STATISTICS BLOCK

000034 F.STAT: ; FCB STATUS WORD
000034 F.NWAC: .BLKB 1 ; NUMBER OF WRITE ACCESSORS
000035 .BLKB 1 ; STATUS BITS FOR FCB CONSISTING OF
FC.WAC= 100000 ; SET IF FILE ACCESSED FOR WRITE
FC.DIR= 40000 ; SET IF FCB IS IN DIRECTORY LRU
FC.CEF= 20000 ; SET IF DIRECTORY EOF NEEDS UPDATING
FC.FCO= 10000 ; SET IF TRYING TO FORCE DIRECTORY CONTIG
000036 F.DREF: .BLKW 1 ; DIRECTORY EOF BLOCK NUMBER
000040 F.DRNM: .BLKW 1 ; 1ST WORD OF DIRECTORY NAME

; IF DF R$$11M

000042 F.FEXT: .BLKW 1 ; POINTER TO EXTENSION FCB

; ENDC ;R$$11M

000044 F.FVBN: .BLKW 2 ; STARTING VBN OF THIS FILE SEGMENT
000050 F.LKL: .BLKW 1 ; POINTER TO LOCKED BLOCK LIST FOR FILE
000052 F.WIN: .BLKW 1 ; WINDOW BLOCK LIST FOR THIS FILE

000054 F.LGTH: ; SIZE IN BYTES OF FCB

;
; WINDOW
;
; .ASECT
.=0
000000 W.ACT: ; NUMBER OF ACTIVE MAPPING POINTERS
; WHEN NO SECONDARY POOL
000000 W.BLKS: ; BLOCK SIZE OF SECONDARY POOL SEGMENT
; WHEN SECONDARY POOL
000000 W.CTL: .BLKW 1 ; LOW BYTE = # OF MAP ENTRIES ACTIVE
; HIGH BYTE CONSISTS OF CONTROL BITS
WI.RDV= 400 ; READ VIRTUAL BLOCK ALLOWED IF SET
WI.WRV= 1000 ; WRITE VIRTUAL BLOCK ALLOWED IF SET
WI.EXT= 2000 ; EXTEND ALLOWED IF SET
WI.LCK= 4000 ; SET IF LOCKED AGAINST SHARED ACCESS
WI.DLK= 10000 ; SET IF DEACCESS LOCK ENABLED

; IF DF R$$11M

WI.PND= 20000 ; WINDOW TURN PENDING BIT

; ENDC ;R$$11M

WI.EXL= 40000 ; SET IF MANUAL UNLOCK DESIRED
WI.WCK= 100000 ; DATA CHECK ALL WRITES TO FILE

```

F11DF\$ (Cont.)

```

        .IF NDF R$$11M ; IF NOT RSX-11

W.FCB: .BLKW 1 ; FILE CONTROL BLOCK ADDRESS
W.STD: .BLKW 1 ; STD OF TASK CHARGED WITH WIDOW NODE
W.VBN: .BLKB 1 ; HIGH BYTE OF 1ST VBN MAPPED BY WINDOW
W.WISZ: .BLKB 1 ; SIZE IN RTRV PTRS OF WINDOW (7 BITS)
        .BLKW 1 ; LOW ORDER WORD OF 1ST VBN MAPPED
W.LKL: .BLKW 1 ; POINTER TO LIST OF USERS LOCKED BLOCKS
W.WIN: .BLKW 1 ; WINDOW BLOCK LIST LINK WORD
W.RTRV: ; OFFSET TO 1ST RETRIEVAL POINTER IN WINDOW

        .IFF ; IF RSX-11

000002 W.IOC: .BLKB 1 ; COUNT OF I/O THROUGH THIS WINDOW
000003 ; RESERVED
000004 W.FCB: .BLKW 1 ; FILE CONTROL BLOCK ADDRESS
000006 W.LKL: .BLKW 1 ; POINTER TO LIST OF USERS LOCKED BLOCKS
000010 W.WIN: .BLKW 1 ; WINDOW BLOCK LIST LINK WORD

        .IF NB SYSDEF ; IF SYSDEF SPECIFIED IN CALL

        .IF NDF P$$WND ; IF SECONDARY POOL WINDOWS NOT ALLOWED

;
; NON-SECONDARY POOL WINDOW BLOCK
; IF SECONDARY POOL WINDOWS ARE NOT ENABLED, THE WINDOW BLOCK
; CONTAINS THE CONTROL INFORMATION AND RETRIEVAL POINTERS.
;
000012 W.VBN: .BLKB 1 ; HIGH BYTE OF 1ST VBN MAPPED BY WINDOW
000013 W.MAP: ; DEFINE LABEL WITH ODD ADDR TO CATCH BAD REFS
000013 W.WISZ: .BLKB 1 ; SIZE IN RTRV PTRS OF WINDOW (7 BITS)
000014 ; .BLKW 1 ; LOW ORDER WORD OF 1ST VBN MAPPED
000016 W.RTRV: ; OFFSET TO 1ST RETRIEVAL POINTER IN WINDOW

        .IFF ; IF WINDOWS IN SECONDARY POOL

;
; SECONDARY POOL WINDOW CONTROL AND MAPPING BLOCK
; IF SECONDARY POOL WINDOW BLOCKS ARE ENABLED, LUTN2 POINTS
; TO A CONTROL BLOCK IN SYSTEM POOL WHICH CONTAINS THE
; FOLLOWING CONTROL FIELDS AND THE MAPPING INFORMATION
; FOR THE SECONDARY POOL WINDOW.
;
W.MAP: .BLKW 1 ; ADDR TO THE MAPPING PTRS IN SECONDARY POOL

;
; SECONDARY POOL WINDOW
; IF SECONDARY POOL WINDOW BLOCKS ARE ENABLED, THE RETRIEVAL
; POINTERS ARE MAINTAINED IN SECONDARY POOL IN THE FOLLOWING
; FORMAT.
;
.=0

```

F11DF\$ (Cont.)

```

        ASSUME W.CTL,0
        .BLKB 1 ; NUMBER OF ACTIVE MAPPING POINTERS
W.USE: .BLKB 1 ; STATUS OF BLOCK
W.VBN: .BLKB 1 ; HIGH BYTE OF 1ST VBN MAPPED BY WINDOW
W.WISZ: .BLKB 1 ; SIZE IN RTRV PTRS OF WINDOW (7 BITS)
        .BLKW 1 ; LOW ORDER WORD OF 1ST VBN MAPPED
W.RTRV: ; OFFSET TO 1ST RETRIEVAL POINTER IN WINDOW

        .ENDC ;P$$WND ; END SECONDARY POOL WINDOW CONDITIONAL

        .ENDC ;SYSDEF ; END SYSDEF CONDITIONAL

        .ENDC ;R$$11M ; END RSX-11M CONDITIONAL

;
; LOCKED BLOCK LIST NODE
;
        .ASECT
        .=0
000000 L.LNK: .BLKW 1 ; LINK TO NEXT NODE IN LIST
000002 L.WI1: .BLKW 1 ; POINTER TO WINDOW FOR FIRST ENTRY

        .IF DF R$$11D

L.STD: .BLKW 1 ; POINTER TO STD OF TASK NODE CHARGED TO
L.VB1: .BLKW 2 ; STARTING VBN OF FIRST ENTRY
L.VB2: .BLKW 2 ; STARTING VBN OF SECOND ENTRY
L.CNT: .BLKB 1 ; COUNT FOR FIRST ENTRY
        .BLKB 1 ; COUNT FOR SECOND ENTRY

        .IFF

000004 L.VB1: .BLKB 1 ; HIGH ORDER VBN BYTE
000005 L.CNT: .BLKB 1 ; COUNT FOR ENTRY
000006 .BLKW 1 ; LOW ORDER VBN

        .ENDC ;R$$11D

000010 L.LKSZ:

        .PSECT

```

HDRDF\$

HDRDF\$

```

;
; TASK HEADER OFFSET DEFINITIONS
;
      .ASECT
      .=0
000000 H.CSP:  .BLKW  1      ;CURRENT STACK POINTER
000002 H.HDLN: .BLKW  1      ;HEADER LENGTH IN BYTES
000004 H.EFLM: .BLKW  2      ;EVENT FLAG MASK WORD AND ADDRESS
000010 H.CUIC: .BLKW  1      ;CURRENT TASK UIC
000012 H.DUIC: .BLKW  1      ;DEFAULT TASK UIC
000014 H.IPS:  .BLKW  1      ;INITIAL PROCESSOR STATUS WORD (PS)
000016 H.IPC:  .BLKW  1      ;INITIAL PROGRAM COUNTER (PC)
000020 H.ISP:  .BLKW  1      ;INITIAL STACK POINTER (SP)
000022 H.ODVA: .BLKW  1      ;ODT SST VECTOR ADDRESS
000024 H.ODVL: .BLKW  1      ;ODT SST VECTOR LENGTH
000026 H.TKVA: .BLKW  1      ;TASK SST VECTOR ADDRESS
000030 H.TKVL: .BLKW  1      ;TASK SST VECTOR LENGTH
000032 H.PFVA: .BLKW  1      ;POWER FAIL AST CONTROL BLOCK ADDRESS
000034 H.FPVA: .BLKW  1      ;FLOATING POINT AST CONTROL BLOCK ADDRESS
000036 H.RCVA: .BLKW  1      ;RECIEVE AST CONTROL BLOCK ADDRESS
000040 H.EFSV: .BLKW  1      ;EVENT FLAG ADDRESS SAVE ADDRESS
000042 H.FPSA: .BLKW  1      ;POINTER TO FLOATING POINT/EAE SAVE AREA
000044 H.WND:  .BLKW  1      ;POINTER TO NUMBER OF WINDOW BLOCKS
000046 H.DSW:  .BLKW  1      ;TASK DIRECTIVE STATUS WORD
000050 H.FCS:  .BLKW  1      ;FCS IMPURE POINTER
000052 H.FORT: .BLKW  1      ;FORTRAN IMPURE POINTER
000054 H.OVLY: .BLKW  1      ;OVERLAY IMPURE POINTER
000056 H.VEXT: .BLKW  1      ;WORK AREA EXTENSION VECTOR POINTER
000060 H.SPRI: .BLKB  1      ;PRIORITY DIFFERENCE FOR SWAPPING
000061 H.NML:  .BLKB  1      ;NETWORK MAILBOX LUN
000062 H.RRVA: .BLKW  1      ;RECEIVE BY REFERENCE AST CONTROL BLOCK ADDRESS
000064 H.X25:  .BLKB  1      ;FOR USE BY X.25 SOFTWARE
000065      .BLKB  1      ;FIVE RESERVED BYTES
000066      .BLKW  2      ;
000072 H.GARD: .BLKW  1      ;POINTER TO HEADER GUARD WORD
000074 H.NLUN: .BLKW  1      ;NUMBER OF LUN'S
000076 H.LUN:  .BLKW  2      ;START OF LOGICAL UNIT TABLE

```

```

;
; LENGTH OF FLOATING POINT SAVE AREA
;

```

```

H.FPSL=25.*2      ;

```

```

;
; WINDOW BLOCK OFFSETS
;

```

```

.=0

```

RSX-11M SYSTEM DATA STRUCTURES AND SYMBOLIC DEFINITIONS

HDRDF\$ (Cont.)

```

000000 W.BPCB: .BLKW 1 ;PARTITION CONTROL BLOCK ADDRESS
000002 W.BLVR: .BLKW 1 ;LOW VIRTUAL ADDRESS LIMIT
000004 W.BHVR: .BLKW 1 ;HIGH VIRTUAL ADDRESS LIMIT
000006 W.BATT: .BLKW 1 ;ADDRESS OF ATTACHMENT DESCRIPTOR
000010 W.BSIZ: .BLKW 1 ;SIZE OF WINDOW IN 32W BLOCKS
000012 W.BoFF: .BLKW 1 ;PHYSICAL MEMORY OFFSET IN 32W BLOCKS
000014 W.BFPD: .BLKB 1 ;FIRST PDR ADDRESS
000015 W.BNPD: .BLKB 1 ;NUMBER OF PDR'S TO MAP
000016 W.BLPD: .BLKW 1 ;CONTENTS OF LAST PDR

000020 W.BLGH: ;LENGTH OF WINDOW DESCRIPTOR

.PSECT
    
```


HWDDF\$

HWDDF\$

```

;
; HARDWARE REGISTER ADDRESSES AND STATUS CODES
;
MPCSR=177746      ;ADDRESS OF PDP-11/70 MEMORY PARITY REGISTER
MPAR=172100      ;ADDRESS OF FIRST MEMORY PARITY REGISTER
PIRQ=177772      ;PROGRAMMED INTERRUPT REQUEST REGISTER
PR0=0            ;PROCESSOR PRIORITY 0
PR1=40          ;PROCESSOR PRIORITY 1
PR4=200         ;PROCESSOR PRIORITY 4
PR5=240         ;PROCESSOR PRIORITY 5
PR6=300         ;PROCESSOR PRIORITY 6
PR7=340         ;PROCESSOR PRIORITY 7
PS=177776       ;PROCESSOR STATUS WORD
SWR=177570      ;CONSOLE SWITCH AND DISPLAY REGISTER
TPS=177564      ;CONSOLE TERMINAL PRINTER STATUS REGISTER

;
; EXTENDED ARITHMETIC ELEMENT REGISTERS
;
      .IF DF E$$EAE

AC=177302        ;ACCUMULATOR
MQ=177304        ;MULTIPLIER-QUOTIENT
SC=177310        ;SHIFT COUNT

      .ENDC ;E$$EAE

;
; MEMORY MANAGEMENT HARDWARE REGISTERS AND STATUS CODES
;
      .IF DF M$$MGE

KDSAR0=172360    ;KERNEL D PAR 0
KSDR0=172320    ;KERNEL D PDR 0
KISAR0=172340    ;KERNEL I PAR 0
KINAR0=KISAR0    ;KERNEL I PAR 0
KISAR5=172352    ;KERNEL I PAR 5
KINAR5=KISAR5    ;KERNEL I PAR 5
KISAR6=172354    ;KERNEL I PAR 6
KINAR6=KISAR6    ;KERNEL I PAR 6
KISAR7=172356    ;KERNEL I PAR 7
KINAR7=KISAR7    ;KERNEL I PAR 7
KISDR0=172300    ;KERNEL I PDR 0
KISDR6=172314    ;KERNEL I PDR 6
KISDR7=172316    ;KERNEL I PAR 7
SISDR0=172200    ;SUPERVISOR I PDR 0
UDSAR0=177660    ;USER D PAR 0
UDSDR0=177620    ;USER D PDR 0
UISAR0=177640    ;USER I PAR 0
UISAR4=177650    ;USER I PAR 4
UISAR5=177652    ;USER I PAR 5
UISAR6=177654    ;USER I PAR 6
UISAR7=177656    ;USER I PAR 7
UISDR0=177600    ;USER I PDR 0
UISDR4=177610    ;USER I PDR 4

```

RSX-11M SYSTEM DATA STRUCTURES AND SYMBOLIC DEFINITIONS

HWDDF\$ (Cont.)

```

UISDR5=177612          ;USER I PDR 5
UISDR6=177614          ;USER I PDR 6
UISDR7=177616          ;USER I PDR 7
UBMPR=170200           ;UNIBUS MAPPING REGISTER 0
CMODE=140000           ;CURRENT MODE FIELD OF PS WORD

      .IFTF ;M$$MGE

PMODE=30000            ;PREVIOUS MODE FIELD OF PS WORD

      .IFT  ;M$$MGE

SR0=177572             ;SEGMENT STATUS REGISTER 0
SR3=172516             ;SEGMENT STATUS REGISTER 3

      .ENDC ;M$$MGE

;
; FEATURE SYMBOL DEFINITIONS
;
FE.EXT=1                ;22-BIT EXTENDED MEMORY SUPPORT
FE.MUP=2                ;MULTI-USER PROTECTION SUPPORT
FE.EXV=4                ;EXECUTIVE IS SUPPORTED TO 20K
FE.DRV=10              ;LOADABLE DRIVER SUPPORT
FE.PLA=20              ;PLAS SUPPORT
FE.CAL=40              ;DYNAMIC CHECKPOINT SPACE ALLOCATION
FE.PKT=100            ;PREALLOCATION OF I/O PACKETS
FE.EXP=200            ;EXTEND TASK DIRECTIVE SUPPORTED
FE.LSI=400            ;PROCESSOR IS AN LSI-11
FE.OFF=1000           ;PARENT OFFSPRING TASKING SUPPORTED
FE.FDT=2000           ;FULL DUPLEX TERMINAL DRIVER
FE.X25=4000           ;X.25 COM EXECUTIVE LOADED (1=YES)
FE.DYM=10000          ;DYNAMIC MEMORY ALLOCATION SUPPORTED
FE.CEX=20000          ;COM EXEC IS LOADED
FE.MXT=40000          ;MCR EXIT AFTER EACH COMMAND MODE
FE.NLG=100000         ;LOGINS DISABLED - MULTI-USER SUPPORT

;
; SECOND FEATURE MASK SYMBOL DEFINITIONS
;
F2.DAS=1                ;KERNEL DATA SPACE          (M-PLUS ONLY)
F2.LIB=2                ;SUPERVISOR MODE LIBRARIES      "
F2.MP=4                 ;MULTIPROCESSING SUPPORT        "
F2.EVT=10              ;EVENT TRACE SUPPORT            "
F2.ACN=20              ;CPU ACCOUNTING                  "
F2.SDW=40              ;SHADOW RECORDING                "
F2.POL=100            ;SECONDARY POOLS                  "
F2.WND=200            ;SECONDARY POOL FILE WINDOWS     "
F2.DPR=400            ;DIRECTIVE PARTITION SUPPORT
F2.IRR=1000           ;INSTALL, REQUEST AND REMOVE SUPPORT
F2.GGF=2000           ;GROUP GLOBAL EVENT FLAG SUPPORT
F2.RAS=4000           ;RECEIVE/SEND DATA PACKET SUPPORT

```

HWDDF\$ (Cont.)

```

F2.AHR=10000          ;ALT. HEADER REFRESH AREAS SUPPORTED
F2.RBN=20000          ;ROUND ROBIN SCHEDULING SUPPORT
F2.SWP=40000          ;EXECUTIVE LEVEL DISK SWAPPING SUPPORT
F2.STP=100000         ;EVENT FLAG MASK IS IN THE TCB (1=YES)

```

```

;
; THIRD FEATURE MASK SYMBOL DEFINITIONS

```

```

;
F3.CRA=1              ;SPONTANEOUS CRASH (1=YES)
F3.NWK=2              ;SYSTEM HAS NETWORK SUPPORT
F3.EIS=4              ;SYSTEM REQUIRES THE EXTENDED INST. SET
F3.STM=10            ;SYSTEM HAS SET SYSTEM TIME DIRECTIVE
F3.UDS=20            ;USER DATA SPACE (M-PLUS ONLY)
F3.PRO=40            ;PROTO TCBS OUT OF POOL "
F3.XHR=100           ;EXTERNAL HEADER SUPPORT "
F3.AST=200           ;SYSTEM HAS AST SUPPORT
F3.11S=400           ;SYSTEM IS RSX-11S
F3.CLI=1000          ;SYSTEM HAS MULTIPLE CLI SUPPORT
F3.TCM=2000          ;TERMINAL COMMON (M-PLUS ONLY)
F3.PMN=4000          ;POOL MONITORING SUPPORT
F3.WAT=10000         ;WATCHDOG TIMER SUPPORT
F3.RLK=20000         ;'RMS' RECORD LOCKING SUPPORT
F3.SHF=40000         ;MEMORY SHUFFLER SUPPORTED
;F3.RES=100000       ;RESERVED FOR FUTURE EXPANSION OF 11M

```

```

;
; HARDWARE FEATURE MASK SYMBOL DEFINITIONS

```

```

;
HF.UBM=1              ;SYSTEM HAS A UNIBUS MAP (1=YES)
HF.EIS=2              ;SYSTEM HAS EXTENDED INSTRUCTION SET
HF.CIS=200           ;SYSTEM HAS COMMERCIAL INSTRUCTION SET
HF.FPP=100000        ;SYSTEM SUPPORTS FLOATING POINT (1=NO)

```

ITBDF\$

```

ITBDF$  ,,SYSDEF

;
; INTERRUPT TRANSFER BLOCK (ITB) OFFSET DEFINITIONS
;
  .IF DF A$$TRP

    .MCALL  PKTDF$
    PKTDF$          ; DEFINE AST BLOCK OFFSETS

    .ENDC ;A$$TRP

    .ASECT

    .=0
000000 X.LNK: .BLKW  1          ; LINK WORD FOR ITB LIST STARTING IN TCB
000002 X.JSR: JSR    R5,@#0    ; CALL $INTSC
000006 X.PSW: .BLKB  1          ; LOW BYTE OF PSW FOR ISR
000007          .BLKB  1          ; UNUSED
000010 X.ISR: .BLKW  1          ; ISR ENTRY POINT (APR5 MAPPING)
000012 X.FORK:          ; FORK BLOCK
000012          .BLKW  1          ; THREAD WORD
000014          .BLKW  1          ; FORK PC
000016          .BLKW  1          ; SAVED R5
000020          .BLKW  1          ; SAVED R4

    .IF DF M$$MGE

X.REL: .BLKW  1          ; RELOCATION BASE FOR APR5

    .ENDC ;M$$MGE

X.DSI: .BLKW  1          ; ADDRESS OF DIS.INT. ROUTINE
X.TCB: .BLKW  1          ; TCB ADDRESS OF OWNING TASK

    .IF NB SYSDEF

    .IF DF A$$TRP

X.AST: .BLKB  A.PRM      ; A.DQSR FOR AST BLOCK
          .BLKB          ; AST BLOCK

    .ENDC ;A$$TRP

X.VEC: .BLKW  1          ; VECTOR ADDRESS (IF AST SUPPORT,
          ; THIS IS FIRST AND ONLY AST PARAMETER)
X.VPC: .BLKW  1          ; SAVED VECTOR PC
X.LEN:          ; LENGTH IN BYTES OF ITB

    .ENDC ;SYSDEF

    .PSECT

```

LCBDF\$

LCBDF\$

```

;
; LOGICAL ASSIGNMENT CONTROL BLOCK
;
; THE LOGICAL ASSIGNMENT CONTROL BLOCK (LCB) IS USED TO ASSOCIATE A
; LOGICAL NAME WITH A PHYSICAL DEVICE UNIT.  LCB'S ARE LINKED TOGETHER
; TO FORM THE LOGICAL ASSIGNMENTS OF A SYSTEM.  ASSIGNMENTS MAY BE ON
; A SYSTEM WIDE OR LOCAL (TERMINAL) BASIS.
;
      .ASECT
      .=0
000000 L.LNK:  .BLKW  1      ;LINK TO NEXT LCB
000002 L.NAM:  .BLKW  1      ;LOGICAL NAME OF DEVICE
000004 L.UNIT: .BLKB  1      ;LOGICAL UNIT NUMBER
000005 L.TYPE: .BLKB  1      ;TYPE OF ENTRY (0=SYSTEM WIDE)
000006 L.UCB:  .BLKW  1      ;TI UCB ADDRESS
000010 L.ASG:  .BLKW  1      ;ASSIGNMENT UCB ADDRESS

000012 L.LGTH=.-L.LNK      ;LENGTH OF LCB

      .PSECT

```

```

MTADF$

;
; ANSI MAGTAPE SPECIFIC DATA STRUCTURES
;
; VOLUME SET CONTROL BLOCK OFFSET DEFININTIONS (VSCB)
;
; VOLUME SET AND PROCESS CONTROL SECTION
;
      .ASECT
      .=0
000000 V.TCNT: .BLKW  1      ;TRANSACTION COUNT
000002 V.TYPE: .BLKB  1      ;VOLUME TYPE DESCRIPTOR
000003 V.VCHA: .BLKB  1      ;VOLUME CHARACTERISTICS
000004 V.LABL: .BLKB 12.     ;FILE SET ID (FIRST SIX BYTES)
000020 V.NXT: .BLKW  1      ;PTR TO NEXT VSCB NODE
000022 V.MVL: .BLKW  1      ;PTR TO MOUNTED VOL LIST
000024 V.UVL: .BLKW  1      ;PTR TO UNMOUNTED VOL LIST
000026 V.ATL: .BLKW  1      ;ATL ADDR OF ACCESSING TASK TCB IN RSX11M
000030 V.UCB: .BLKW  1      ;ADDR OF CURRENT UCB OR PUD
000032 V.RVOL: .BLKB  1      ;CURRENT RELATIVE VOL #
000033 V.MOU: .BLKB  1      ;MOUNT MODE BYTE
000034 V.TCHR: .BLKW  1      ;UINT CHAR. FOR ALL UNITS USED FOR VOL SET
000036 V.SEQN: .BLKW  1      ;CURRENT FILE SEQUENCE #
000040 V.SECN: .BLKW  1      ;CURRENT FILE SECTION #
000042 V.TPOS: .BLKB  1      ;POSITION OF TAPE IN TM'S TO NXT HDR1
000043 V.PSTA: .BLKB  1      ;PROCESS STATUS BYTE
000044 V.TIMO: .BLKW  1      ;BLOCKED PROCESS TIMEOUT COUNTER
000046 V.STAT: .BLKW  3      ;STATUS WORDS USED BY COMMAND EXECUTION MODULES
000054 V.TRTB: .BLKB  1      ;TRANSLATION CONTROL BYTE
000055 V.EFTV: .BLKB  1      ;FOR MAG TO RETURN IE.EOF, EOT, EOY

;
; LABEL DATA SECTION
;
000056 V.BLKL: .BLKW  1      ;BLOCK LENGTH
000060 V.RECL: .BLKW  1      ;RECORD LENGTH
000062 V.FNAM: .BLKW  3      ;FILE NAME
000070 V.FTYP: .BLKW  1      ;FILE TYPE
000072 V.FVER: .BLKW  1      ;FILE VERSION #
000074 V.CDAT: .BLKW  2      ;CREATION DATE
000100 V.EDAT: .BLKW  2      ;EXPRIATION DATE
000104 V.BLKC: .BLKW  2      ;BLOCK COUNT FOR FILE SECTION
000110 V.RTYP: .BLKB  1      ;RECORD TYPE
000111 V.FATT: .BLKB  1      ;FILE ATTRIBUTES FOR CARRIAGE CONTROL
000112      .BLKB 30.     ;REMAINDER OF FILE ATTRIBUTES

;
; NULL WINDOW SECTION
;
000150 V.WIND: .BLKW  4.     ;NULL WINDOW
000160 V.MST2: .BLKW  1      ;MAGTAPE STATUS BITS
000162 V.FABY: .BLKB  1      ;FILE ACCESSIBILITY BYTE (HDR1)
000163      .BLKB  1      ;SPARE
000164 V.ANSN: .BLKB 17.     ;ANSI 17 CHARACTER FILE NAME
000205 V.BOFF: .BLKB  1.     ;BUFFER OFFSET

```

MTADFS (Cont.)

```

000206 V.DENS: .BLKB 1. ;REQUESTED UNIT DENSITY
000207 V.DRAT: .BLKB 1. ;DEFAULT RECORD ATTRIBUTES
000210 V.DBLK: .BLKW 1. ;DEFAULT BLOCK SIZE
000212 V.DREC: .BLKW 1. ;DEFAULT RECORD SIZE

000214 S.VSCB=. ;SIZE OF VSCB

        .PSECT

;
; DEFINE OFFSETS INTO NULL WINDOW SECTION
;
        .ASECT
.=0
000000 W.CTL: .BLKW 1 ;CONTROL WORD IN WINDOW
        V.WINC=V.WIND+W.CTL ;CNTRL WORD IN NULL WINDOW
        ;RELATIVE TO THE VSCB

        .PSECT

;
; MOUNTED VOLUME LIST OFFSET DEFINITIONS (MVL)
;
        .ASECT
.=0

        .IF DF R$$11M

000000 M.NXT: .BLKW 1 ;PTR TO NXT MVL NODE (11M)

        .ENDC ;R$$11M

000002 M.UIC: .BLKW 1 ;OWNER UIC FROM RVOL #1
000004 M.CH: .BLKW 1 ;U.CH/U.VP (11D)
000006 M.PROT: .BLKW 1 ;PROTECTION U.AR IN 11D

        .IF NDF R$$11M

        .BLKW 2 ;ACP WORDS 11D
M.NXT: .BLKW 1 ;PTR TO NEXT MVL NODE (11D)

        .ENDC ;R$$11M

000010 M.RVOL: .BLKB 1 ;RELATIVE VOL # OF MOUNTED VOLUME
000011 M.STAT: .BLKB 1 ;VOLUME STATUS
000012 M.VIDP: .BLKW 1 ;VOLUME ID POINTER
000014 M.UCB: .BLKW 1 ;ADDR OF ASSOC UCB OR PUD

000016 S.MVL=. ;SIZE OF MVL NODE

        .PSECT

;
; UNMOUNTED VOLUME AND VOLUME LIST OFFSET DEFINITIONS (UVL)
;
        .ASECT
.=0

```

MTADF\$ (Cont.)

```

000000 L.NXT:  .BLKW  1      ;PTR TO NXT UVL NODE
000002 L.VOL1: .BLKB  1      ;REL VOL # OF 1'ST VOL IN NODE
000003 L.VOL2: .BLKB  1      ;REL VOL # OF 2'ND VOL IN NODE
000004 L.VID1: .BLKB  6      ;VOL ID OF 1'ST VOL IN NODE
000012 L.VID2: .BLKB  6      ;VOL ID OF 2'ND VOL IN NODE

000020 S.UVL=.              ;SIZE OF UVL NODE

                .PSECT

;
; SYSTEM DATA STRUCTURE CONTENT VALUES
;

;
; VSCB VALUES
;
; V.MOU VALUES
;
VM.OLD  =      200      ;OLD .FL300 VOLUME -- VM.BYP WILL ALSO BE SET
VM.BYP  =      100      ;BYPASS LABEL PROCESSING
VM.ULB  =      40       ;UNLABELED TAPE
VM.FSC  =      20       ;OVERRIDE FILE SET ID CHECK
VM.EXC  =      10       ;OVERRIDE EXPRIATION DATE CHECK

;
; V.MST2 VALUES
;
V2.INI  =      1        ;MAG WANTS US TO INITIALIZE NEXT OUTPUT
V2.XH2  =      2        ;THIS FILE HAS NO HDR2, DON'T WRITE EOF2
V2.XH3  =      4        ;THIS FILE HAS NO HDR3, DON'T WRITE EOF3
V2.NH3  =     10        ;DON'T WRITE HDR3/EOX3 LABELS
V2.OAC  =     20        ;OVERRIDE FILE/VOLUME ACCESSIBILITY

;
; V.PSTA VALUES - UNBLOCKED TRANSITION STATE
;
VP.RM   =      2        ;READ DATA MODE
VP.WM   =      4        ;WRITE DATA MODE
VP.UCM  =      6        ;UNLABELLED CREATE POSITIONING MODE
VP.SM   =     10        ;SEARCH MODE
VP.MOU  =     20        ;MOUNT MODE
VP.RWD  =     40        ;REWIND OR VOL VERIFICATION WAIT
VP.VFY  =     VP.RWD
VP.POS  =     100      ;PROCESS IN POSITIONING MODE
                        ;(MULTI-SECTION FILE)

;
; BLOCKED STATE = -(UNBLOCKED TRANSITION STATE VALUES)
;
; PROCESS TIMED OUT BIT 0 = 1
;
VP.TO=1

```


MTADF\$ (Cont.)

```
;  
; NULL WINDOW CONTROL BIT DEFINITIONS  
;  
WI.RDV =      400      ;ACCESSED FOR READ  
WI.WRV =     1000      ;ACCESSED FOR WRITE  
WI.EXT =     2000      ;ACCESSED FOR EXTEND  
WI.LCK =     4000      ;LOCKED  
  
;  
; MVL VALUES IN THE M.STAT FIELD  
;  
MS.VER =     200      ;VOL ID NOT VERIFIED  
MS.RID =      1      ;VOL ID TO BE READ NOT CHECKED  
MS.NMO =      2      ;MOUNT MESSAGE NOT GIVEN YET  
MS.TMO =      4      ;ONE TIMEOUT ALREADY EXPRIED  
MS.EXP =     10      ;EXPIRATION DATE MESSAGE GIVEN  
  
;  
; MISC BITS USED IN MOUNT (STORED IN V.STS)  
;  
MO.OVR =      1      ;OVER RIDE VOL NAME SWITCH  
MO.UIC =      2      ;EXPLICIT UIC GIVEN  
MO.PRO =      4      ;EXPLICIT PROTECTION GIVEN  
MO.160 =     10      ;1600 BPI SPECIFIED
```

PCBDF\$

```

PCBDF$ , ,SYSDEF

;
; PARTITION CONTROL BLOCK OFFSET DEFINITIONS
;
    .ASECT
    .=0
000000 P.LNK: .BLKW 1 ;LINK TO NEXT PARTITION PCB
000002 P.PRI: .BLKB 1 ;PRIORITY OF PARTITION
000003 P.IOC: .BLKB 1 ;I/O + I/O STATUS BLOCK COUNT
000004 P.NAM: .BLKW 2 ;PARTITION NAME IN RAD50
000010 P.SUB: .BLKW 1 ;POINTER TO NEXT SUBPARTITION
000012 P.MAIN: .BLKW 1 ;POINTER TO MAIN PARTITION

    .IF NB SYSDEF

    .IF NDF M$$MGE

P.HDR: ;POINTER TO HEADER CONTROL BLOCK

    .ENDC ;M$$MGE

    .IFTF

000014 P.REL: .BLKW 1 ;STARTING PHYSICAL ADDRESS OF PARTITION
000016 P.BLKS:
000016 P.SIZE: .BLKW 1 ;SIZE OF PARTITION IN:
; UNMAPPED SYSTEMS - BYTES
; MAPPED SYSTEMS - 32 WORD BLOCKS
000020 P.WAIT: .BLKW 1 ;PARTITION WAIT QUEUE LISTHEAD (2 WORDS)
000022 P.SWSZ: .BLKW 1 ;PARTITION SWAP SIZE (SYSTEM ONLY)
000024 P.BUSY: .BLKB 2 ;PARTITION BUSY FLAGS
000026 P.OWN:
000026 P.TCB: .BLKW 1 ;TCB ADDRESS OF OWNER TASK
000030 P.STAT: .BLKW 1 ;PARTITION STATUS FLAGS

    .IFT

    .IF DF M$$MGE

P.HDR: .BLKW 1 ;POINTER TO HEADER CONTROL BLOCK

    .ENDC ;M$$MGE

P.PRO: .BLKW 1 ;PROTECTION WORD [DEWR,DEWR,DEWR,DEWR]
P.ATT: .BLKW 2 ;ATTACHMENT DESCRIPTOR LISTHEAD

    .IF NDF P$$LAS

P.LGTH=P.PRO ;LENGTH OF PARTITION CONTROL BLOCK

    .IFF

P.LGTH= . ;LENGTH OF PARTITION CONTROL BLOCK

    .ENDC ;P$$LAS

    .IFF

    .PSECT

```

PCBDF\$ (Cont.)

```

;
; PARTITION STATUS WORD BIT DEFINITIONS
;
PS.OUT=100000          ;PARTITION IS OUT OF MEMORY(1=YES)
PS.CKP=40000          ;PARTITION CHECKPOINT IN PROGRESS (1=YES)
PS.CKR=20000          ;PARTITION CHECKPOINT IS REQUESTED (1=YES)
PS.CHK=10000          ;PARTITION IS NOT CHECKPOINTABLE (1=YES)
PS.FXD=4000           ;PARTITION IS FIXED (1=YES)
PS.PER=2000           ;PARITY ERROR IN PARTITION (1=YES)
PS.LIO=1000           ;MARKED BY SHUFFLER FOR LONG I/O (1=YES)
PS.NSF=400            ;PARTITION IS NOT SHUFFLEABLE (1=YES)
PS.COM=200            ;LIBRARY OR COMMON BLOCK (1=YES)
PS.PIC=100            ;POSITION INDEPENDENT LIBRARY OR COMMON (1=YES)
PS.SYS=40             ;SYSTEM CONTROLLED PARTITION (1=YES)
PS.DRV=20             ;DRIVER IS LOADED IN PARTITION (1=YES)
PS.DEL=10             ;PARTITION SHOULD BE DELETED WHEN NOT ATTACHED
; (1=YES)
PS.APR=7              ;STARTING APR NUMBER MASK

;
; ATTACHMENT DESCRIPTOR OFFSETS
;
      .ASECT
.=0
000000 A.PCBL: .BLKW 1      ;PCB ATTACHMENT QUEUE THREAD WORD
000002 A.PRI:  .BLKB 1      ;PRIORITY OF ATTACHED TASK
000003 A.IOC:  .BLKB 1      ;I/O COUNT THROUGH THIS DESCRIPTOR
000004 A.TCB:  .BLKW 1      ;TCB ADDRESS OF ATTACHED TASK
000006 A.TCBL: .BLKW 1      ;TCB ATTACHMENT QUEUE THREAD WORD
000010 A.STAT: .BLKB 1      ;STATUS BYTE
000011 A.MPCT: .BLKB 1      ;MAPPING COUNT OF TASK THRU THIS DESCRIPTOR
000012 A.PCB:  .BLKW 1      ;PCB ADDRESS OF ATTACHED TASK

000014 A.LGTH=.           ;LENGTH OF ATTACHMENT DESCRIPTOR

;
; ATTACHMENT DESCRIPTOR STATUS BYTE BIT DEFINITIONS
;
      .PSECT
AS.DEL=10              ;TASK HAS DELETE ACCESS (1=YES)
AS.EXT=4               ;TASK HAS EXTEND ACCESS (1=YES)
AS.WRT=2               ;TASK HAS WRITE ACCESS (1=YES)
AS.RED=1               ;TASK HAS READ ACCESS (1=YES)

      .ENDC ;SYSDEF

```

PKTDF\$

```

;
; ASYNCHRONOUS SYSTEM TRAP CONTROL BLOCK OFFSET DEFINITIONS
;
; SOME POSITIONAL DEPENDENCIES BETWEEN THE OCB AND THE AST CONTROL
; BLOCK ARE RELIED UPON IN THE ROUTINE $FINXT IN THE MODULE SYSXT.
;
      .ASECT
      .=177774
177774 A.KSR5: .BLKW 1 ;SUBROUTINE KISAR5 BIAS (A.CBL=0)
177776 A.DQSR: .BLKW 1 ;DEQUEUE SUBROUTINE ADDRESS (A.CBL=0)
000000 .BLKW 1 ;AST QUEUE THREAD WORD
000002 A.CBL: .BLKW 1 ;LENGTH OF CONTROL BLOCK IN BYTES
;IF A.CBL = 0, THE AST CONTROL BLOCK IS
;TO BE DEALLOCATED BY THE DEQUEUE SUBROUTINE
;POINTED TO BY A.DQSR MAPPED VIA APR 5
;VALUE A.KSR5. THIS IS CURRENTLY USED ONLY
;BY THE FULL DUPLEX TERMINAL DRIVER FOR
;UNSOLICITED CHARACTER ASTS.
;IF THE LOW BYTE OF A.CBL = 0, AND THE
;HIGH BYTE IS NOT = 0, THE AST CONTROL BLOCK
;IS A SPECIFIABLE AST, WITH LENGTH, C.LGTH.
;IF THE HIGH BYTE OF A.CBL = 0 AND THE LOW
;BYTE > 0, THEN THE LOW BYTE IS THE LENGTH
;OF THE AST CONTROL BLOCK. IF THE HIGH BYTE
;OF A.CBL = 0 AND THE LOW BYTE IS NEGATIVE,
;THIS IS A KERNEL AST. SEE BELOW FOR
;A DESCRIPTION OF A.CBL FOR KERNEL ASTS.
000004 A.BYT: .BLKW 1 ;NUMBER OF BYTES TO ALLOCATE ON TASK STACK
000006 A.AST: .BLKW 1 ;AST TRAP ADDRESS
000010 A.NPR: .BLKW 1 ;NUMBER OF AST PARAMETERS
000012 A.PRM: .BLKW 1 ;FIRST AST PARAMETER

;
; THE SPECIFIABLE AST CODES MUST NOT BE 0.
;
AS.FPA=1 ;CODE FOR FLOATING POINT AST
AS.RCA=2 ;CODE FOR RECEIVE DATA AST
AS.RRA=3 ;CODE FOR RECEIVE BY REFERENCE AST
AS.PFA=4 ;CODE FOR POWERFAIL AST
AS.REA=5 ;CODE FOR REQUESTED EXIT (ABORT) AST
AS.CAA=6 ;CODE FOR COMMAND ARRIVAL AST FOR CLIS

;
; ABORTER SUBCODES FOR ABORT AST (AS.REA) TO BE RETURNED ON USER'S
; STACK
;
AB.NPV=1 ;ABORTER IS NONPRIVILEGED (1=YES)
AB.TYP=2 ;ABORT FROM DIRECTIVE (0=YES)
;ABORT FROM CLI COMMAND (1=YES)

```

PKTDF\$ (Cont.)

```

;
; KERNEL AST CONTROL BLOCK DEFINITIONS
;
; THE LOW BYTE OF A.CBL FOR A KERNEL AST HAS THE FOLLOWING FORMAT:
;
;     BIT #200 ALWAYS EQUALS 1
;     BIT #100 IS ZERO IF $SGFIN MUST BE CALLED DURING AST PROCESSING
;     THE REMAINING SIX BITS ARE USED AS THE KERNEL AST TYPE FIELD
;
; BECAUSE THERE ARE ONLY 6 BITS AVAILABLE TO THE KERNEL AST
; INDEX FIELD, ONLY (2**6)-1 KERNEL AST TYPES ARE POSSIBLE.
;
AK.BUF=200           ;BUFFERED I/O COMPLETION AST
AK.OCB=201          ;OFFSPRING EXIT
AK.GBI=202          ;GENERAL BUFFERED I/O AST
AK.GGF=303          ;GROUP GLOBAL RUNDOWN AST

;
; OFFSPRING CONTROL BLOCK DEFINITIONS
;
; SOME POSITIONAL DEPENDENCIES EXIST BETWEEN THE OCB AND THE AST
; CONTROL BLOCK IN ROUTINE $FINXT IN MODULE SYSXT
;
.=0
000000 O.LNK:  .BLKW  1      ;OCB LINK WORD
000002 O.MCRL: .BLKW  1      ;ADDRESS OF MCR COMMAND LINE
000004 O.PTCB: .BLKW  1      ;PARENT TCB ADDRESS
000006 O.AST:  .BLKW  1      ;EXIT AST ADDRESS
000010 O.EFN:  .BLKW  1      ;EXIT EVENT FLAG
000012 O.ESB:  .BLKW  1      ;EXIT STATUS BLOCK VIRTUAL ADDRESS
000014 O.STAT: .BLKW  8.     ;EXIT STATUS BUFFER

000034 O.LGTH=.          ;LENGTH OF OCB

;
; I/O PACKET OFFSET DEFINITIONS
;
;     .ASECT
.=0
000000 I.LNK:  .BLKW  1      ;I/O QUEUE THREAD WORD
000002 I.PRI:  .BLKB  1      ;REQUEST PRIORITY
000003 I.EFN:  .BLKB  1      ;EVENT FLAG NUMBER
000004 I.TCB:  .BLKW  1      ;TCB ADDRESS OF REQUESTOR
000006 I.LN2:  .BLKW  1      ;POINTER TO SECOND LUN WORD
000010 I.UCB:  .BLKW  1      ;POINTER TO UNIT CONTROL BLOCK
000012 I.FCN:  .BLKW  1      ;I/O FUNCTION CODE
000014 I.IOSB: .BLKW  1      ;VIRTUAL ADDRESS OF I/O STATUS BLOCK
000016         .BLKW  1      ;I/O STATUS BLOCK RELOCATON BIAS
000020         .BLKW  1      ;I/O STATUS BLOCK ADDRESS
000022 I.AST:  .BLKW  1      ;AST SERVICE ROUTINE ADDRESS
000024 I.PRM:  .BLKW  1      ;RESERVED FOR MAPPING PARAMETER #1
000026         .BLKW  6      ;PARAMETERS 1 TO 6
000042         .BLKW  1      ;USER MODE DIAGNOSTIC PARAMETER WORD

```

PKTDF\$ (Cont.)

```

000044 I.ATTL=. ;MINIMUM LENGTH OF I/O PACKET (USED BY
;FILE SYSTEM TO CALCULATE MAXIMUM
;NUMBER OF ATTRIBUTES)
000044 I.LGTH=. ;LENGTH OF I/O REQUEST CONTROL BLOCK

;
; GROUP GLOBAL EVENT FLAG CONTROL BLOCK OFFSETS
;
.=0
000000 G.LNK: .BLKW 1 ;LINK WORD
000002 G.GRP: .BLKB 1 ;GROUP NUMBER
000003 G.STAT: .BLKB 1 ;STATUS BYTE
000004 G.CNT: .BLKW 1 ;ACCESS COUNT
000006 G.EFLG: .BLKW 2 ;EVENT FLAGS

000012 G.LGTH=. ;LENGTH OF GROUP GLOBAL CONTROL BLOCK

;
; STATUS BYTE DEFINITIONS
;
GS.DEL=1 ;GROUP MARKED FOR DELETE

;
; EXECUTIVE POOL MONITOR CONTROL FLAGS
;

;
; $POLST IS THE SYNCHRONIZATION WORD BETWEEN THE EXEC AND POOL MONITOR
;
PC.HIH=1 ;HIGH POOL LIMIT CROSSED (1=YES)
PC.LOW=2 ;LOW POOL LIMIT CROSSED (1=YES)
PC.ALF=4 ;FAILED TO ALLOCATE LARGE BLOCK (1=YES)
PC.XAF=10 ;FAILED TO ALLOCATE SMALL BLOCK (1=YES)
PC.XIT=200 ;FORCE POOL MONITOR TASK TO EXIT
PC.NRM=PC.HIH*400 ;POOL TASK INHIBIT BIT FOR HIGH POOL
PC.ALM=PC.LOW*400 ;POOL TASK INHIBIT BIT FOR LOW POOL

;
; $POLFL IS THE POOL USAGE CONTROL WORD
;
PF.INS=40 ;REJECT NONPRIVILEGED INS/RUN/REM
PF.LOG=100 ;LOGINS ARE DISABLED
PF.REQ=200 ;STALL REQUEST OF NONPRIV. TASKS
PF.ALL=177777 ;TAKE ALL POSSIBLE ACTIONS TO SAVE POOL

;
; CLI PARSER BLOCK (CPB) DEFINITIONS
;
.=0

```

PKTDF\$ (Cont.)

```

000000 C.PTCB: .BLKW 1 ;ADDRESS OF CLI'S TCB
000002 C.PNAM: .BLKW 2 ;CLI NAME
000006 C.PSTS: .BLKW 1 ;STATUS MASK
000010 C.PDPL: .BLKB 1 ;LENGTH OF DEFAULT PROMPT
000011 C.PCPL: .BLKB 1 ;LENGTH OF CNTRL/C PROMPT
000012 C.PRMT: ;START OF ASCII PROMPT STRINGS
;THE DEFAULT STRING IS CONCANTENATED
;WITH THE ^C STRING

;
; STATUS BIT DEFINITIONS
;
CP.NUL=1 ;PASS EMPTY COMMAND LINES TO CLI
CP.MSG=2 ;CLI DESIRES SYSTEM MESSAGES
CP.LGO=4 ;CLI WANTS COMMANDS FROM LOGGED OFF TTYS
CP.DSB=10 ;CLI IS DISABLED
CP.PRIV=20 ;USER MUST BE PRIV TO SET TTY TO THIS CLI
CP.SGL=40 ;DON'T HANDLE CONTINUATIONS (M-PLUS ONLY)
CP.NIO=100 ;MCR..., HEL, BYE DO NO I/O TO TTY
;HEL, BYE ALSO DO NOT SET CLI ETC.
CP.RST=200 ;ABILITY TO SET TO THIS CLI IS RESTRICTED
;TO THE CLI ITSELF
CP.EXT=400 ;PASS TASK EXIT PROMPT REQUESTS TO CLI

;
; IDENTIFIER CODES FOR SYSTEM TO CLI MESSAGES.
;
; CODES 0 - 127. ARE RESERVED FOR USE BY DIGITAL,
; CODES 128. - 255. ARE RESERVED FOR USE BY CUSTOMERS
;
CM.INE=1 ;CLI INITIALIZED ENABLED
CM.IND=2 ;CLI INITIALIZED DISABLED
CM.CEN=3 ;CLI ENABLED
CM.CDS=4 ;CLI DISABLED
CM.ELM=5 ;CLI BEING ELIMINATED
CM.EXT=6 ;CLI MUST EXIT IMMEDIATELY
CM.LKT=7 ;NEW TERMINAL LINKED TO CLI
CM.RMT=8. ;TERMINAL REMOVED FROM CLI
CM.MSG=9. ;GENERAL MESSAGE TO CLI

;
; ANCILLARY CONTROL BLOCK (ACB) DEFINITIONS
;
.=0
000000 A.REL: .BLKW 1 ;ACD RELOCATION BIAS
000002 A.DIS: .BLKW 1 ;ACD DISPATCH TABLE POINTER
000004 A.MAS: .BLKW 1 ;ACD FUNCTION MASK
000006 A.NUM: .BLKB 1 ;ACD IDENTIFICATION NUMBER
000007 .BLKB 1 ;RESERVED
000010 A.LIN: .BLKW 1 ;ACD LINK WORD
000012 A.ACC: .BLKB 1 ;ACD ACCESS COUNT
000013 A.STA: .BLKB 1 ;ACD STATUS BYTE

000014 A.LEN1=. ;LENGTH OF PROTOTYPE ACB

```

PKTDF\$ (Cont.)

```

      . = A.LIN                                ; FULL ACB OVERLAPS PROTOTYPE ACB
000010 A.IMAP: .BLKW 1                        ; ACD INTERRUPT BUFFER RELOCATION BIAS
000012 A.IBUF: .BLKW 1                        ; ACD INTERRUPT BUFFER ADDRESS
000014 A.ILEN: .BLKW 1                        ; ACD INTERRUPT BUFFER LENGTH
000016 A.SMAP: .BLKW 1                        ; ACD SYSTEM STATE BUFFER RELOCATION BIAS
000020 A.SBUF: .BLKW 1                        ; ACD SYSTEM STATE BUFFER ADDRESS
000022 A.SLEN: .BLKW 1                        ; ACD SYSTEM STATE BUFFER LENGTH
000024 A.IOS: .BLKW 2                         ; ACD I/O STATUS
000030 A.RES: .BLKW 1                         ; RESERVED FOR USE BY THE ACD

000032 A.LEN2=.                               ; LENGTH OF FULL ACB

;
; DEFINE THE FLAG VALUES IN THE OFFSET U.AFLG
;
UA.ACC=1                                       ; ACCEPT THIS CHARACTER
UA.PRO=2                                       ; PROCESS THIS CHARACTER
UA.ECH=4                                       ; ECHO THIS CHARACTER
UA.TYP=10                                      ; FORCE THIS CHARACTER INTO TYPEAHEAD
UA.SPE=20                                      ; THIS CHARACTER HAS A SPECIAL ECHO
UA.PUT=40                                      ; PUT THIS CHARACTER IN THE INPUT BUFFER
UA.CAL=100                                    ; CALL THE ACD BACK AFTER THE TRANSFER
UA.COM=200                                    ; COMPLETE THE INPUT REQUEST
UA.ALL=400                                    ; ALLOW PROCESSING OF THIS I/O REQUEST
UA.TRA=1000                                   ; TRANSFER CHARS. WHEN I/O COMPLETES

;
; DEFINE THE ACD ENTRY POINTS (OFFSETS INTO THE DISPATCH TABLE)
;
      . = 0
000000 A.ACCE: .BLKW 1                        ; I/O REQUEST ACCEPTANCE ENTRY POINT
000002 A.DEQU: .BLKW 1                        ; I/O REQUEST DEQUEUE ENTRY POINT
000004 A.POWE: .BLKW 1                        ; POWER FAILURE ENTRY POINT
000006 A.INPU: .BLKW 1                        ; INPUT COMPLETION ENTRY POINT
000010 A.OUTP: .BLKW 1                        ; OUTPUT COMPLETION ENTRY POINT
000012 A.CONN: .BLKW 1                        ; CONNECTION ENTRY POINT
000014 A.DISC: .BLKW 1                        ; DISCONNECTION ENTRY POINT
000016 A.RECE: .BLKW 1                        ; INPUT CHARACTER RECEPTION ENTRY POINT
000020 A.PROC: .BLKW 1                        ; INPUT CHARACTER PROCESSING ENTRY POINT
000022 A.CALL: .BLKW 1                        ; CALL ACD BACK AFTER TRANSFER ENTRY POINT

;
; DEFINE THE STATUS BITS IN A.STA OF THE PROTOTYPE ACB
;
AS.DEL=1                                       ; ACD IS MARKED FOR DELETE
AS.DIS=2                                       ; ACD IS DISABLED

      .PSECT

```


SCBDF\$

```

SCBDF$  ,,SYSDEF

;
; STATUS CONTROL BLOCK
;
; THE STATUS CONTROL BLOCK (SCB) DEFINES THE STATUS OF A DEVICE
; CONTROLLER.  THERE IS ONE SCB FOR EACH CONTROLLER IN A SYSTEM.
; THE SCB IS POINTED TO BY UNIT CONTROL BLOCKS.  TO EXPAND ON THE
; TELETYPE EXAMPLE ABOVE, EACH TELETYPE INTERFACED VIA A DL11-A
; WOULD HAVE A SCB SINCE EACH DL11-A IS AN INDEPENDENT INTERFACE
; UNIT.  THE TELETYPE INTERFACED VIA THE DH11 WOULD ALSO EACH HAVE
; AN SCB SINCE THE DH11 IS A SINGLE CONTROLLER BUT MULTIPLEXES MANY
; UNITS IN PARALLEL.
;
      .ASECT
      .=177772
177772 S.RCNT: .BLKB  1      ;NUMBER OF REGISTERS TO COPY ON ERROR
177773 S.OFF:  .BLKB  1      ;OFFSET TO FIRST DEVICE REGISTER
177774 S.BMSV: .BLKW  1      ;SAVED I/O ACTIVE BITMAP AND POINTER TO EMB
177776 S.BMSK: .BLKW  1      ;DEVICE I/O ACTIVE BIT MASK
000000 S.LHD:  .BLKW  2      ;CONTROLLER I/O QUEUE LISTHEAD
000004 S.PRI:  .BLKB  1      ;DEVICE PRIORITY
000005 S.VCT:  .BLKB  1      ;INTERRUPT VECTOR ADDRESS /4
000006 S.CTM:  .BLKB  1      ;CURRENT TIMEOUT COUNT
000007 S.ITM:  .BLKB  1      ;INITIAL TIMEOUT COUNT
000010 S.CON:  .BLKB  1      ;CONTROLLER INDEX
000011 S.STS:  .BLKB  1      ;CONTROLLER STATUS (0=IDLE,1=BUSY)
000012 S.CSR:  .BLKW  1      ;ADDRESS OF CONTROL STATUS REGISTER
000014 S.PKT:  .BLKW  1      ;ADDRESS OF CURRENT I/O PACKET
000016 S.FRK:  .BLKW  1      ;FORK BLOCK LINK WORD
000020 S.DMCS:  .BLKW  1      ;DM11-BB CSR FOR FDX TTDRV
000020          .BLKW  1      ;FORK-PC
000022          .BLKW  1      ;FORK-R5
000024          .BLKW  1      ;FORK-R4

      .IF NB  SYSDEF

      .IF DF  L$$DRV & M$$MGE

      .BLKW  1      ;FORK-DRIVER RELOCATION BASE

      .ENDC  ;L$$DRV & M$$MGE

S.CCB:          ;MIXED MASSBUS CHANNEL CONTROL BLOCK
S.MPR:  .BLKW  6      ;11/70 EXTENDED MEMORY UNIBUS DEVICE C-BLOCK
          .BLKW  1      ;BUFFER WORD
S.UMHD: .BLKW  2      ;LIST HEAD FOR UMR ASSIGNMENT BLOCK(S)
S.UMCT: .BLKW  1      ;COUNT OF AVAILABLE UMR ASSIGNMENT BLOCK(S)

      .IFF

      .PSECT

;
; STATUS CONTROL BLOCK PRIORITY BYTE CONDITION CODE STATUS BIT
; DEFINITIONS
;
SP.EIP=1          ;ERROR IN PROGRESS (1=YES)
SP.ENB=2          ;ERROR LOGGING ENABLED (0=YES)
SP.LOG=4          ;ERROR LOGGING AVAILABLE (1=YES)
SPARE=10         ;SPARE BIT

```

SCBDF\$ (Cont.)

```

;
; MAPPING ASSIGNMENT BLOCK (FOR UNIBUS MAPPING REGISTER ASSIGNMENT)
;
      .ASECT
      .=0
000000 M.LNK:  .BLKW  1      ;LINK WORD
000002 M.UMRA: .BLKW  1      ;ADDRESS OF FIRST ASSIGNED UMR
000004 M.UMRN: .BLKW  1      ;NUMBER OF UMR'S ASSIGNED * 4
000006 M.UMVL: .BLKW  1      ;LOW 16 BITS MAPPED BY 1ST ASSIGNED UMR
000010 M.UMVH: .BLKB  1      ;HIGH 2 BITS MAPPED IN BITS 4 AND 5
000011 M.BFVH: .BLKB  1      ;HIGH 6 BITS OF PHYSICAL BUFFER ADDRESS
000012 M.BFVL: .BLKW  1      ;LOW 16 BITS OF PHYSICAL BUFFER ADDRESS

000014 M.LGTH=.              ;LENGTH OF MAPPING ASSIGNMENT BLOCK

      .ENDC  ;SYSDEF

      .PSECT
    
```

TCBDF\$

TCBDF\$, ,SYSDEF

```

;
; TASK CONTROL BLOCK OFFSET AND STATUS DEFINITIONS
;
; TASK CONTROL BLOCK
;
      .ASECT
      .=0
000000 T.LNK:  .BLKW  1      ;UTILITY LINK WORD
000002 T.PRI:  .BLKB  1      ;TASK PRIORITY
000003 T.IOC:  .BLKB  1      ;I/O PENDING COUNT
000004 T.CPCB: .BLKW  1      ;POINTER TO CHECKPOINT PCB
000006 T.NAM:  .BLKW  2      ;TASK NAME IN RAD50
000012 T.RCVL: .BLKW  2      ;RECEIVE QUEUE LISTHEAD
000016 T.ASTL: .BLKW  2      ;AST QUEUE LISTHEAD
000022 T.EFLG: .BLKW  2      ;TASK LOCAL EVENT FLAGS 1-32
000026 T.UCB:  .BLKW  1      ;UCB ADDRESS FOR PSEUDO DEVICE 'TI'
000030 T.TCBL: .BLKW  1      ;TASK LIST THREAD WORD
000032 T.STAT: .BLKW  1      ;FIRST STATUS WORD (BLOCKING BITS)
000034 T.ST2:  .BLKW  1      ;SECOND STATUS WORD (STATE BITS)
000036 T.ST3:  .BLKW  1      ;THIRD STATUS WORD (ATTRIBUTE BITS)
000040 T.DPRI: .BLKB  1      ;TASK'S DEFAULT PRIORITY
000041 T.LBN:  .BLKB  3      ;LEN OF TASK LOAD IMAGE
000044 T.LDV:  .BLKW  1      ;UCB ADDRESS OF LOAD DEVICE
000046 T.PCB:  .BLKW  1      ;PCB ADDRESS OF TASK PARTITION
000050 T.MXSZ: .BLKW  1      ;MAXIMUM SIZE OF TASK IMAGE (MAPPED ONLY)
000052 T.ACTL: .BLKW  1      ;ADDRESS OF NEXT TASK IN ACTIVE LIST
000054 T.SAST: .BLKW  1      ;SPECIFIED AST LISTHEAD
000056      .BLKB  1      ;RESERVED BYTE (CURRENTLY MUST BE 0)
000057 T.TIO:  .BLKB  1      ;BUFFERED I/O COUNT
000060 T.TKSZ: .BLKW  1      ;TASK SIZE (FROM L$BLDZ IN LABEL BLK) IN:
;          UNMAPPED SYSTEMS - BYTES
;          MAPPED SYSTEMS   - 32 WORD BLOCKS
;TASK SIZE (FROM L$BMXZ IN LABEL BLK)
;FOR RSX11S SYSTEMS ONLY
;          MAPPED SYSTEMS   - 32 WORD BLOCKS
;          UNMAPPED SYSTEMS - BYTES

$$$=.      ;MARK START OF PLAS AREA
T.ATT:  .BLKW  2      ;ATTACHMENT DESCRIPTOR LISTHEAD
T.OFF:  .BLKW  1      ;OFFSET TO TASK IMAGE IN PARTITION
;IF A$$HDR IS DEFINED, THIS WORD ALSO
;INCLUDES THE LENGTH OF THE ALTERNATE
;HEADER REFRESH AREA STORED IN T.HDLN
      .BLKB  1      ;RESERVED
T.SRCT: .BLKB  1      ;SREF WITH EFN COUNT IN ALL RECEIVE QUEUES
T.RRFL: .BLKW  2      ;RECEIVE BY REFERENCE LISTHEAD

      .IF NDF P$$LAS
      .=$$$      ;POINT TO START OF PLAS AREA
      .ENDC      ;P$$LAS

```

TCBDF\$ (Cont.)

```

        .IF NB SYSDEF

$$$=.
T.OCBH: .BLKW 2 ;MARK START OF PARENT OFFSPRING TASKING AREA
T.RDCT: .BLKW 1 ;OFFSPRING CONTROL BLOCK LISTHEAD
        ;OUTSTANDING OFFSPRING COUNT

        .IF NDF P$$OFF
.=$$$ ;POINT TO START OF PARENT OFFSPRING AREA
        .ENDC ;P$$OFF

$$$=.
T.EFLM: .BLKW 2 ;MARK START OF EVENT FLAG MASK AREA
        ;EVENT FLAG MASK WORD
        ;EVENT FLAG MASK ADDRESS

        .IF NDF S$$TOP & T$$BUF
.=$$$ ;POINT TO START OF EVENT FLAG MASK AREA
        .ENDC ;S$$TOP & T$$BUF

$$$=.
T.HDLN: .BLKB 1 ;TASK HEADER LENGTH IN 32-WORD BLOCKS

        .IF NDF A$$HDR
.=$$$ ;NOT SUPPORTED IF NDF
        .ENDC ;A$$HDR

$$$=.
T.GGF: .BLKB 1 ;GROUP GLOBAL USE COUNT FOR TASK

        .IF NDF R$$SND & G$$EFN ! A$$CLI & G$$EFN
.=$$$
        .ENDC ;R$$SND & G$$EFN ! A$$CLI & G$$EFN

        .EVEN

T.LGTH=. ;LENGTH OF TASK CONTROL BLOCK
T.EXT=0 ;LENGTH OF TCB EXTENSION

        .IFF

;
; TASK STATUS DEFINITIONS
;
; FIRST STATUS WORD (BLOCKING BITS)
;
TS.EXE=100000 ;TASK NOT IN EXECUTION (1=YES)
TS.RDN=40000 ;I/O RUN DOWN IN PROGRESS (1=YES)
TS.MSG=20000 ;ABORT MESSAGE BEING OUTPUT (1=YES)
TS.NRP=10000 ;TASK MAPPED TO NONRESIDENT PARTITION (1=YES)
TS.RUN=4000 ;TASK IS RUNNING ON ANOTHER PROCESSOR (1=YES)
TS.HLD=2000 ;TASK HALF-LOADED BY TASK LOADER
TS.STP=1000 ;TASK EXTERNALLY BLOCKED VIA CLI COMMAND
TS.OUT=400 ;TASK IS OUT OF MEMORY (1=YES)
TS.CKP=200 ;TASK IS BEING CHECKPOINTED (1=YES)
TS.CKR=100 ;TASK CHECKPOINT REQUESTED (1=YES)

```

TCBDF\$ (Cont.)

```

;
; TASK BLOCKING STATUS MASK
;
TS.BLK=TS.CKP!TS.CKR!TS.EXE!TS.MSG!TS.NRP!TS.OUT!TS.RDN!TS.STP

;
; SECOND STATUS WORD (STATE BITS)
;
T2.AST=100000          ;AST IN PROGRESS (1=YES)
T2.DST=40000          ;AST RECOGNITION DISABLED (1=YES)
T2.CHK=20000          ;TASK NOT CHECKPOINTABLE (1=YES)
T2.CKD=10000          ;CHECKPOINTING DISABLED (1=YES)
T2.SEF=4000           ;TASK STOPPED FOR EVENT FLAGS (1=YES)
T2.FXD=2000           ;TASK FIXED IN MEMORY (1=YES)
T2.REX=1000           ;ABORT AST EFFECTED OR IN PROGRESS (1=YES)
T2.CAF=400            ;DYN CHECKPOINT SPACE ALLOCATION FAILURE
T2.HLT=200            ;TASK IS BEING HALTED (1=YES)
T2.ABO=100            ;TASK MARKED FOR ABORT (1=YES)
T2.STP=40             ;SAVED T2.STP ON AST IN PROGRESS
T2.STP=20             ;TASK STOPPED (1=YES)
T2.SPN=10             ;SAVED T2.SPN ON AST IN PROGRESS
T2.SPN=4              ;TASK SUSPENDED (1=YES)
T2.WFR=2              ;SAVED T2.WFR ON AST IN PROGRESS
T2.WFR=1              ;TASK IN WAITFOR STATE (1=YES)

;
; THIRD STATUS WORD (ATTRIBUTE BITS)
;
T3.ACP=100000          ;ANCILLARY CONTROL PROCESSOR (1=YES)
T3.PMD=40000          ;DUMP TASK ON SYNCHRONOUS ABORT (0=YES)
T3.REM=20000          ;REMOVE TASK ON EXIT (1=YES)
T3.PRIV=10000         ;TASK IS PRIVILEGED (1=YES)
T3.MCR=4000           ;TASK REQUESTED AS EXTERNAL MCR FUNCTION(1=YES)
T3.SLV=2000           ;TASK IS A SLAVE TASK (1=YES)
T3.CLI=1000           ;TASK IS A COMMAND LINE INTERPRETER (1=YES)
T3.RST=400            ;TASK IS RESTRICTED (1=YES)
T3.NSD=200            ;TASK DOES NOT ALLOW SEND DATA
T3.CAL=100            ;TASK HAS CHECKPOINT SPACE IN TASK IMAGE
T3.ROV=40             ;TASK HAS RESIDENT OVERLAYS
T3.NET=20             ;NETWORK PROTOCOL LEVEL
T3.GFL=10             ;TASK HAS ITS GRP GBL EVENT FLAGS LOCKED
; =4                  ;RESERVED FOR FUTURE USE
T3.SWS=2              ;RESERVED FOR USE BY SOFTWARE SERVICES
; =1                  ;RESERVED FOR FUTURE USE

.ENDC ;SYSDEF

.PSECT

```

UCBDF\$

```

UCBDF$ , ,TTDEF,SYSDEF

;
; UNIT CONTROL BLOCK
;
; THE UNIT CONTROL BLOCK (UCB) DEFINES THE STATUS OF AN INDIVIDUAL
; DEVICE UNIT AND IS THE CONTROL BLOCK THAT IS POINTED TO BY THE
; FIRST WORD OF AN ASSIGNED LUN. THERE IS ONE UCB FOR EACH DEVICE
; UNIT OF EACH DCB. THE UCB'S ASSOCIATED WITH A PARTICULAR DCB ARE
; CONTIGUOUS IN MEMORY AND ARE POINTED TO BY THE DCB. UCB'S ARE
; VARIABLE LENGTH BETWEEN DCB'S BUT ARE OF THE SAME LENGTH FOR A
; SPECIFIC DCB. TO FINISH THE TELETYPE EXAMPLE ABOVE, EACH UNIT ON
; BOTH INTERFACES WOULD HAVE A UCB.
;
      .ASECT
      .IF NB  SYSDEF
      .IF DF  E$$DVC
      .IF DF  M$$MUP  ;IS U.OWN THERE?
.=177766
      .IFF
.=177770
      .ENDC  ;M$$MUP

U.IOC:  .BLKW  2      ;I/O COUNT SINCE MOUNT (ERROR LOG DEVS ONLY)
U.ERSL: .BLKB  1      ;SOFT ERROR LIMIT
U.ERHL: .BLKB  1      ;HARD ERROR LIMIT
U.ERSC: .BLKB  1      ;SOFT ERROR COUNT
U.ERHC: .BLKB  1      ;HARD ERROR COUNT

      .ENDC  ;E$$DVC
      .ENDC  ;SYSDEF

.=177772
177772 U.MUP:          ;MULTIUSER PROTECTION FLAG WORD
177772 U.CLI:  .BLKW  1      ;TCB OF COMMAND LINE INTERPRETER
177774 U.LUIC: .BLKW  1      ;LOGIN UIC - MULTI USER SYSTEMS ONLY
177776 U.OWN:  .BLKW  1      ;OWNING TERMINAL - MULTI USER SYSTEMS ONLY
000000 U.DCB:  .BLKW  1      ;BACK POINTER TO DCB
000002 U.RED:  .BLKW  1      ;POINTER TO REDIRECT UNIT UCB
000004 U.CTL:  .BLKB  1      ;CONTROL PROCESSING FLAGS
000005 U.STS:  .BLKB  1      ;UNIT STATUS
000006 U.UNIT: .BLKB  1      ;PHYSICAL UNIT NUMBER
000007 U.ST2:  .BLKB  1      ;UNIT STATUS EXTENSION
000010 U.CW1:  .BLKW  1      ;FIRST DEVICE CHARACTERISTICS WORD
000012 U.CW2:  .BLKW  1      ;SECOND DEVICE CHARACTERISTICS WORD
000014 U.CW3:  .BLKW  1      ;THIRD DEVICE CHARACTERISTICS WORD
000016 U.CW4:  .BLKW  1      ;FOURTH DEVICE CHARACTERISTICS WORD
000020 U.SCB:  .BLKW  1      ;POINTER TO SCB
000022 U.ATT:  .BLKW  1      ;TCB ADDRESS OF ATTACHED TASK
000024 U.BUF:  .BLKW  1      ;RELOCATION BIAS OF CURRENT I/O REQUEST
000026          .BLKW  1      ;BUFFER ADDRESS OF CURRENT I/O REQUEST
000030 U.CNT:  .BLKW  1      ;BYTE COUNT OF CURRENT I/O REQUEST

```

UCBDF\$ (Cont.)

```

000032 U.ACP=U.CNT+2           ;ADDRESS OF TCB OF MOUNTED ACP
000034 U.VCB=U.CNT+4         ;ADDRESS OF VOLUME CONTROL BLOCK
000032 U.CBF=U.CNT+2         ;CONTROL BUFFER RELOCATION AND ADDRESS
000032 U.KCSR=U.CNT+2        ;CSR ADDRESS OF KMC-11
000034 U.KCS6=U.KCSR+2      ;CSR+6 OF KMC-11

;
;       MAGTAPE DRIVER DEFINITIONS
;
000036 U.SPC=U.CNT+6         ;SPACING COUNT
000036 U.SUB=U.CNT+6         ;SUBCONTROLLER, PHYSICAL UNIT #.
000040 U.FNUM=U.CNT+10       ;FORMATTER NUMBER
000042 U.FCDE=U.CNT+12      ;FUNCTION CODE AND INDEX

;
;       MSCP DISK DRIVER UCB OFFSETS
;
000036 U.UTMO=U.VCB+2        ;UNIT COMMAND TIME OUT
000040 U.LHD=U.VCB+4         ;UNIT OUTSTANDING I/O PACKET LISTHEAD
000044 U.BPKT=U.VCB+10      ;UNIT BAD BLOCK PACKET WAITING LIST

;
;       CHARACTERISTICS OBTAINED FROM "GET UNIT STATUS" END PACKETS
;
000050 U.MLUN=U.VCB+14       ;MULTI-UNIT CODE
000052 U.UNFL=U.VCB+16       ;UNIT FLAGS
000054 U.HSTI=U.VCB+20      ;HOST IDENTIFIER
000060 U.UNTI=U.VCB+24       ;UNIT IDENTIFIER
000070 U.MEDI=U.VCB+34       ;MEDIA IDENTIFIER
000074 U.SHUN=U.VCB+40       ;SHADOW UNIT
000076 U.SHST=U.VCB+42      ;SHADOW UNIT STATUS
000100 U.TRCK=U.VCB+44       ;UNIT TRACK SIZE
000102 U.GRP=U.VCB+46       ;UNIT GROUP SIZE
000104 U.CYL=U.VCB+50       ;UNIT CYLINDER SIZE
000110 U.RCTS=U.VCB+54       ;UNIT RCT TABLE SIZE
000112 U.RBNS=U.VCB+56      ;UNIT RBN 'S / TRACK
000113 U.RCTC=U.VCB+57      ;UNIT RCT COPIES

;
;       CHARACTERISTICS OBTAINED FROM "ONLINE" OR "SET UNIT CHARACTERISTICS"
;       END PACKETS
;
000114 U.UNSZ=U.VCB+60       ;UNIT SIZE
000120 U.VSER=U.VCB+64       ;VOLUME SERIAL NUMBER

;
;       CHARACTERISTICS STORED FROM "GET COMMAND STATUS" END PACKETS
;
000124 U.OTRF=U.VCB+70       ;OUTSTANDING COMMAND STATUS REQUEST REGISTER
000126 U.CMST=U.VCB+72      ;COMMAND STATUS PROGRESS REGISTER

```

UCBDF\$ (Cont.)

```

;
; TERMINAL DRIVER DEFINITIONS
;
.=U.BUF
000024 U.TUX: .BLKW 1 ;POINTER TO UCB EXTENSION (UCBX)
000026 U.TSTA: .BLKW 3 ;STATUS TRIPLE-WORD
000034 U.TTAB: .BLKW 1 ;IF 0: U.TTAB+1 IS SINGLE-CHARACTER TYPE-AHEAD
; BUFFER, CURRENTLY EMPTY
;IF ODD: U.TTAB+1 IS SINGLE-CHARACTER
; TYPE-AHEAD BUFFER AND HOLDS A
; CHARACTER
;IF NON-0 AND EVEN: POINTER TO MULTI-CHARACTER
; TYPE-AHEAD BUFFER
000036 U.TLPP: .BLKB 1 ;LINES PER PAGE
000037 U.TFRQ: .BLKB 1 ;FORK REQUEST BYTE
000040 U.TFLK: .BLKW 1 ;FORK LIST LINK WORD
000042 U.TCHP: .BLKB 1 ;CURRENT HORIZONTAL POSITION
000043 U.TCVP: .BLKB 1 ;CURRENT VERTICAL POSITION
000044 U.UIC: .BLKW 1 ;TERMINAL UIC
000046 U.TTYP: .BLKB 1 ;TERMINAL TYPE
000047 U.TMTI: .BLKB 1 ;MODEM TIMER
000050 U.CTYP: .BLKW 1 ;CONTROLLER TYPE
000052 U.ACB: .BLKW 1 ;ANCILLARY CONTROL DRIVER BLOCK ADDR
000054 U.AFLG: .BLKW 1 ;ANCILLARY CONTROL DRIVER FLAGS WORD
000056 U.ADMA: .BLKW 1 ;ANCILLARY CONTROL DRIVER DMA BUFFER

;
; CONSOLE DRIVER DEFINITIONS
;
.=U.BUF+2
000026 U.CTCB: .BLKW 1 ;ADDRESS OF CONSOLE LOGGER TCB
000030 U.COTQ: .BLKW 2 ;I/O PACKET LIST QUEUE
000034 U.RED2: .BLKW 1 ;REDIRECT UCB ADDRESS

;
; DEFINE BITS IN STATUS WORD 1 (U.TSTA)
;
S1.RST=1 ;READ WITH SPECIAL TERMINATORS IN PROGRESS
S1.RUB=2 ;RUBOUT SEQUENCE IN PROGRESS (NON-SCOPE)
S1.ESC=4 ;ESCAPE SEQUENCE IN PROGRESS
S1.RAL=10 ;READ ALL IN PROGRESS
S1.RNE=20 ;ECHO SUPPRESSED
S1.CTO=40 ;OUTPUT STOPPED BY CTRL-O
S1.OBY=100 ;OUTPUT BUSY
S1.IBY=200 ;INPUT BUSY
S1.BEL=400 ;BELL PENDING
S1.DPR=1000 ;DEFER PROCESSING OF CHAR. IN U.TECB
S1.DEC=2000 ;DEFER ECHO OF CHAR. IN U.TECB
S1.DSI=4000 ;INPUT PROCESSING DISABLED
S1.CTS=10000 ;OUTPUT STOPPED BY CTRL-S
S1.USI=20000 ;UNSOLICITED INPUT IN PROGRESS
;BIT 14 RESERVED FOR NON-BUFFERED OUTPUT
S1.OBF=40000 ;BUFFERED OUTPUT IN PROGRESS
S1.IBF=100000 ;BUFFERED INPUT IN PROGRESS

```


UCBDF\$ (Cont.)

```

;
; DEFINE BITS IN STATUS WORD 2 (U.TSTA+2)
;
S2.ACR=1           ;WRAP-AROUND (AUTOMATIC CR-LF) REQUIRED
S2.WRA=6           ;CONTEXT FOR WRAP-AROUND
S2.WRB=2           ;LOW BIT IN S2.WRA BIT PATTERN
S2.CR=10          ;TRAILING CR REQUIRED ON OUTPUT
S2.BRQ=20         ;BREAK-THROUGH-WRITE REQUEST IN QUEUE
S2.SRQ=40         ;SPECIAL REQUEST IN QUEUE
                  ;(IO.ATT, IO.DET, SF.SMC)
S2.ORQ=100        ;OUTPUT REQUEST IN QUEUE (MUST = S1.OBY)
S2.IRQ=200        ;INPUT REQUEST IN QUEUE (MUST = S1.IBY)
S2.HFL=3400       ;HORIZONTAL FILL REQUIREMENT
S2.VFL=4000       ;VERTICAL FILL REQUIREMENT
S2.HHT=10000      ;HARDWARE HORIZONTAL TAB PRESENT
S2.HFF=20000      ;HARDWARE FORM-FEED PRESENT
S2.FLF=40000      ;FORCE LINE FEED BEFORE NEXT ECHO
S2.FDX=100000     ;LINE IS IN FULL DUPLEX MODE

;
; DEFINE BITS IN STATUS WORD 3 (U.TSTA+4)
;
S3.RAL=10         ;TERMINAL IS IN READ-PASS-ALL MODE
                  ;(S3.RAL MUST = S1.RAL)
S3.RPO=20         ;READ W/PROMPT OUTPUT IN PROGRESS
S3.WES=40         ;TASK WANTS ESCAPE SEQUENCES
S3.TAB=100        ;TYPE-AHEAD BUFFER ALLOCATION REQUESTED
S3.8BC=200        ;PASS 8 BITS ON INPUT
S3.RCU=400        ;RESTORE CURSOR (MUST = TF.RCU*400)
S3.ABD=1000       ;AUTO-BAUD SPEED DETECTION ENABLED
S3.ABP=2000       ;AUTO-BAUD SPEED DETECTION IN PROGRESS
S3.WAL=4000       ;WRITE-PASS-ALL (MUST = TF.WAL*400)
S3.VER=10000      ;LAST CHAR. IN TYPE-AHEAD BUFFER
                  ;HAS PARITY ERROR
S3.BCC=20000      ;LAST CHAR. IN TYPE-AHEAD BUFFER
                  ;HAS FRAMING ERROR
S3.DAO=40000      ;LAST CHAR. IN TYPE-AHEAD BUFFER
                  ;HAS DATA OVERRUN ERROR
                  ;NOTE - THE 3 BITS ABOVE MUST CORRESPOND
                  ;TO THE RESPECTIVE ERROR FLAGS IN THE
                  ;HARDWARE RECEIVE BUFFER
S3.PCU=100000     ;POSITION CURSOR (MUST = TF.PCU*400)

.PSECT

```

UCBDF\$ (Cont.)

```

;
; DEVICE TABLE STATUS DEFINITIONS
;
; DEVICE CHARACTERISTICS WORD 1 (U.CW1) DEVICE TYPE DEFINITION BITS.
;
DV.REC=1           ;RECORD ORIENTED DEVICE (1=YES)
DV.CCL=2           ;CARRIAGE CONTROL DEVICE (1=YES)
DV.TTY=4           ;TERMINAL DEVICE (1=YES)
DV.DIR=10          ;FILE STRUCTURED DEVICE (1=YES)
DV.SDI=20          ;SINGLE DIRECTORY DEVICE (1=YES)
DV.SQD=40          ;SEQUENTIAL DEVICE (1=YES)
DV.MSD=100         ;MASS STORAGE DEVICE (1=YES)
DV.UMD=200         ;USER MODE DIAGNOSTICS SUPPORTED (1=YES)
DV.MBC=400         ;DEVICE IS ON MASSBUS CONTROLLER (1=YES)
DV.EXT=400         ;DEVICE ON EXTENDED ADDRESSING CONTROLLER
DV.SWL=1000        ;UNIT SOFTWARE WRITE LOCKED (1=YES)
DV.ISP=2000        ;INPUT SPOOLED DEVICE (1=YES)
DV.OSP=4000        ;OUTPUT SPOOLED DEVICE (1=YES)
DV.PSE=10000       ;PSEUDO DEVICE (1=YES)
DV.COM=20000       ;DEVICE IS MOUNTABLE AS COM CHANNEL (1=YES)
DV.F11=40000       ;DEVICE IS MOUNTABLE AS F11 DEVICE (1=YES)
DV.MNT=100000      ;DEVICE IS MOUNTABLE (1=YES)

;
; TERMINAL DEPENDENT CHARACTERISTICS WORD 2 (U.CW2) BIT DEFINITIONS
;
U2.DH1=100000      ;UNIT IS A MULTIPLEXER (1=YES)
U2.DJ1=40000       ;UNIT IS A DJ11 (1=YES)
U2.RMT=20000       ;UNIT IS REMOTE (1=YES)
U2.HFF=10000       ;UNIT HANDLES HARDWARE FORM FEEDS (1=YES)
U2.L8S=10000       ;OLD NAME FOR U2.HFF
U2.NEC=4000        ;DON'T ECHO SOLICITED INPUT (1=YES)
U2.CRT=2000        ;UNIT IS A CRT (1=YES)
U2.ESC=1000        ;UNIT GENERATES ESCAPE SEQUENCES (1=YES)
U2.LOG=400         ;USER LOGGED ON TERMINAL (0=YES)
U2.SLV=200         ;UNIT IS A SLAVE TERMINAL (1=YES)
U2.DZ1=100         ;UNIT IS A DZ11 (1=YES)
U2.HLD=40          ;TERMINAL IS IN HOLD SCREEN MODE (1=YES)
U2.AT.=20          ;MCR COMMAND AT. BEING PROCESSED (1=YES)
U2.PRV=10          ;UNIT IS A PRIVILEGED TERMINAL (1=YES)
U2.L3S=4           ;UNIT IS A LA30S TERMINAL (1=YES)
U2.SCS=4           ;SCS-11 COMMAND TERMINAL (1=YES)
U2.VT5=2           ;UNIT IS A VT05B TERMINAL (1=YES)
U2.LWC=1           ;LOWER CASE TO UPPER CASE CONVERSION (0=YES)

;
; BIT DEFINITIONS FOR U.MUP (SYSTEMS WITH ALTERNATE CLI SUPPORT ONLY)
;
UM.OVR=1           ;OVERRIDE CLI INDICATOR
UM.CLI=36          ;CLI INDICATOR BITS
UM.DSB=200        ;TERMINAL DISABLED SINCE CLI ELIMINATED
UM.NBR=400        ;NO BROADCAST

```

UCBDF\$ (Cont.)

```

;
; RH11-RS03/RS04 CHARACTERISTICS WORD 2 (U.CW2) BIT DEFINITIONS
;
U2.R04=100000          ;UNIT IS A RS04 (1=YES)

;
; RH11-TU16 CHARACTERISTICS WORD 2 (U.CW2) BIT DEFINITIONS
;
U2.7CH=10000          ;UNIT IS A 7 CHANNEL DRIVE (1=YES)

;
; TERMINAL DEPENDENT CHARACTERISTICS WORD 3 (U.CW3) BIT DEFINITIONS
;
U3.UPC=20000          ;UPCASE OUTPUT FLAG

;
; TERMINAL DEPENDENT CHARACTERISTICS WORD 4 (U.CW4) BIT DEFINITIONS
;
U4.CR=100              ;LOOK FOR CARRIAGE RETURN

;
; UNIT CONTROL PROCESSING FLAG DEFINITIONS
;
UC.ALG=200              ;BYTE ALIGNMENT ALLOWED (1=NO)
UC.NPR=100              ;DEVICE IS AN NPR DEVICE (1=YES)
UC.QUE=40               ;CALL DRIVER BEFORE QUEUING (1=YES)
UC.PWF=20               ;CALL DRIVER AT POWERFAIL ALWAYS (1=YES)
UC.ATT=10               ;CALL DRIVER ON ATTACH/DETACH (1=YES)
UC.KIL=4                ;CALL DRIVER AT I/O KILL ALWAYS (1=YES)
UC.LGH=3                ;TRANSFER LENGTH MASK BITS

;
; UNIT STATUS BIT DEFINITIONS
;
US.BSY=200              ;UNIT IS BUSY (1=YES)
US.MNT=100              ;UNIT IS MOUNTED (0=YES)
US.FOR=40               ;UNIT IS MOUNTED AS FOREIGN VOLUME (1=YES)
US.MDM=20               ;UNIT IS MARKED FOR DISMOUNT (1=YES)
US.PWF=10               ;POWERFAIL OCCURRED (1=YES)

;
; CARD READER DEPENDENT UNIT STATUS BIT DEFINITIONS
;
US.ABO=1                ;UNIT IS MARKED FOR ABORT IF NOT READY (1=YES)
US.MDE=2                ;UNIT IS IN 029 TRANSLATION NODE (1=YES)

;
; FILES-11 DEPENDENT UNIT STATUS BITS
;
US.WCK=10               ;WRITE CHECK ENABLED (1=YES)
US.SPU=2                ;UNIT IS SPINNING UP (1=YES)
US.VV=1                 ;VOLUME VALID IS SET (1=YES)

```

RSX-11M SYSTEM DATA STRUCTURES AND SYMBOLIC DEFINITIONS

UCBDF\$ (Cont.)

```

;
; KMC-11-LP DEPDENDENT UNIT STATUS BITS
;
US.KPF=1                ;KMC-11 POWERFAIL INTERLOCK

;
; TERMINAL DEPENDENT UNIT STATUS BIT DEFINITIONS
;
    .IF NB TTDEF
    .IF DF T$$CPW

US.CRW=4                ;UNIT IS WAITING FOR CARRIER (1=YES)
US.DSB=2                ;UNIT IS DISABLED (1=YES)
US.OIU=1                ;OUTPUT INTERRUPT IS UNEXPECTED ON UNIT (1=YES)

    .IFF ;T$$CPW

US.DSB=10               ;UNIT IS DISABLED (1=YES)
US.CRW=4                ;UNIT IS WAITING FOR CARRIER (1=YES)
US.ECH=2                ;UNIT HAS ECHO IN PROGRESS (1=YES)
US.OUT=1                ;UNIT IS EXPECTING OUTPUT INTERRUPT (1=YES)

    .ENDC ;T$$CPW

    .ENDC ;TTDEF

;
; LPS11 DEPENDENT UNIT STATUS BIT DEFINITIONS
;
US.FRK=2                ;FORK IN PROGRESS (1=YES)
US.SHR=1                ;SHAREABLE FUNCTION IN PROGRESS (0=YES)

;
; MAGTAPE DEPENDANT UNIT STATUS BITS
;
US.LAB=4                ;UNIT HAS LABELED TAPE ON IT (1=YES)
US.BSP=2                ;INTERNAL BACKSPACE IN PROGRESS (1=YES)

;
; UNIT STATUS EXTENSION (U.ST2) BIT DEFINITIONS
;
US.OFL=1                ;UNIT OFFLINE (1=YES)
US.RED=2                ;UNIT REDIRECTABLE (0=YES)
US.PUB=4                ;UNIT IS PUBLIC DEVICE (1=YES)
US.UMD=10               ;UNIT ATTACHED FOR DIAGNOSTICS (1=YES)

;
; MAG TAPE DENS SUPPORT IDENT IN CHAR WORD 3 (U.CW3) DEFENITION
;   ASSIGNMENTS PER NUMERICAL SEQUENCE 0 - 255.
;
UD.UNS=0                ;UNSUPPORTED
UD.200=1                ; 200BPI, 7 TRACK
UD.556=2                ; 556BPI, 7 TRACK

```

UCBDF\$ (Cont.)

UD.800=3	; 800BPI, 7 OR 9 TRACK
UD.160=4	;1600BPI, 9 TRACK
UD.625=5	;6250BPI, 9 TRACK

APPENDIX C

RSX-11M-PLUS SYSTEM DATA STRUCTURES AND SYMBOLIC DEFINITIONS

This appendix describes the RSX-11M-PLUS system macros that supply symbolic offsets for data structures listed in Table C-1.

The data structures are defined by macros in the Executive macro library. To reference any of the data structure offsets from your code, include the macro name in an .MCALL directive and invoke the macro. For example:

```
.MCALL DCBDF$  
DCBDF$ ;Define DBC offsets
```

NOTE

All physical offsets and bit definitions are subject to change in future releases of the operating system. Code that accesses system data structures should always use the symbolic offsets rather than the physical offsets.

The first two arguments, <:> and <=>, make all definitions global. If they are left blank, the definitions will be local. The SYSDEF argument causes the variable part of a data structure to be defined.

All of these macros are in the Executive macro library LB:[1,1]EXEMC.MLB. All except F11DF\$, ITBDF\$, MTADF\$, OLRDF\$, and SHDDF\$ are also in the Executive definition library LB:[1,1]EXELIB.OLB.

RSX-11M-PLUS SYSTEM DATA STRUCTURES AND SYMBOLIC DEFINITIONS

Table C-1
Summary of System Data Structure Macros

Macro Arguments	Data Structures
ABODFS <:,>,<=>	Task abort and termination notification message codes
ACNDFS <:,>,<=>	Accounting data structures (user account block, task account block, system account block)
CLKDFS <:,>,<=>	Clock queue control block
CTBDFS <:,>,<=>	Controller table
DCBDFS <:,>,<=>,SYSDEF	Device Control Block
EPKDFS <:,>,<=>	Error message block
F11DFS <:,>,<=>,SYSDEF	FILES-11 data structures (Volume Control Block, mount list entry, File Control Block, file window block, locked block list node)
HDRDFS <:,>,<=>	Task header and window block
HWDDFS <:,>,<=>,SYSDEF	Hardware register addresses and feature mask definitions
ITBDFS <:,>,<=>,SYSDEF	Interrupt transfer block
KRBDFS <:,>,<=>	Controller request block
LCBDFS <:,>,<=>	Logical assignment control block
MTADFS <:,>,<=>	ANSI magtape data structures (volume set control block)
OLRDFS	On-line reconfiguration interface
PCBDFS <:,>,<=>,SYSDEF	Partition Control Block and attachment descriptor
PKTDFS <:,>,<=>	I/O packet, AST control block, offspring control block, group global event flag control block, and CLI parser block
SCBDFS <:,>,<=>,SYSDEF	Status Control Block and UMR assignment block
SHDDFS <:,>,<=>	Shadow recording linkage block
TCBDFS <:,>,<=>,SYSDEF	Task Control Block
UCBDFS <:,>,<=>,TTDEF,SYSDEF	Unit Control Block

ABODFS

ABODFS

```

;
; TASK ABORT CODES
;
; NOTE: S.COAD-S.CFLT ARE ALSO SST VECTOR OFFSETS
;
S.CACT=-4.           ;TASK STILL ACTIVE
S.CEXT=-2.          ;TASK EXITED NORMALLY
S.COAD=0.            ;ODD ADDRESS AND TRAPS TO 4
S.CSGF=2.           ;SEGMENT FAULT
S.CBPT=4.           ;BREAK POINT OR TRACE TRAP
S.CIOT=6.           ;IOT INSTRUCTION
S.CILI=8.           ;ILLEGAL OR RESERVED INSTRUCTION
S.CEMT=10.          ;NON RSX EMT INSTRUCTION
S.CTRP=12.          ;TRAP INSTRUCTION
S.CFLT=14.          ;11/40 FLOATING POINT EXCEPTION
S.CSST=16.          ;SST ABORT-BAD STACK
S.CAST=18.          ;AST ABORT-BAD STACK
S.CABO=20.          ;ABORT VIA DIRECTIVE
S.CLRF=22.          ;TASK LOAD REQUEST FAILURE
S.CCRF=24.          ;TASK CHECKPOINT READ FAILURE
S.IOMG=26.          ;TASK EXIT WITH OUTSTANDING I/O
S.PRTY=28.          ;TASK MEMORY PARITY ERROR
S.CPMD=30.          ;TASK ABORTED WITH PMD REQUEST
S.CELV=32.          ;TI: VIRTUAL TERMINAL WAS ELIMINATED
S.CINS=34.          ;TASK INSTALLED IN 2 DIFFERENT SYSTEMS
S.CAFF=36.          ;TASK ABORTED DUE TO BAD AFFINITY (REQUIRED
                    ;BUS RUNS ARE OFFLINE OR NOT PRESENT)
S.CCSM=38.          ;BAD CSM PARAMETERS OR BAD STACK
S.COTL=40.          ;TASK HAS RUN OVER ITS TIME LIMIT

;
; TASK TERMINATION NOTIFICATION MESSAGE CODES
;
T.NDNR=0             ;DEVICE NOT READY
T.NDSE=2             ;DEVICE SELECT ERROR
T.NCWF=4             ;CHECKPOINT WRITE FAILURE
T.NCRE=6             ;CARD READER HARDWARE ERROR
T.NDMO=8.           ;DISMOUNT COMPLETE
T.NUER=10.           ;UNRECOVERABLE ERROR
T.NLDN=12.           ;LINK DOWN (NETWORKS)
T.NLUP=14.           ;LINK UP (NETWORKS)
T.NCFI=16.           ;CHECKPOINT FILE INACTIVE
T.NUDE=18.           ;UNRECOVERABLE DEVICE ERROR
T.NMPE=20.           ;MEMORY PARITY ERROR
T.NKLF=22.           ;UCODE LOADER NOT INSTALLED
T.NAAF=24.           ;ACCOUNTING ALLOCATION FAILURE
T.NTAF=26.           ;ACCOUNTING TAB ALLOCATION FAILURE
T.NDEB=28.           ;TASK HAS NO DEBUGGING AID
T.NRCT=30.           ;REPLACEMENT CONTROL TASK NOT INSTALLED
T.NWBL=32.           ;WRITE BACK CACHING DATA LOST
                    ;UNIT WRITE LOCKED

```


ACNDFS

ACNDFS

```

;
; ACCOUNTING BLOCK OFFSET AND STATUS DEFINITIONS
; FOR EACH TRANSACTION TYPE.
;
;
; HEADER COMMON TO ALL TRANSACTIONS
;
      .ASECT
      .=0
000000 B.LNK:  .BLKW  1      ;LINK TO NEXT IN SYSLOG QUEUE
000002 B.TYP:  .BLKB  1      ;TRANSACTION TYPE
000003 B.LEN:  .BLKB  1      ;TRANSACTION LENGTH
000004 B.TIM:  .BLKW  3      ;ENDING TIME OF TRANSACTION
000012 B.HID=.  .      ;START OF HEADER IDENTIFICATION AREA
000012 B.UID:  .BLKW  2      ;UNIQUE SESSION IDENT
                        ;FIRST WORD-RAD50, SECOND-BINARY
000016 B.ACN:  .BLKW  1      ;ACCOUNT NUMBER
000020 B.TID:  .BLKB  1      ;ASCII TERMINAL TYPE (V,T,B OR C)
                        ;(VIRTUAL,REAL,BATCH, OR CONSOLE)
000021      .BLKB  1      ;UNIT NUMBER
000022 B.HEND=.  .      ;END OF HEADER ID AREA
000022 $$$HLN=.  .      ;HEADER LENGTH

;
; ACCUMULATION FIELDS FOR TAB, UAB, AND SAB
;
000022 B.CPU:  .BLKW  2      ;TOTAL CPU TIME USED
000026 B.DIR:  .BLKW  2      ;TOTAL DIRECTIVE COUNT
000032 B.QIO:  .BLKW  2      ;TOTAL QIO$ COUNT
000036 B.TAS:  .BLKW  2      ;TOTAL TASK COUNT
000042 B.MEM:  .BLKW  3      ;RESERVED
000050 B.BEG:  .BLKW  3      ;BEGINNING/LOGIN TIME
000056 B.CPUL: .BLKW  2      ;CPU LIMIT
000062 B.PNT:  .BLKW  1      ;POINTER TO HIGHER LEVEL TOTALS
000064 B.STM:  .BLKB  1      ;STATUS MASK
000065 $$$TLN=.  .      ;TOTAL'S LENGTH

;
; USER ACCOUNT BLOCK (UAB)
; NOTE: UAB'S MUST END ON A WORD BOUNDARY
;
      .=$$$TLN      ;START AFTER TOTALS
000065 B.USE:  .BLKB  1      ;USE COUNT
000066 B.ACT:  .BLKW  1      ;NUMBER OF CURRENTLY ACTIVE TASKS
000070 B.UUIC: .BLKW  1      ;LOGIN UIC
000072 B.UCB:  .BLKW  1      ;POINTER TO UCB
000074 B.LGO:  .BLKW  3      ;LOGOFF TIME
000102 B.ULNK: .BLKW  1      ;LINK TO NEXT UAB
000104 B.RNA:  .BLKW  3      ;LOC IN SYSTEM ACCNT FILE
                        ;(OFFSET,VBN-HI,VBN-LO)
000112 B.NAM:  .BLKB  14.    ;LAST NAME OF USER
000130      .BLKB  1      ;FIRST INITIAL OF USER
000131      .BLKB  1      ;UNUSED BYTE
000132 B.ULEN=.  .      ;UAB LENGTH
000002 $$$=<.+77>/100    ;UAB LENGTH (ROUNDED UP TO 32 WORD BOUND)

```

ACNDFS\$ (Cont.)

```

;
; TASK ACCOUNT BLOCK (TAB)
;     NOTE: THE TAB MUST END ON A WORD BOUNDRY
;
;=$$STLN                                ;STARTS AFTER TOTALS
000065 B.PRI:  .BLKB   1                ;HIGHEST RUNNING PRIORITY
000066 B.TNAM:  .BLKW   2                ;TASK NAME
000072 B.TCB:   .BLKW   1                ;TCB ADDRESS
000074 B.TST3:  .BLKW   1                ;T.ST3 FROM TASK'S TCB
000076          .BLKW   1                ;RESERVED FOR FUTURE STATUS BITS
000100 B.CUIC:  .BLKW   1                ;CURRENT UIC OF TASK
000102 B.PUIC:  .BLKW   1                ;PROTECTION UIC OF TASK
000104 B.CTXT:  .BLKW   2                ;NUMBER OF CONTEXT LOADS
000110 B.TCKP:  .BLKW   2                ;TIMES TASK HAS BEEN CHECKPOINTED
000114 B.OVLY:  .BLKW   2                ;NUMBER OF DISK OVERLAY LOADS
000120 B.EXST:  .BLKW   2                ;EXIT STATUS AND ABORT CODE
000124 B.TLEN=.                ;TAB LENGTH
000002 B.TBLK=<.+77>/100            ;NUMBER OF SEC POOL BLOCKS IN TAB

;
; SYSTEM ACCOUNT BLOCK (SAB)
;
;=$$STLN                                ;START AFTER TOTALS
000065 B.SHDN:  .BLKB   1                ;ACCOUNTING SHUTDOWN REASON CODE
000066 B.UHD:   .BLKW   1                ;UAB LISTHEAD
000070 B.ULO:   .BLKW   1                ;NUMBER OF USERS CURRENTLY LOGGED ON
000072 B.ULT:   .BLKW   2                ;TOTAL NUMBER OF LOGONS
000076 B.CKP:   .BLKW   2                ;TOTAL NUMBER OF CHECKPOINTS
000102 B.SHF:   .BLKW   2                ;TOTAL NUMBER OF SHUFFLER RUNS
000106 B.RND:   .BLKW   2                ;NUMBER OF CPU INTERVALS ROUNDED UP TO 1
000112 B.FID:   .BLKW   3                ;FILE-ID OF TRANSACTION FILE
000120 B.DVNM:  .BLKB   2                ;DEVICE OF TRANSACTION FILE
000122 B.UNIT:  .BLKW   1                ;UNIT OF TRANSACTION FILE
000124 B.EXTS:  .BLKW   1                ;EXTEND SIZE FOR TRANSACTION FILE
000126 B.LSCN:  .BLKW   3                ;TIME OF LAST SCAN
000134 B.SCNR:  .BLKW   1                ;SCAN RATE IN SECONDS
000136 B.DSCN:  .BLKW   1                ;STATISTICAL SCAN RATE (IN SEC)
000140 B.STSP:  .BLKW   2                ;RESERVED
000144 B.SYSM:  .BLKW   1                ;RESERVED
000146 B.CKUS:  .BLKW   3                ;RESERVED
000154 B.CKSP:  .BLKW   2                ;RESERVED
000160 B.CKAL:  .BLKW   1                ;RESERVED
000162 B.SLEN=.                ;SAB LENGTH

;
; NEW FIELDS FOR EXTENDED ACCOUNTING
;
000162 B.CPUT:  .BLKW   8.                ;CPU TIME USED PER PROCESSOR
000202 B.CTXP:  .BLKW   8.                ;NUMBER OF CONTEXT SWITCHES (PER PROC)
000222 B.IDCT:  .BLKW   8.                ;NUMBER OF IDLE LOOP ENTRIES (PER PROC)
000242 B.QIOC:  .BLKW   8.                ;NUMBER OF I/O INITIATIONS (PER PROC)
000262 B.MIOC:  .BLKW   8.                ;MASS STORE I/O COMPLETIONS (PER PROC)
000302 B.AIOC:  .BLKW   8.                ;ALL I/O COMPLETIONS (PER PROC)
000322 B.IPSN:  .BLKW   8.                ;IP INTERRUPTS SENT (PER PROC)
000342 B.IPRC:  .BLKW   8.                ;IP INTERRUPTS RCVD (PER PROC)

```

ACNDF\$ (Cont.)

```

000362 B.CKEX: .BLKW 2 ;CHECKPOINT DUE TO EXTEND TASKS
000366 B.CFCL: .BLKW 2 ;CALLS TO CFORK
000372 B.CFRK: .BLKW 2 ;CFORK FORKS
000376 B.TLOD: .BLKW 2 ;TASK LOADS
000402 B.RLOD: .BLKW 2 ;REGION LOADS
000406 .BLKB 82. ;BUMP SIZE TO NEXT 32 WORD BLOCK
000346 B.SSBL=-B.SLEN ;EXTRA LENGTH OF SYSTEM STATISTICS BLOCK
000006 $$$=<.+77>/100 ;SAB LENGTH (ROUNDED UP TO 32 WORD BOUND)

;
; SYSLOG STARTUP TRANSACTION
;
.=$$$$HLN ;START AFTER HEADER
000022 B.SSLN=. ;TRANSACTION LENGTH

;
; CRASH RECOVERY TRANSACTION
;
.=$$$$HLN ;START AFTER STANDARD HEADER
000022 B.CTLS: .BLKW 3 ;TIME OF LAST SCAN BEFORE CRASH
000030 B.CSRT: .BLKW 1 ;SCAN RATE BEFORE CRASH
000032 B.CRSN: .BLKB 60. ;ASCII TEXT EXPLAINING CRASH
000126 B.CLEN=. ;TRANSACTION LENGTH

;
; INVALID LOGIN TRANSACTION
;
.=$$$$HLN ;
000022 B.INAM: .BLKB 14. ;NAME FROM LOGIN LINE
000040 B.IUIC: .BLKB 6. ;UIC FROM LOGIN LINE
000046 B.IPSW: .BLKB 6. ;PASSWORD FROM LOGIN LINE
000054 B.ILEN=. ;TRANSACTION LENGTH

;
; DEVICE TRANSACTIONS (ALLOCATION, DEALLOCATION, MOUNT, AND
; DISMOUNT)
;
.=$$$$HLN ;
000022 B.DNAM: .BLKW 1 ;ASCII DEVICE NAME
000024 B.DUNT: .BLKB 1 ;OCTAL DEVICE UNIT NUMBER
000025 B.DLEN=. ;TRANSACTION LENGTH FOR ALL, DEA, AND DMO
000025 .BLKB 1 ;UNUSED BYTE
000026 B.DLBL: .BLKW 6 ;VOLUME LABEL
000042 B.DMST: .BLKW 1 ;MOUNT STATUS BITS
000044 B.DUIC: .BLKW 1 ;OWNER UIC
000046 B.DVPR: .BLKW 1 ;VOLUME PROTECTION CODE
000050 B.DACP: .BLKW 2 ;NAME OF ACP FOR DEVICE
000054 B.MLEN=. ;LENGTH OF MOUNT TRANSACTION

```

ACNDF\$ (Cont.)

```

;
; STATUS BITS FOR MOUNT STATUS MASK (B.DMST)
;
BM.SHR=1           ;DEVICE IS MOUNTED SHARED
BM.NOS=2           ;DEVICE IS MOUNTED NOSHARE
BM.SYS=4           ;DEVICE IS MOUNTED FOR THE SYSTEM (PUBLIC)
BM.FOR=10          ;DEVICE IS MOUNTED FOREIGN

;
; SYSTEM TIME CHANGE TRANSACTION
;
.=$$$HLN
000022 B.TOLD: .BLKB 6           ;OLD TIME (YR, MON, DAY, HR, MIN, SEC)
000030 B.TNEW: .BLKB 6           ;NEW TIME (YR, MON, DAY, HR, MIN, SEC)
000036 B.TMLN=.                 ;TRANSACTION LENGTH

;
; PRINT DESPOOLER TRANSACTION
;
.=$$$HLN
000022 B.PNAM: .BLKW 3           ;START AFTER HEADER
                                ;PRINT JOB NAME (RAD50)
000030 B.PPGS: .BLKW 1           ;PAGE COUNT
000032 B.PNFI: .BLKW 1           ;NUMBER OF FILES PRINTED
000034 B.PFRM: .BLKB 1           ;FORM NUMBER
000035 B.PPRI: .BLKB 1           ;PRINT PRIORITY
000036 B.PDEV: .BLKW 1           ;PRINT DEVICE NAME (ASCII)
000040 B.PPUN: .BLKB 1           ;UNIT NUMBER OF PRINT DEVICE
000041 B.PLEN=.                 ;TRANSACTION LENGTH

;
; CARD READER SPOOLING TRANSACTION
;
.=$$$HLN
000022 B.RNAM: .BLKW 3           ;START AFTER HEADER
                                ;BATCH OR PRINT JOB NAME
000030 B.RCDS: .BLKW 1           ;NUMBER OF CARDS READ
000032 B.RDEV: .BLKW 1           ;READER DEVICE NAME (ASCII)
000034 B.RUNT: .BLKB 1           ;UNIT NUMBER OF READER DEVICE
000035 B.RSOP: .BLKB 1           ;SUBMIT OR PRINT (0=SUBMIT, 1=PRINT)
000036 B.RLEN=.                 ;TRANSACTION LENGTH

;
; LOGIN TRANSACTION
;
.=$$$HLN
000022 B.LUIC: .BLKW 1           ;START AFTER HEADER
                                ;LOGIN UIC
000024 B.LNAM: .BLKB 14.         ;USER'S LAST NAME
000042 .BLKB 1                   ;AND FIRST INITIAL
000043 B.LLEN=.                 ;TRANSACTION LENGTH

;
; RESET TRANSACTION PARAMETERS
;
.=$$$HLN                       ;AFTER HEADER

```

ACNDFS\$ (Cont.)

```

000022 B.OFID: .BLKW 3 ;FILE-ID OF OLD TRN. FILE
000030 B.ODNM: .BLKB 2 ;DEVICE OF OLD TRN. FILE
000032 B.OUNT: .BLKW 1 ;UNIT OF OLD TRN. FILE
000034 B.NFID: .BLKW 3 ;FILE-ID OF NEW TRN. FILE
000042 B.NDNM: .BLKB 2 ;DEVICE OF NEW TRN. FILE
000044 B.NUNT: .BLKW 1 ;UNIT OF NEW TRN. FILE
000046 B.OEXS: .BLKW 1 ;EXT. SIZE FOR OLD TRN. FILE
000050 B.NEXS: .BLKW 1 ;EXT. SIZE FOR NEW TRN. FILE
000052 B.OSCR: .BLKW 1 ;OLD SCAN RATE IN SECONDS
000054 B.NSCR: .BLKW 1 ;NEW SCAN RATE IN SECONDS
000056 B.ODSC: .BLKW 1 ;OLD STATISTICAL SCAN RATE
000060 B.NDSC: .BLKW 1 ;NEW STATISTICAL SCAN RATE
000062 B.RTLN=.

;
; TRANSACTION TYPES
;
; 000 THRU 127 RESERVED FOR DEC USE
; 128 THRU 255 RESERVED FOR CUSTOMER USE
;
BT.SAB=1 ;SYSTEM ACCOUNT BLOCK (SAB)
BT.UAB=2 ;USER ACCOUNT BLOCK (UAB)
BT.TAB=3 ;TASK ACCOUNT BLOCK (TAB)
BT.SS=11 ;SYSLOG STARTUP TRANSACTION
BT.INV=12 ;INVALID LOGIN TRANSACTION
BT.TIM=13 ;SYSTEM TIME CHANGE TRANSACTION
BT.ALL=14 ;ALLOCATE DEVICE TRANSACTION
BT.DEA=15 ;DEALLOCATE DEVICE TRANSACTION
BT.MOU=16 ;MOUNT DEVICE TRANSACTION
BT.DMO=17 ;DISMOUNT DEVICE TRANSACTION
BT.PRT=20 ;PRINT DESPOOLER TRANSACTION
BT.DIR=21 ;DISK ACCOUNTING BY DIRECTORY (UNSUPPORTED)
BT.VOL=22 ;DISK ACCOUNTING BY VOLUME (UNSUPPORTED)
BT.LOG=23 ;LOGIN TRANSACTION
BT.CRH=24 ;CRASH RECOVERY TRANSACTION
BT.DST=25 ;DEVICE STATISTICS (UCB EXTENSION)
BT.RTP=26 ;RESET TRANSACTION PARAMETERS
BT.INP=27 ;CARD READER SPOOLING TRANSACTION

;
; STATUS MASK BIT DEFINITIONS (B.STM)
;
BS.ACT=200 ;CONTROL BLOCK ACTIVE
BS.CRH=100 ;RECORD FROM "TMP" FILE AFTER SYSTEM CRASH
BS.LGO=40 ;LOGGED OFF WITH OUTSTANDING ACTIVITY (UAB)
BS.CO=40 ;TASK'S TI: IS CO: (TAB ONLY)
BS.TML=20 ;TAB EXISTS ONLY FOR TIME LIMIT (TAB ONLY)
BS.ZER=10 ;LAST CPU INTERVAL WAS OF LENGTH ZERO
BS.SCN=4 ;TRANSACTION READY FOR WRITE TO SCAN FILE

;
; ACCOUNTING FEATURE MASK ($ACNFE)
;
BF.DST=40000 ;STATISTICAL SCAN RATE
BF.WRT=2000 ;FORCE SYSLOG TO WRITE ITS BUFFER
BF.SCN=1000 ;SCAN REQUESTED

```

ACNDF\$ (Cont.)

```

BF.SLR=400           ;SYSLOG IS RUNNING (NOT STOPPED)
BF.ERR=200           ;ACCOUNTING STOPPED DUE TO FATAL ERROR
BF.STR=100           ;ACCOUNTING IS STARTING UP / SHUTTING DOWN
BF.LSS=40            ;ACCUMULATE SYSTEM STATISTICS
                     ;(POINT UAB TO SAB)
BF.TRN=10            ;OUTPUT TO TRANSACTION FILE
BF.XTK=4              ;CHECKPOINT REQUEST IS DUE TO EXTK$
BF.TSK=2              ;TASK ACCOUNTING TURNED ON
BF.XAC=1              ;EXTENDED ACCOUNTING ASSEMBLED IN
    
```

```

;
; SHUTDOWN CODES (B.SHDN)
;
; 1           MAINTENANCE
; 2           REBOOT
; 3           SCHEDULED SHUTDOWN
; 4           ACCOUNTING SHUTDOWN BY TASK "SHUTUP"
; 5           OTHER
    
```

```

B.MAXL=128.          ;MAXIMUM TRANSACTION LENGTH
B.MINL=$$$HLN        ;MINIMUM TRANSACTION LENGTH
    
```

.PSECT

ACTDFS

.ASECT

```

.=0
000000 A.GRP: .BLKB 3      ;GROUP CODE (ASCII)
000003 A.MBR: .BLKB 3      ;MEMBER CODE
000006 A.PSWD: .BLKB 6     ;PASSWORD
000014 A.LNM: .BLKB 14.    ;LAST NAME
000032 A.FNM: .BLKB 12.    ;FIRST NAME
000046 A.LDAT: .BLKB 6     ;DATE OF LAST LOG ON (DD/MM/YY HH:MM:SS)
000054 A.NLOG: .BLKB 2     ;TOTAL NUMBER OF LOGONS
000056 A.SYDV: .BLKB 4     ;DEFAULT SYSTEM DEVICE
000062 A.ACN: .BLKW 1      ;ACCOUNT NUMBER (BINARY)
000064 A.CLI: .BLKW 2      ;RAD50 USER CLI
000070          .BLKW 2     ;UNUSED
000074 A.LPRV: .BLKW 1     ;LOGIN PRIVILEGE WORD
000076 A.SID: .BLKW 1      ;SESSION IDENTIFIER
A.LEN=128.           ;LENGTH OF CONTROL BLOCK
    
```

```

;
; BIT DEFINITIONS ON A.LPRV - LOGIN PRIVILEGE BITS
;
AL.SLV=1              ;SLAVE TERMINAL ON LOGIN
    
```

.PSECT

CLKDFS

CLKDFS

```

;
; CLOCK QUEUE CONTROL BLOCK OFFSET DEFINITIONS
;
; CLOCK QUEUE CONTROL BLOCK
;
; THERE ARE FIVE TYPES OF CLOCK QUEUE CONTROL BLOCKS. EACH CONTROL
; BLOCK HAS THE SAME FORMAT IN THE FIRST FIVE WORDS AND DIFFERS IN
; THE REMAINING THREE.
;
; THE FOLLOWING CONTROL BLOCK TYPES ARE DEFINED:
;
C.MRKT=0           ;MARK TIME REQUEST
C.SCHD=2          ;TASK REQUEST WITH PERIODIC RESCHEDULING
C.SSHT=4          ;SINGLE SHOT TASK REQUEST
C.SYST=6          ;SINGLE SHOT INTERNAL SYSTEM SUBROUTINE
                  ;(IDENT)
C.SYTK=8.         ;SINGLE SHOT INTERNAL SYSTEM SUBROUTINE
                  ;(TASK)
C.CSTP=10.        ;CLEAR STOP BIT (CONDITIONALIZED ON
                  ;SHUFFLING)

;
; CLOCK QUEUE CONTROL BLOCK TYPE INDEPENDENT OFFSET DEFINITIONS
;
      .ASECT
.=0
000000 C.LNK:  .BLKW  1      ;CLOCK QUEUE THREAD WORD
000002 C.RQT:  .BLKB  1      ;REQUEST TYPE
000003 C.EFN:  .BLKB  1      ;EVENT FLAG NUMBER (MARK TIME ONLY)
000004 C.TCB:  .BLKW  1      ;TCB ADR OR SYSTEM SUBROUTINE IDENTIFICATION
000006 C.TIM:  .BLKW  2      ;ABSOLUTE TIME WHEN REQUEST COMES DUE

;
; CLOCK QUEUE CONTROL BLOCK-MARK TIME DEPENDENT OFFSET DEFINITIONS
;
      .=C.TIM+4           ;START OF DEPENDENT AREA
000012 C.AST:  .BLKW  1      ;AST ADDRESS
000014 C.SRC:  .BLKW  1      ;FLAG MASK WORD FOR 'BIS' SOURCE
000016 C.DST:  .BLKW  1      ;ADDRESS OF 'BIS' DESTINATION
000020      .BLKW  1      ;UNUSED

;
; CLOCK QUEUE CONTROL BLOCK-PERIODIC RESCHEDULING DEPENDENT OFFSET
; DEFINITIONS
;
      .=C.TIM+4           ;START OF DEPENDENT AREA
000012 C.RSI:  .BLKW  2      ;RESCHEDULE INTERVAL IN CLOCK TICKS
000016 C.UIC:  .BLKW  1      ;SCHEDULING UIC
000020 C.UAB:  .BLKW  1      ;POINTER TO ASSOCIATED UAB

```

CLKDF\$ (Cont.)

```

;
; CLOCK QUEUE CONTROL BLOCK-SINGLE SHOT DEPENDENT OFFSET DEFINITIONS
;
.=C.TIM+4                ;START OF DEPENDENT AREA
000012      .BLKW      2      ;TWO UNUSED WORDS
000016      .BLKW      1      ;SCHEDULING UIC
000020      .BLKW      1      ;C.UAB

;
; CLOCK QUEUE CONTROL BLOCK-SINGLE SHOT INTERNAL SUBROUTINE OFFSET
; DEFINITIONS
;
; THERE ARE TWO TYPE CODES FOR THIS TYPE OF REQUEST:
;
;          TYPE 6 = SINGLE SHOT INTERNAL SUBROUTINE WITH A 16 BIT VALUE
;                  AS AN IDENTIFIER.
;
;          TYPE 8 = SINGLE SHOT INTERNAL SUBROUTINE WITH A TCB ADDRESS
;                  AS AN IDENTIFIER.
;
.=C.TIM+4                ;START OF DEPENDENT AREA
000012 C.SUB:  .BLKW      1      ;SUBROUTINE ADDRESS
000014 C.AR5:  .BLKW      1      ;RELOCATION BASE (FOR LOADABLE DRIVERS)
000016 C.URM:  .BLKW      1      ;URM TO EXECUTE ROUTINE ON
; (MP SYSTEMS, C.SYST ONLY)
000020      .BLKW      1      ;UNUSED
000022 C.LGTH=.          ;LENGTH OF CLOCK QUEUE CONTROL BLOCK

.PSECT

```


CTBDF\$

CTBDF\$

```

;
; CONTROLLER TABLE (CTB)
;
; THE CONTROLLER TABLE IS A CONTROL BLOCK THAT CONTAINS A VECTOR
; OF KRB ADDRESSES. THIS VECTOR MAY BE ADDRESSED BY THE CONTROLLER
; INDEX TAKEN FROM THE INTERRUPT PS BY $INTSV/$INTSE.
;
      .ASECT
      .=177756
177756 L.CLK:  .BLKW  8.      ;START OF CLOCK BLOCK (IF ANY)
177776 L.ICB:  .BLKW  1      ;ICB CHAIN FOR THIS CTB
000000 L.LNK:  .BLKW  1      ;CTB LINK WORD
000002 L.NAM:  .BLKW  1      ;GENERIC CONTROLLER NAME (ASCII)
000004 L.DCB:  .BLKW  1      ;DCB ADDRESS OF THIS DEVICE
000006 L.NUM:  .BLKB  1      ;NUMBER OF KRB ADDRESSES IN TABLE
000007 L.STS:  .BLKB  1      ;CTB STATUS BYTE
000010 L.KRB:  .BLKW  1      ;START OF KRB ADDRESSES

;
; NOTE: THE SYMBOL $XYCTB:: IS DEFINED FOR EACH CTB, WHERE THE
; CHARACTERS XY ARE THE SAME AS THOSE STORED IN L.NAM. THE
; SYMBOL IS NOT THE START OF THE CTB, BUT INSTEAD THE START OF
; THE KRB TABLE AT THE END OF THE CTB (L.KRB).
;
      .PSECT

;
; CONTROLLER TABLE STATUS BYTE BIT DEFINITIONS
;
LS.CLK=1          ;CLOCK BLOCK AT TOP OF CTB (1=YES)
LS.MDC=2          ;MULTIDRIVER CTB (1=YES)
LS.CBL=4          ;CLOCK BLK LINKED INTO CLK Q (1=YES)
LS.CIN=10         ;CONT. USE COMMON INT TABLE (1=YES)
LS.NET=20         ;THIS IS DECNET DEVICE. ICB'S IN K.PRM
                  ;(1=YES)

;
; COMMON INTERRUPT TABLE DISPATCH ENTRY POINTS
;
CI.CSR=-6         ;CSR TEST ENTRY POINT
CI.KRB=-4         ;KRB STATUS CHANGE ENTRY POINT
CI.PWF=-2         ;POWERFAIL ENTRY POINT
CI.INT=0          ;COMMON INTERRUPT ADDRESS
CI.DCB=2          ;START OF DCB TABLE (0 ENDS TABLE)

```

DCBDF\$

```

DCBDF$  ,,SYSDEF

;
; DEVICE CONTROL BLOCK
;
; THE DEVICE CONTROL BLOCK (DCB) DEFINES GENERIC INFORMATION ABOUT A
; DEVICE TYPE AND THE LOWEST AND HIGHEST UNIT NUMBERS.  THERE IS AT
; LEAST ONE DCB FOR EACH DEVICE TYPE IN A SYSTEM.  FOR EXAMPLE, IF
; THERE ARE TELETYPES IN A SYSTEM, THEN THERE IS AT LEAST ONE DCB
; WITH THE DEVICE NAME 'TT'.  IF PART OF THE TELETYPES WERE
; INTERFACED VIA DL11-A'S AND THE REST VIA A DH11, THEN THERE WOULD
; BE TWO DCB'S.  ONE FOR ALL DL11-A INTERFACED TELETYPES, AND ONE
; FOR ALL DH11 INTERFACED TELETYPES.
;
      .ASECT
      .=0
000000 D.LNK:  .BLKW  1      ;LINK TO NEXT DCB
000002 D.UCB:  .BLKW  1      ;POINTER TO FIRST UNIT CONTROL BLOCK
000004 D.NAM:  .BLKW  1      ;GENERIC DEVICE NAME
000006 D.UNIT: .BLKB  1      ;LOWEST UNIT NUMBER COVERED BY THIS DCB
000007      .BLKB  1      ;HIGHEST UNIT NUMBER COVERED BY THIS DCB
000010 D.UCBL: .BLKW  1      ;LENGTH OF EACH UNIT CONTROL BLOCK IN BYTES
000012 D.DSP:  .BLKW  1      ;POINTER TO DRIVER DISPATCH TABLE
000014 D.MSK:  .BLKW  1      ;LEGAL FUNCTION MASK CODES 0-15.
000016      .BLKW  1      ;CONTROL FUNCTION MASK CODES 0-15.
000020      .BLKW  1      ;NOP'ED FUNCTION MASK CODES 0-15.
000022      .BLKW  1      ;ACP FUNCTION MASK CODES 0-15.
000024      .BLKW  1      ;LEGAL FUNCTION MASK CODES 16.-31.
000026      .BLKW  1      ;CONTROL FUNCTION MASK CODES 16.-31.
000030      .BLKW  1      ;NOP'ED FUNCTION MASK CODES 16.-31.
000032      .BLKW  1      ;ACP FUNCTION MASK CODES 16.-31.
000034 D.PCB:  .BLKW  1      ;LOADABLE DRIVER PCB ADDRESS

      .PSECT

;
; DRIVER DISPATCH TABLE OFFSET DEFINITIONS
;
D.VDEB=-2      ;DEALLOCATE BUFFER(S)
D.VCHK=-4      ;ADDRESS OF ROUTINE CALLED TO VALIDATE
              ;AND CONVERT THE LBN.  USED BY DRIVERS
              ;THAT SUPPORT SEEK OPTIMIZATION.
D.VNXC=-4      ;ADDRESS OF ROUTINE IN TTDRV CALLED TO
              ;HAVE IT SEND THE NEXT COMMAND IN THE
              ;TYPEAHEAD BUFFER TO MCR...
D.VINI=0       ;DEVICE INITIATOR
D.VCAN=2       ;CANCEL CURRENT I/O FUNCTION
D.VOUT=4       ;DEVICE TIMEOUT
D.VPWF=6       ;POWERFAIL RECOVERY
D.VKRB=10      ;CONTROLLER STATUS CHANGE ENTRY
D.VUCB=12      ;UNIT STATUS CHANGE ENTRY

      .IF NB SYSDEF

D.VINT=14      ;BEGINNING OF INTERRUPT STUFF

      .ENDC

```

EPKDFS

EPKDFS

```

;
; ERROR MESSAGE BLOCK DEFINITIONS
;
    .ASECT
    
```

```

;
; HEADER SUBPACKET
;
;
;
    
```

```

;
; +-----+
; | SUBPACKET LENGTH IN BYTES |
; +-----+
; | SUBPACKET FLAGS |
; +-----+
; | FORMAT IDENTIFICATION | OPERATING SYSTEM CODE |
; +-----+
; | OPERATING SYSTEM IDENTIFICATION |
; |
; +-----+
; | FLAGS | CONTEXT CODE |
; +-----+
; | ENTRY SEQUENCE |
; +-----+
; | ERROR SEQUENCE |
; +-----+
; | ENTRY TYPE SUBCODE | ENTRY TYPE CODE |
; +-----+
; | TIME STAMP |
; |
; +-----+
; | RESERVED | PROCESSOR TYPE |
; +-----+
; | PROCESSOR IDENTIFICATION (URM) |
; +-----+
    
```

```

;
;.=0
000000 E$HLGH: .BLKW 1 ; SUBPACKET LENGTH IN BYTES
000002 E$HSBF: .BLKW 1 ; SUBPACKET FLAGS
000004 E$HSYS: .BLKB 1 ; OPERATING SYSTEM CODE
000005 E$HIDN: .BLKB 1 ; FORMAT IDENTIFICATION
000006 E$HSID: .BLKB 4 ; OPERATING SYSTEM IDENTIFICATION
000012 E$HCTX: .BLKB 1 ; CONTEXT CODE
000013 E$HFLG: .BLKB 1 ; FLAGS
000014 E$HENS: .BLKW 1 ; ENTRY SEQUENCE NUMBER
000016 E$HERS: .BLKW 1 ; ERROR SEQUENCE NUMBER
000020 E$HENC: ; ENTRY CODE
000020 E$HTYC: .BLKB 1 ; ENTRY TYPE CODE
000021 E$HTYS: .BLKB 1 ; ENTRY TYPE SUBCODE
000022 E$HTIM: .BLKB 6 ; TIME STAMP
000030 E$HPTY: .BLKB 1 ; PROCESSOR TYPE
000031 .BLKB 1 ; RESERVED
000032 E$HURM: .BLKW 1 ; PROCESSOR IDENTIFICATION (URM)
        .EVEN
000034 E$HLEN: ; LENGTH
    
```

EPKDF\$ (Cont.)

```

;
; SUBPACKET FLAGS FOR E$HSBF
;
SM.ERR = 1 ; ERROR PACKET
SM.HDR = 1 ; HEADER SUBPACKET
SM.TSK = 2 ; TASK SUBPACKET
SM.DID = 4 ; DEVICE IDENTIFICATION SUBPACKET
SM.DOP = 10 ; DEVICE OPERATION SUBPACKET
SM.DAC = 20 ; DEVICE ACTIVITY SUBPACKET
SM.DAT = 40 ; DATA SUBPACKET
SM.MBC = 20000 ; 22-BIT MASSBUS CONTROLLER PRESENT
SM.CMD = 40000 ; ERROR LOG COMMAND PACKET
SM.ZER = 100000 ; ZERO I/O COUNTS

;
; CODES FOR FIELD E$HIDN
;
EH$FOR = 1 ; CURRENT PACKET FORMAT

;
; FLAGS FOR THE ERROR LOG FLAGS BYTE ($ERFLA) IN THE EXEC
;
ES.INI = 1 ; ERROR LOG INITIALIZED
ES.DAT = 2 ; ERROR LOG RECEIVING DATA PACKETS
ES.LIM = 4 ; ERROR LIMITING ENABLED
ES.LOG = 10 ; ERROR LOGGING ENABLED

;
; TYPE AND SUBTYPE CODES FOR FIELDS E$HTYC AND E$HTYS
;
; SYMBOLS WITH NAMES E$CXXX ARE TYPE CODES FOR FIELD E$HTYC,
; SYMBOLS WITH NAMES E$SXXX ARE SUBTYPE CODES FOR FIELD E$HTYS
;
E$CCMD = 1 ; ERROR LOG CONTROL
E$SSTA = 1 ; ERROR LOG STATUS CHANGE
E$SSWI = 2 ; SWITCH LOGGING FILES
E$SAPP = 3 ; APPEND FILE
E$SBAC = 4 ; DECLARE BACKUP FILE
E$SSHO = 5 ; SHOW
E$SCHL = 6 ; CHANGE LIMITS

E$CERR = 2 ; DEVICE ERRORS
E$SDVH = 1 ; DEVICE HARD ERROR
E$SDVS = 2 ; DEVICE SOFT ERROR
E$STMO = 3 ; DEVICE INTERRUPT TIMEOUT
E$SUNS = 4 ; DEVICE UNSOLICITED INTERRUPT

E$CDVI = 3 ; DEVICE INFORMATION
E$SDVI = 1 ; DEVICE INFORMATION MESSAGE

E$CDCI = 4 ; DEVICE CONTROL INFORMATION
E$SMOU = 1 ; DEVICE MOUNT
E$SDMO = 2 ; DEVICE DISMOUNT
E$SRCS = 3 ; DEVICE COUNT RESET
E$SRCT = 4 ; BLOCK REPLACEMENT

E$CCPU = 5 ; CPU DETECTED ERRORS
E$SMEM = 1 ; MEMORY ERROR
E$SINT = 2 ; UNEXPECTED INTERRUPT

```

EPKDF\$ (Cont.)

```

E$CSYS = 6 ; SYSTEM CONTROL INFORMATION
E$SPWR = 1 ; POWER RECOVERY

E$CCTL = 7 ; CONTROL INFORMATION
E$STIM = 1 ; TIME CHANGE
E$SCRS = 2 ; SYSTEM CRASH
E$SLOA = 3 ; DEVICE DRIVER LOAD
E$SUNL = 4 ; DEVICE DRIVER UNLOAD
E$SHRC = 5 ; RECONFIGURATION STATUS CHANGE
E$SMES = 6 ; MESSAGE

E$CSDE = 10 ; SOFTWARE DETECTED EVENTS
E$SABO = 1 ; TASK ABORT
    
```

```

;
; CODES FOR CONTEXT CODE ENTRY E$HCTX
;
    
```

```

E$SNOR = 1 ; NORMAL ENTRY
E$SSTA = 2 ; START ENTRY
E$SCRS = 3 ; CRASH ENTRY
    
```

```

;
; CODES FOR FLAGS ENTRY E$HFLG
;
    
```

```

E$SVIR = 1 ; ADDRESSES ARE VIRTUAL
E$SEXT = 2 ; ADDRESSES ARE EXTENDED
E$SCOU = 4 ; ERROR COUNTS SUPPLIED
    
```

```

;
; TASK SUBPACKET
;
    
```

```

+-----+
| TASK SUBPACKET LENGTH |
+-----+
| TASK NAME IN RAD50    |
|                       |
+-----+
| TASK UIC              |
+-----+
| TASK TI: DEVICE NAME  |
+-----+
| FLAGS                 | TASK TI: UNIT NUMBER |
+-----+
    
```

```

.=0
000000 E$TLGH: .BLKW 1 ; TASK SUBPACKET LENGTH
000002 E$TSK: .BLKW 2 ; TASK NAME IN RAD50
000006 E$TUIC: .BLKW 1 ; TASK UIC
000010 E$TTID: .BLKB 2 ; TASK TI: DEVICE NAME
000012 E$TTIU: .BLKB 1 ; TASK TI: UNIT
000013 E$TFLG: .BLKB 1 ; FLAGS
          .EVEN
000014 E$TLEN:
    
```

EPKDF\$ (Cont.)

```

;
; FLAGS FOR ENTRY ESTFLG
;

```

```

    ET$PRV = 1 ; TASK IS PRIVILEGED
    ET$PRI = 2 ; TERMINAL IS PRIVILEGED

```

```

;
; DEVICE IDENTIFICATION SUBPACKET
;

```

+-----+-----+		
	DEVICE IDENTIFICATION SUBPACKET LENGTH	
+-----+-----+		
	DEVICE MNEMONIC NAME	
+-----+-----+		
	CONTROLLER NUMBER	
	DEVICE UNIT NUMBER	
+-----+-----+		
	PHYSICAL SUBUNIT #	
	PHYSICAL UNIT #	
+-----+-----+		
	PHYSICAL DEVICE MNEMONIC (RSX-11M-PLUS ONLY)	
+-----+-----+		
	RESERVED	
	FLAGS	
+-----+-----+		
	VOLUME NAME OF MOUNTED VOLUME	
+-----+-----+		
	PACK IDENTIFICATION	
+-----+-----+		
	DEVICE TYPE CLASS	
+-----+-----+		
	DEVICE TYPE	
+-----+-----+		
	I/O OPERATION COUNT LONGWORD	
+-----+-----+		
	HARD ERROR COUNT	
	SOFT ERROR COUNT	
+-----+-----+		
	BLOCKS TRANSFERRED COUNT (RSX-11M-PLUS ONLY)	
+-----+-----+		
	CYLINDERS CROSSED COUNT (RSX-11M-PLUS ONLY)	
+-----+-----+		

```

;
; . = 0
000000 E$ILGH: .BLKW 1 ; DEVICE IDENTIFICATION SUBPACKET LENGTH
000002 E$ILDV: .BLKW 1 ; DEVICE MNEMONIC NAME
000004 E$ILUN: .BLKB 1 ; DEVICE UNIT NUMBER
000005 E$IPCO: .BLKB 1 ; CONTROLLER NUMBER
000006 E$IPUN: .BLKB 1 ; PHYSICAL UNIT NUMBER
000007 E$IPSU: .BLKB 1 ; PHYSICAL SUBUNIT NUMBER
000010 E$IPDV: .BLKW 1 ; PHYSICAL DEVICE MNEMONIC

```

EPKDF\$ (Cont.)

```

000012 E$IFLG: .BLKB 1 ; FLAGS
000013 .BLKB 1 ; RESERVED
000014 E$IVOL: .BLKB 12. ; VOLUME NAME
000030 E$IPAK: .BLKB 4 ; PACK IDENTIFICATION
000034 E$IDEV: .BLKB 4 ; DEVICE TYPE
000034 E$IDCL: .BLKW 1 ; DEVICE TYPE CLASS
000036 E$IDTY: .BLKW 2 ; DEVICE TYPE
000042 E$IOPR: .BLKW 2 ; I/O OPERATION COUNT LONGWORD
000046 E$IERS: .BLKB 1 ; SOFT ERROR COUNT
000047 E$IERH: .BLKB 1 ; HARD ERROR COUNT
000050 E$IBLK: .BLKW 2 ; BLOCKS TRANSFERRED COUNT
000054 E$ICYL: .BLKW 2 ; CYLINDERS CROSSED COUNT
        .EVEN
000060 E$ILEN: ; SUBPACKET LENGTH

;
; FLAGS FOR FIELD E$IFLG
;
        EISSUB = 1 ; SUBCONTROLLER DEVICE
        EISNUX = 2 ; NO UCB EXTENSION, DATA INVALID

;
; DEVICE OPERATION SUBPACKET
;
;
; +-----+
; | DEVICE OPERATION SUBPACKET LENGTH |
; +-----+
; | TASK NAME IN RAD50 |
; | |
; +-----+
; | TASK UIC |
; +-----+
; | TASK TI: LOGICAL DEVICE MNEMONIC |
; +-----+
; | RESERVED | TASK TI: DEVICE UNIT |
; +-----+
; | I/O FUNCTION CODE |
; +-----+
; | RESERVED | OPERATION FLAGS |
; +-----+
; | TRANSFER OPERATION ADDRESS |
; | |
; +-----+
; | TRANSFER OPERATION BYTE COUNT |
; +-----+
; | CURRENT OPERATION RETRY COUNT |
; +-----+
;
;
.=0
000000 E$OLGN: .BLKW 1 ; SUBPACKET LENGTH
000002 E$OTSK: .BLKW 2 ; TASK NAME IN RAD50
000006 E$OUIC: .BLKW 1 ; TASK UIC
000010 E$OTID: .BLKB 2 ; TASK TI: LOGICAL DEVICE MNEMONIC
000012 E$OTIU: .BLKB 1 ; TASK TI: LOGICAL DEVICE UNIT
000013 .BLKB 1 ; RESERVED
000014 E$OFNC: .BLKW 1 ; I/O FUNCTION CODE
000016 E$OFLG: .BLKB 1 ; OPERATION FLAGS

```

EPKDF\$ (Cont.)

```

000017      .BLKB   1      ; RESERVED
000020  ESOADD: .BLKW   2      ; TRANSFER OPERATION ADDRESS
000024  ESOSIZ: .BLKW   1      ; TRANSFER OPERATION BYTE COUNT
000026  ESORTY: .BLKW   1      ; CURRENT OPERATION RETRY COUNT
           .EVEN
000030  ESOLEN:                ; DEVICE OPERATION SUBPACKET LENGTH
    
```

```

;
; FLAGS FOR FIELD E$OFLG
;
    
```

```

      EO$TRA =      1 ; TRANSFER OPERATION
      EO$DMA =      2 ; DMA DEVICE
      EO$EXT =      4 ; EXTENDED ADDRESSING DEVICE
      EO$PIP =     10 ; DEVICE IS POSITIONING
    
```

```

;
; I/O ACTIVITY SUBPACKET
;
    
```

```

;      +-----+
;      | I/O ACTIVITY SUBPACKET LENGTH |
;      +-----+
;
    
```

```

.=0
000000  E$ALGH: .BLKW   1      ; SUBPACKET LENGTH
    
```

```

;
; I/O ACTIVITY SUBPACKET ENTRY
;
    
```

```

;      +-----+
;      | LOGICAL DEVICE NAME MNEMONIC |
;      +-----+
;      | CONTROLLER NUMBER | LOGICAL DEVICE UNIT |
;      +-----+
;      | PHYSICAL SUBUNIT # | PHYSICAL UNIT NUMBER |
;      +-----+
;      | PHYSICAL DEVICE MNEMONIC (RSX-11M-PLUS ONLY) |
;      +-----+
;      | TASK TI: LOGICAL UNIT | DEVICE FLAGS |
;      +-----+
;      | REQUESTING TASK NAME IN RAD50 |
;      | | |
;      +-----+
;      | REQUESTING TASK UIC |
;      +-----+
;      | TASK TI: LOGICAL DEVICE NAME |
;      +-----+
;      | I/O FUNCTION CODE |
;      +-----+
;      | RESERVED | FLAGS |
;      +-----+
;      | TRANSFER OPERATION ADDRESS |
;      | | |
;      +-----+
;      | TRANSFER OPERATION BYTE COUNT |
;      +-----+
;
    
```

```

.=0
    
```


EPKDF\$ (Cont.)

```

000000  ESALDV: .BLKW  1      ; LOGICAL DEVICE NAME MNEMONIC
000002  ESALUN: .BLKB  1      ; LOGICAL DEVICE UNIT
000003  ESAPCO: .BLKB  1      ; CONTROLLER NUMBER
000004  ESAPUN: .BLKB  1      ; PHYSICAL UNIT NUMBER
000005  ESAPSU: .BLKB  1      ; PHYSICAL SUBUNIT NUMBER
000006  ESAPDV: .BLKW  1      ; PHYSICAL DEVICE MNEMONIC
000010  ESADFG: .BLKB  1      ; DEVICE FLAGS
000011  ESATIU: .BLKB  1      ; TASK TI: LOGICAL UNIT
000012  ESATSK: .BLKW  2      ; REQUESTING TASK NAME IN RAD50
000016  ESAUIC: .BLKW  1      ; REQUESTING TASK UIC
000020  ESATID: .BLKW  1      ; TASK TI: LOGICAL DEVICE NAME
000022  ESAFNC: .BLKW  1      ; I/O FUNCTION CODE
000024  ESAFLG: .BLKB  1      ; FLAGS
000025          .BLKB  1      ; RESERVED
000026  ESAADD: .BLKW  2      ; TRANSFER OPERATION ADDRESS
000032  ESASIZ: .BLKW  1      ; TRANSFER OPERATION BYTE COUNT
          .EVEN
000034  ESALEN:          ; SUBPACKET ENTRY LENGTH

;
; FLAGS FOR FIELD ESADFG
;
          EA$SUB =      1 ; SUBCONTROLLER DEVICE
          EA$NUX =      2 ; NO UCB EXTENSION, DATA INVALID

;
; FLAGS FOR FIELD ESAFLG
;
          EA$TRA =      1 ; TRANSFER OPERATION
          EA$DMA =      2 ; DMA DEVICE
          EA$EXT =      4 ; DEVICE HAS EXTENDED ADDRESSING
          EA$PIP =     10 ; DEVICE IS POSITIONING

.PSECT

```

F11DF\$

```

F11DF$  ,,SYSDEF

;
; VOLUME CONTROL BLOCK
;
    .ASECT
    .=0
000000 V.TRCT: .BLKW  1      ; TRANSACTION COUNT
000002 V.TYPE: .BLKB  1      ; VOLUME TYPE DESCRIPTOR
      VT.SL1= 1          ; FILES-11 STRUCTURE LEVEL 1
      VT.ANS= 10         ; ANSI LABELED TAPE
      VT.UNL= 11         ; UNLABELED TAPE
000003 V.VCHA: .BLKB  1      ; VOLUME CHARACTERISTICS
      VC.SLK= 1          ; CLEAR VOLUME VALID ON DISMOUNT
      VC.HLK= 2          ; UNLOAD THE VOLUME ON DISMOUNT
      VC.DEA= 4          ; DEALLOCATE THE VOLUME ON DISMOUNT
      VC.PUB= 10         ; SET (CLEAR) US.PUB ON DISMOUNT
000004 V.LABL: .BLKB  14     ; VOLUME LABEL (ASCII)
000020 V.PKSR: .BLKW  2      ; PACK SERIAL NUMBER FOR ERROR LOGGING

000024 V.SLEN:              ; LENGTH OF SHORT VCB

000024 V.IFWI: .BLKW  1      ; INDEX FILE WINDOW
000026 V.FCB:  .BLKW  2      ; FILE CONTROL BLOCK LIST HEAD
000032 V.IBLB: .BLKB  1      ; INDEX BIT MAP 1ST LBN HIGH BYTE
000033 V.IBSZ: .BLKB  1      ; INDEX BIT MAP SIZE IN BLOCKS
000034          .BLKW  1      ; INDEX BITMAP 1ST LBN LOW BITS
000036 V.FMAX: .BLKW  1      ; MAX NO. OF FILES ON VOLUME
000040 V.WISZ: .BLKB  1      ; DEFAULT SIZE OF WINDOW IN RTRV PTRS
      ; VALUE IS < 128.
000041 V.SBCL: .BLKB  1      ; STORAGE BIT MAP CLUSTER FACTOR
000042 V.SBSZ: .BLKW  1      ; STORAGE BIT MAP SIZE IN BLOCKS
000044 V.SBLB: .BLKB  1      ; STORAGE BIT MAP 1ST LBN HIGH BYTE
000045 V.FIEX: .BLKB  1      ; DEFAULT FILE EXTEND SIZE
000046          .BLKW  1      ; STORAGE BIT MAP 1ST LBN LOW BITS
000050 V.VOWN: .BLKW  1      ; VOLUME OWNER'S UIC
000052 V.VPRO: .BLKW  1      ; VOLUME PROTECTION
000054 V.FPRO: .BLKW  1      ; VOLUME DEFAULT FILE PROTECTION
000056 V.FRBK: .BLKB  1      ; NUMBER OF FREE BLOCKS ON VOLUME HIGH BYTE
000057 V.LRUC: .BLKB  1      ; COUNT OF AVAILABLE LRU SLOTS IN FCB LIST
000060          .BLKW  1      ; NUMBER OF FREE BLOCKS ON VOLUME LOW BITS
000062 V.STS:  .BLKB  1      ; VOL STATUS BYTE, CONTAINING THE FOLLOWING
      VS.IFW= 1          ; INDEX FILE IS WRITE ACCESSED
      VS.BMW= 2          ; STORAGE BITMAP FILE IS WRITE ACCESSED
000063 V.FFNU: .BLKB  1      ; FIRST FREE INDEX FILE BITMAP BLOCK
000064 V.EXT:  .BLKW  1      ; POINTER TO VCB EXTENSION

000066 V.LGTH:              ; SIZE IN BYTES OF VCB

;
; MOUNT LIST ENTRY
;
; EACH ENTRY ALLOWS ACCESS TO A SPECIFIED USER FOR A NON-PUB DEVICE
;
; TO ALLOW EXPANSION, ONLY THE ONLY TYPE CODE DEFINED IS "1" FOR

```

F11DF\$ (Cont.)

```

; DEVICE ACCESS BLOCKS
;
      .ASECT
      .=0
000000 M.LNK:  .BLKW  1      ; LINK WORD
000002 M.TYPE: .BLKB  1      ; TYPE OF ENTRY
      MT.MLS= 1      ; MOUNTED VOLUME USER ACCESS LIST
000003 M.ACC:  .BLKB  1      ; NUMBER OF ACCESSES
000004 M.DEV:  .BLKW  1      ; DEVICE UCB
000006 M.TI:   .BLKW  1      ; ACCESSOR TI: UCB

000010 M.LEN:                ; LENGTH OF ENTRY

;
; FILE CONTROL BLOCK
;
      .ASECT
      .=0
000000 F.LINK: .BLKW  1      ; FCB CHAIN POINTER
000002 F.FNUM: .BLKW  1      ; FILE NUMBER
000004 F.FSEQ: .BLKW  1      ; FILE SEQUENCE NUMBER
000006      .BLKB  1      ; NOT USED
000007 F.FSQN: .BLKB  1      ; FILE SEGMENT NUMBER
000010 F.FOWN: .BLKW  1      ; FILE OWNER'S UIC
000012 F.FPRO: .BLKW  1      ; FILE PROTECTION CODE
000014 F.UCHA: .BLKB  1      ; USER CONTROLLED CHARACTERISTICS
000015 F.SCHA: .BLKB  1      ; SYSTEM CONTROLLED CHARACTERISTICS
000016 F.HDLB: .BLKW  2      ; FILE HEADER LOGICAL BLOCK NUMBER

; BEGINNING OF STATISTICS BLOCK
000022 F.LBN:  .BLKW  2      ; LBN OF VIRTUAL BLOCK 1 IF CONTIGUOUS
; 0 IF NON CONTIGUOUS
000026 F.SIZE: .BLKW  2      ; SIZE OF FILE IN BLOCKS
000032 F.NACS:  .BLKB  1      ; NO. OF ACCESSES
000033 F.NLCK:  .BLKB  1      ; NO. OF LOCKS

000012 S.STBK=. -F.LBN      ; SIZE OF STATISTICS BLOCK

000034 F.STAT:                ; FCB STATUS WORD
000034 F.NWAC: .BLKB  1      ; NUMBER OF WRITE ACCESSORS
000035      .BLKB  1      ; STATUS BITS FOR FCB CONSISTING OF
      FC.WAC= 100000      ; SET IF FILE ACCESSED FOR WRITE
      FC.DIR= 40000      ; SET IF FCB IS IN DIRECTORY LRU
      FC.CEF= 20000      ; SET IF DIRECTORY EOF NEEDS UPDATING
      FC.FCO= 10000      ; SET IF TRYING TO FORCE DIRECTORY CONT
000036 F.DREF: .BLKW  1      ; DIRECTORY EOF BLOCK NUMBER
000040 F.DRNM: .BLKW  1      ; 1ST WORD OF DIRECTORY NAME
000042 F.FEXT: .BLKW  1      ; POINTER TO EXTENSION FCB
000044 F.FVBN: .BLKW  2      ; STARTING VBN OF THIS FILE SEGMENT
000050 F.LKL:  .BLKW  1      ; POINTER TO LOCKED BLOCK LIST FOR FILE
000052 F.WIN:  .BLKW  1      ; WINDOW BLOCK LIST FOR THIS FILE

000054 F.LGTH:                ; SIZE IN BYTES OF FCB

```

F11DF\$ (Cont.)

```

;
; WINDOW
;
      .ASECT
      .=0
000000 W.ACT:           ; NUMBER OF ACTIVE MAPPING POINTERS
                        ; WHEN NO SECONDARY POOL
000000 W.BLKS:         ; BLOCK SIZE OF SECONDARY POOL SEGMENT
                        ; WHEN SECONDARY POOL
000000 W.CTL:  .BLKW   1 ; LOW BYTE = # OF MAP ENTRIES ACTIVE
                        ; HIGH BYTE CONSISTS OF CONTROL BITS
      WI.RDV= 400      ; READ VIRTUAL BLOCK ALLOWED IF SET
      WI.WRV= 1000     ; WRITE VIRTUAL BLOCK ALLOWED IF SET
      WI.EXT= 2000     ; EXTEND ALLOWED IF SET
      WI.LCK= 4000     ; SET IF LOCKED AGAINST SHARED ACCESS
      WI.DLK= 10000    ; SET IF DEACCESS LOCK ENABLED
      WI.PND= 20000    ; WINDOW TURN PENDING BIT
      WI.EXL= 40000    ; SET IF MANUAL UNLOCK DESIRED
      WI.WCK= 100000   ; DATA CHECK ALL WRITES TO FILE
000002 W.IOC:  .BLKB   1 ; COUNT OF I/O THROUGH THIS WINDOW
000003      .BLKB   1 ; RESERVED
000004 W.FCB:  .BLKW   1 ; FILE CONTROL BLOCK ADDRESS
000006 W.LKL:  .BLKW   1 ; POINTER TO LIST OF USERS LOCKED BLOCKS
000010 W.WIN:  .BLKW   1 ; WINDOW BLOCK LIST LINK WORD

      .IF NB SYSDEF    ; IF SYSDEF SPECIFIED IN CALL

      .IF NDF P$WND   ; IF SECONDARY POOL WINDOWS NOT ALLOWED

;
; NON-SECONDARY POOL WINDOW BLOCK
; IF SECONDARY POOL WINDOWS ARE NOT ENABLED, THE WINDOW BLOCK
; CONTAINS THE CONTROL INFORMATION AND RETRIEVAL POINTERS.
;
W.VBN:  .BLKB   1      ; HIGH BYTE OF 1ST VBN MAPPED BY WINDOW
W.MAP:   ; DEF LABEL WITH ODD ADDR TO CATCH BAD REFS
W.WISZ:  .BLKB   1      ; SIZE IN RTRV PTRS OF WINDOW (7 BITS)
      .BLKW   1      ; LOW ORDER WORD OF 1ST VBN MAPPED
W.RTRV:   ; OFFSET TO 1ST RETRIEVAL POINTER IN WINDOW

      .IFF           ; IF WINDOWS IN SECONDARY POOL

;
; SECONDARY POOL WINDOW CONTROL AND MAPPING BLOCK
; IF SECONDARY POOL WINDOW BLOCKS ARE ENABLED, LUTN2 POINTS
; TO A CONTROL BLOCK IN SYSTEM POOL WHICH CONTAINS THE
; FOLLOWING CONTROL FIELDS AND THE MAPPING INFORMATION
; FOR THE SECONDARY POOL WINDOW.
;
W.MAP:  .BLKW   1      ; ADDR TO THE MAPPING PTRS IN SECONDARY POOL

;
; SECONDARY POOL WINDOW
; IF SECONDARY POOL WINDOW BLOCKS ARE ENABLED, THE RETRIEVAL
; POINTERS ARE MAINTAINED IN SECONDARY POOL IN THE FOLLOWING
; FORMAT.
;
      .=0

```

F11DF\$ (Cont.)

```

        ASSUME W.CTL,0
        .BLKB 1 ; NUMBER OF ACTIVE MAPPING POINTERS
W.USE:  .BLKB 1 ; STATUS OF BLOCK
W.VBN:  .BLKB 1 ; HIGH BYTE OF 1ST VBN MAPPED BY WINDOW
W.WISZ: .BLKB 1 ; SIZE IN RTRV PTRS OF WINDOW (7 BITS)
        .BLKW 1 ; LOW ORDER WORD OF 1ST VBN MAPPED
W.RTRV: ; OFFSET TO 1ST RETRIEVAL POINTER IN WINDOW

        .ENDC ;P$$WND ; END SECONDARY POOL WINDOW CONDITIONAL

        .ENDC ;SYSDEF ; END SYSDEF CONDITIONAL

;
; LOCKED BLOCK LIST NODE
;
        .ASECT
        .=0
000000 L.LNK: .BLKW 1 ; LINK TO NEXT NODE IN LIST
000002 L.WI1: .BLKW 1 ; POINTER TO WINDOW FOR FIRST ENTRY
000004 L.VB1: .BLKB 1 ; HIGH ORDER VBN BYTE
000005 L.CNT: .BLKB 1 ; COUNT FOR ENTRY
000006 .BLKW 1 ; LOW ORDER VBN

000010 L.LKSZ:

        .PSECT

```

HDRDF\$

HDRDF\$

```

;
; TASK HEADER OFFSET DEFINITIONS
;
    .ASECT
    .=0
000000 H.CSP:  .BLKW  1      ;CURRENT STACK POINTER
000002 H.HDLN: .BLKW  1      ;HEADER LENGTH IN BYTES
000004 H.SMAP: .BLKB  1      ;SUPERVISOR D SPACE OVERMAP MASK
000005 H.DMAP: .BLKB  1      ;USER D SPACE OVERMAP MASK
000006          .BLKW  1      ;RESERVED
000010 H.CUIC: .BLKW  1      ;CURRENT TASK UIC
000012 H.DUIC: .BLKW  1      ;DEFAULT TASK UIC
000014 H.IPS:  .BLKW  1      ;INITIAL PROCESSOR STATUS WORD (PS)
000016 H.IPC:  .BLKW  1      ;INITIAL PROGRAM COUNTER (PC)
000020 H.ISP:  .BLKW  1      ;INITIAL STACK POINTER (SP)
000022 H.ODVA: .BLKW  1      ;ODT SST VECTOR ADDRESS
000024 H.ODVL: .BLKW  1      ;ODT SST VECTOR LENGTH
000026 H.TKVA: .BLKW  1      ;TASK SST VECTOR ADDRESS
000030 H.TKVL: .BLKW  1      ;TASK SST VECTOR LENGTH
000032 H.PFVA: .BLKW  1      ;POWER FAIL AST CONTROL BLOCK ADDRESS
000034 H.FPVA: .BLKW  1      ;FLOATING POINT AST CONTROL BLOCK ADDRESS
000036 H.RCVA: .BLKW  1      ;RECIEVE AST CONTROL BLOCK ADDRESS
000040 H.EFSV: .BLKW  1      ;EVENT FLAG ADDRESS SAVE ADDRESS
000042 H.FPSA: .BLKW  1      ;POINTER TO FLOATING POINT/EAE SAVE AREA
000044 H.WND:  .BLKW  1      ;POINTER TO NUMBER OF WINDOW BLOCKS
000046 H.DSW:  .BLKW  1      ;TASK DIRECTIVE STATUS WORD
000050 H.FCS:  .BLKW  1      ;FCS IMPURE POINTER
000052 H.FORT: .BLKW  1      ;FORTRAN IMPURE POINTER
000054 H.OVLY: .BLKW  1      ;OVERLAY IMPURE POINTER
000056 H.VEXT: .BLKW  1      ;WORK AREA EXTENSION VECTOR POINTER
000060 H.SPRI: .BLKB  1      ;PRIORITY DIFFERENCE FOR SWAPPING
000061 H.NML:  .BLKB  1      ;NETWORK MAILBOX LUN
000062 H.RRVA: .BLKW  1      ;RECEIVE BY REFERENCE AST CONTROL BLOCK ADDR
000064 H.X25:  .BLKB  1      ;FOR USE BY X25 SOFTWARE
000065          .BLKB  1      ;5 RESERVED BYTES
000066          .BLKW  2      ;
000072 H.GARD: .BLKW  1      ;POINTER TO HEADER GUARD WORD
000074 H.NLUN: .BLKW  1      ;NUMBER OF LUN'S
000076 H.LUN:  .BLKW  2      ;START OF LOGICAL UNIT TABLE

;
; LENGTH OF FLOATING POINT SAVE AREA
;
H.FPSL=25.*2      ;

;
; WINDOW BLOCK OFFSETS
;
    .=0

```

HDRDF\$ (Cont.)

```

000000 W.BPCB: .BLKW 1 ;PARTITION CONTROL BLOCK ADDRESS
000002 W.BLVR: .BLKW 1 ;LOW VIRTUAL ADDRESS LIMIT
000004 W.BHVR: .BLKW 1 ;HIGH VIRTUAL ADDRESS LIMIT
000006 W.BATT: .BLKW 1 ;ADDRESS OF ATTACHMENT DESCRIPTOR
000010 W.BSIZ: .BLKW 1 ;SIZE OF WINDOW IN 32W BLOCKS
000012 W.BoFF: .BLKW 1 ;PHYSICAL MEMORY OFFSET IN 32W BLOCKS
000014 W.BFPD: .BLKB 1 ;FIRST PDR ADDRESS
000015 W.BNPD: .BLKB 1 ;NUMBER OF PDR'S TO MAP
000016 W.BLPD: .BLKW 1 ;CONTENTS OF LAST PDR
000020 W.BLGH: ;LENGTH OF WINDOW DESCRIPTOR

;
; BIT DEFINITION FOR W.BLPD
;
WB.NBP=20 ;CACHE BYPASS IS NOT DESIRED FOR THIS WINDOW
WB.BPS=40 ;ALWAYS BYPASS THE CACHE FOR THIS WINDOW

.PSECT

```

HWDDF\$

```

HWDDF$  ,,SYSDEF

;
; MACROS FOR DEFINING MAPPING REGISTER DEFINITIONS
;
      .MACRO  CRESET  NAM,ADDR
$$$=0
      .REPT   8.
      CRENAM  NAM,ADDR+<$$$*2>,\$$$
$$$=$$$+1
      .ENDR
      .ENDM

      .MACRO  CRENAM  NAM,ADDR,N
'NAM' 'N'==ADDR
      .ENDM

;
; HARDWARE REGISTER ADDRESSES AND STATUS CODES
;
MPCSR=177746           ;ADDRESS OF PDP-11/70 MEMORY PARITY REGISTER
MPAR=172100            ;ADDRESS OF FIRST MEMORY PARITY REGISTER
PIRQ=177772           ;PROGRAMMED INTERRUPT REQUEST REGISTER
PR0=0                  ;PROCESSOR PRIORITY 0
PR1=40                 ;PROCESSOR PRIORITY 1
PR4=200                ;PROCESSOR PRIORITY 4
PR5=240                ;PROCESSOR PRIORITY 5
PR6=300                ;PROCESSOR PRIORITY 6
PR7=340                ;PROCESSOR PRIORITY 7
PS=177776              ;PROCESSOR STATUS WORD
SWR=177570             ;CONSOLE SWITCH AND DISPLAY REGISTER
TPS=177564             ;CONSOLE TERMINAL PRINTER STATUS REGISTER

;
; EXTENDED ARITHMETIC ELEMENT REGISTERS
;
      .IF DF  ES$EAE

AC=177302              ;ACCUMULATOR
MQ=177304              ;MULTIPLIER-QUOTIENT
SC=177310              ;SHIFT COUNT

      .ENDC

;
; MEMORY MANAGEMENT HARDWARE REGISTERS AND STATUS CODES
;
      .IF NB  B

      CRESET  KINAR,172340   ;KERNEL I PAR'S
      CRESET  KINDR,172300  ;KERNEL I PDR'S
      CRESET  KDSAR,172360  ;KERNEL D PAR'S
      CRESET  KSDSR,172320  ;KERNEL D PDR'S
      CRESET  SISAR,172240  ;SUPERVISOR I PAR'S
      CRESET  SISDR,172200  ;SUPERVISOR I PDR'S

```


HWDDF\$ (Cont.)

```

CRESET SDSAR,172260 ;SUPERVISOR D PAR'S
CRESET SDSDR,172220 ;SUPERVISOR D PDR'S
CRESET UINAR,177640 ;USER I PAR'S
CRESET UINDR,177600 ;USER I PDR'S
CRESET UDSAR,177660 ;USER D PAR'S
CRESET UDSDR,177620 ;USER D PDR'S

```

```
.ENDC
```

```
.IF NB SYSDEF
```

```
.IF DF K$SDAS
```

```

CRESET KISAR,172360 ;KERNEL D PAR'S
CRESET KISDR,172320 ;KERNEL D PDR'S

```

```
.IFF
```

```

CRESET KISAR,172340 ;KERNEL I PAR'S
CRESET KISDR,172300 ;KERNEL I PDR'S

```

```
.ENDC
```

```
.IF DF U$SDAS
```

```

CRESET UISAR,177660 ;USER D PAR'S
CRESET UISDR,177620 ;USER D PDR'S

```

```
.IFF ; DF U$SDAS
```

```

CRESET UISAR,177640 ;USER I PAR'S
CRESET UISDR,177600 ;USER I PDR'S

```

```
.ENDC ; DF U$SDAS
```

```
.ENDC
```

```

UBMPR=170200 ;UNIBUS MAPPING REGISTER 0
CMODE=140000 ;CURRENT MODE FIELD OF PS WORD
PMODE=30000 ;PREVIOUS MODE FIELD OF PS WORD
CSMODE=40000 ;CURRENT MODE = SUPERVISOR PS WORD BITS
PSMODE=10000 ;PREVIOUS MODE = SUPERVISOR PS WORD BITS
SR0=177572 ;SEGMENT STATUS REGISTER 0
SR3=172516 ;SEGMENT STATUS REGISTER 3
CPUERR=177766 ;CPU ERROR REGISTER
MEMERR=177744 ;MEMORY SYSTEM ERROR REGISTER
MEMCTL=177746 ;MEMORY CONTROL REGISTER

```

```

;
; FEATURE SYMBOL DEFINITIONS

```

```

;
FE.EXT=1 ;22-BIT EXTENDED MEMORY SUPPORT
FE.MUP=2 ;MULTI-USER PROTECTION SUPPORT
FE.EXV=4 ;EXECUTIVE IS SUPPORTED TO 20K
FE.DRV=10 ;LOADABLE DRIVER SUPPORT
FE.PLA=20 ;PLAS SUPPORT

```

HWDDF\$ (Cont.)

```

FE.CAL=40                ;DYNAMIC CHECKPOINT SPACE ALLOCATION
FE.PKT=100              ;PREALLOCATION OF I/O PACKETS
FE.EXP=200              ;EXTEND TASK DIRECTIVE SUPPORTED
FE.LSI=400              ;PROCESSOR IS AN LSI-11
FE.OFF=1000            ;PARENT/OFFSPRING TASKING SUPPORTED
FE.FDT=2000            ;FULL DUPLEX TERMINAL DRIVER SUPPORTED
FE.X25=4000            ;X.25 CEX IS LOADED
FE.DYM=10000           ;DYNAMIC MEMORY ALLOCATION SUPPORTED
FE.CEX=20000           ;COM EXEC IS LOADED
FE.MXT=40000           ;MCR EXIT AFTER EACH COMMAND MODE
FE.NLG=100000          ;LOGINS DISABLED - MULTI-USER SUPPORT

;
; FEATURE MASK DEFINITIONS (SECOND WORD)
;
F2.DAS=1                ;KERNEL DATA SPACE SUPPORTED
F2.LIB=2                ;SUPERVISOR MODE LIBRARIES SUPPORTED
F2.MP=4                 ;SYSTEM SUPPORTS MULTIPROCESSING
F2.EVT=10               ;SYSTEM SUPPORTS EVENT TRACE FEATURE
F2.ACN=20               ;SYSTEM SUPPORTS CPU ACCOUNTING
F2.SDW=40               ;SYSTEM SUPPORTS SHADOW RECORDING
F2.POL=100              ;SYSTEM SUPPORTS SECONDARY POOLS
F2.WND=200              ;SYSTEM SUPPORTS SECONDARY POOL FILE WINDOWS
F2.DPR=400              ;SYSTEM HAS A SEPARATE DIRECTIVE PARTITION
F2.IRR=1000             ;INSTALL, RUN, AND REMOVE SUPPORT
F2.GGF=2000             ;GROUP GLOBAL EVENT FLAG SUPPORT
F2.RAS=4000             ;RECEIVE/SEND DATA PACKET SUPPORT
F2.AHR=10000            ;ALT. HEADER REFRESH AREA SUPPORT
F2.RBN=20000            ;ROUND ROBIN SCHEDULING SUPPORT
F2.SWP=40000            ;EXECUTIVE LEVEL DISK SWAPPING SUPPORT
F2.STP=100000           ;EVENT FLAG MASK IS IN THE TCB(1=YES)

;
; THIRD FEATURE MASK SYMBOL DEFINITIONS
;
F3.CRA=1                ;SYSTEM SPONTANEOUSLY CRASHED (1=YES)
F3.XCR=2                ;SYSTEM CRASHED FROM XDT (1=YES)
F3.EIS=4                ;SYSTEM REQUIRES EXTENDED INSTRUCTION SET
F3.STM=10               ;SYSTEM HAS SET SYSTEM TIME DIRECTIVE
F3.UDS=20               ;SYSTEM SUPPORTS USER DATA SPACE
F3.PRO=40               ;SYSTEM SUPPORTS SEC. POOL PROTO TCBS
F3.XHR=100              ;SYSTEM SUPPORTS EXTERNAL TASK HEADERS
F3.AST=200              ;SYSTEM HAS AST SUPPORT
F3.11S=400              ;RSX-11S SYSTEM
F3.CLI=1000             ;MULTIPLE CLI SUPPORT
F3.TCM=2000             ;SYSTEM HAS SEPARATE TERMINAL DRIVER POOL
F3.PMN=4000             ;SYSTEM SUPPORTS POOL MONITORING
F3.WAT=10000            ;SYSTEM HAS WATCHDOG TIMER SUPPORT
F3.RLK=20000            ;SYSTEM SUPPORTS RMS RECORD LOCKING
F3.SHF=40000            ;SYSTEM SUPPORTS SHUFFLER TASK

;
; FOURTH FEATURE MASK BITS
;
F4.CXD=1                ;COMM EXEC IS DEALLOCATED (NON-I/D ONLY)

```

HWDDF\$ (Cont.)

```

;
;  HARDWARE FEATURE MASK BIT DEFINITIONS
;
;      HF.CIS, HF.FPP DEFINED AS SIGN BITS FOR RUN TIME SPEED
;
HF.UBM=1           ;PROCESSOR HAS A UNIBUS MAP (1=YES)
HF.EIS=2           ;PROCESSOR HAS EXTENDED INSTRUCTION SET
HF.CIS=200         ;PROCESSOR SUPPORTS COMMERCIAL INST SET
HF.FPP=100000      ;(1=PROC. HAS NO FLOATING POINT UNIT)

;
;  SYSGEN FEATURE SELECTIONS MASK.  THIS IS INTENDED TO RECORD IN A
;  BIT MASK THE CHOICES THE USER HAS MADE AT SYSGEN TIME.  FEATURES
;  WILL BE LISTED HERE WHEN THEY ARE BEING RECORDED FOR OUR
;  INFORMATIONAL PURPOSES ONLY.  THEY CANNOT BE TESTED LIKE BITS IN
;  THE FEATURE MASK SINCE THIS ONLY EXISTS IN THE RSX11M.STB FILE.
;  NO BITS IN MEMORY ARE USED.  THEY ARE ONLY INTENDED TO BE PRINTED
;  FROM THE STB FILE BY CDA.
;
SF.STD=1           ;STANDARD EXEC SELECTED
SF.RL2=2           ;SYSTEM IS FROM RL02 KIT

;
;  MULTIPROCESSOR STATUS TABLE DEFINITIONS (TEMPORARY)
;
MP.CRH=100000      ;CRASH PROCESSOR IMMEDIATELY
MP.PWF=40000       ;POWERFAIL ON ONE CPU
MP.RSM=20000       ;RESET INTERRUPT MASKS
MP.NOP=10000       ;NOP FUNCTION FOR TRANSMISSION CHECK
MP.STP=4           ;STOP PROCESSOR IN ORDERLY FASHION
MP.INT=7777        ;BIC MASK FOR INTERRUPT LVL FUNCTIONS

```

ITBDF\$

```

ITBDF$  ,,SYSDEF

;
; INTERRUPT TRANSFER BLOCK (ITB) OFFSET DEFINITIONS
;

      .MCALL  PKTDF$
PKTDF$          ; DEFINE AST BLOCK OFFSETS

      .ASECT

.=0
000000 X.LNK:  .BLKW  1          ; LINK WORD FOR ITB LIST STARTING IN TCB
000002 X.JSR:  JSR    R5,@#0    ; CALL $INTSC
000006 X.PSW:  .BLKB  1          ; LOW BYTE OF PSW FOR ISR
000007          .BLKB  1          ; UNUSED
000010 X.ISR:  .BLKW  1          ; ISR ENTRY POINT (APR5 MAPPING)
000012 X.FORK:          ; FORK BLOCK
000012          .BLKW  1          ; THREAD WORD
000014          .BLKW  1          ; FORK PC
000016          .BLKW  1          ; SAVED R5
000020          .BLKW  1          ; SAVED R4
000022 X.REL:  .BLKW  1          ; RELOCATION BASE FOR APR5
000024 X.DSI:  .BLKW  1          ; ADDRESS OF DIS.INT. ROUTINE
000026 X.TCB:  .BLKW  1          ; TCB ADDRESS OF OWNING TASK

      .IF NB  SYSDEF

000030          .BLKW  1          ; A.DQSR FOR AST BLOCK
000032 X.AST:  .BLKB  A.PRM     ; AST BLOCK
000044 X.VEC:  .BLKW  1          ; VECTOR ADDRESS (IF AST SUPPORT,
; THIS IS FIRST AND ONLY AST PARAMETER)
000046 X.VPC:  .BLKW  1          ; SAVED VECTOR PC
000050 X.LEN:          ; LENGTH IN BYTES OF ITB

      .ENDC

      .PSECT

```

KRBDF\$

KRBDF\$

```

;
; CONTROLLER REQUEST BLOCK (KRB)
;
; THE CONTROLLER REQUEST BLOCK DEFINES THE ENVIRONMENT OF A DEVICE
; CONTROLLER. EXACTLY ONE KRB EXISTS FOR EVERY DEVICE CONTROLLER
; IN AN RSX-11M+ SYSTEM. THE KRB CONTAINS CERTAIN DEVICE STATUS
; INCLUDING THE CSR AND VECTOR ADDRESS FOR THE CONTROLLER.
;
;
      .ASECT
      .=177770
177770 K.PRM:  .BLKW  1      ;DEVICE DEPENDANT PARAMETER WORD
177772 K.PRI:  .BLKB  1      ;CONTROLLER PRIORITY
177773 K.VCT:  .BLKB  1      ;INTERRUPT VECTOR ADDRESS
177774 K.CON:  .BLKB  1      ;CONTROLLER INDEX WITHIN THE SYSTEM
177775 K.IOC:  .BLKB  1      ;CONTROLLER I/O COUNT
177776 K.STS:  .BLKW  1      ;CONTROLLER STATUS
000000 K.CSR:  .BLKW  1      ;ADDRESS OF CONTROL STATUS REGISTER
;
; NOTE: K.CSR MUST BE THE ZERO OFFSET!
;
000002 K.OFF:  .BLKW  1      ;OFFSET TO UCB/UMR/RHBAE TABLE
000004 K.HPU:  .BLKB  1      ;HIGHEST PHYSICAL UNIT NUMBER
000005      .BLKB  1      ;UNUSED BYTE
000006 K.OWN:  .BLKW  1      ;OWNER OF CONTROLLER
000010 K.CRQ:  .BLKW  2      ;CONTROLLER REQUEST QUEUE
000014 K.URM:  .BLKW  1      ;CONTROLLER UNIBUS RUN MASK
000016 K.FRK:  .BLKW  1      ;POSSIBLE KRB FORK BLOCK

;
; OFFSETS FOR THE KRB EXTENSION REACHED BY ADDING (K.OFF) TO
; THE STARTING ADDRESS OF THE KRB.
;

;
; DEFINE OFFSETS IN SCB/KRB FOR DISK MSCP CONTROLLERS
;
      .=-20.
177754 KE.UMH: .BLKW  2      ;LIST HEAD FOR UMR WAITING ASSIGNMENT BLK(S)
177760 KE.UMC: .BLKW  1      ;COUNT OF AVAILABLE UMR WAITING ASSIGNMENT
                          ;BLOCK(S)

      .=177776
177776 KE.RHB: .BLKW  1      ;OFFSET TO RHBAE REGISTER (IF ANY)
;
; WHEN ONE ADDS (K.OFF) TO THE KRB ADDRESS, IT YIELDS AN ADDRESS
; WHICH POINTS TO HERE.
;
000000 KE.UCB: .BLKW  1      ;OFFSET TO UCB TABLE (IF KS.UCB SET)

      .PSECT

```

KRBDF\$ (Cont.)

```

;
; CONTROLLER REQUEST BLOCK (KRB) STATUS BIT DEFINITIONS
;
KS.OFL=1                ;CONTROLLER OFFLINE (1=YES)
KS.MOF=2                ;CONTROLLER MARKED FOR OFFLINE (1=YES)
KS.UOP=4                ;SUPPORTS OVERLAPPED OPERATION (1=YES)
KS.MBC=10               ;DEVICE IS MASSBUS CONTROLLER (1=YES)
KS.SDX=20               ;SEEKS ALLOWED DURING DATA XFERS (1=YES)
KS.POE=40               ;PARALLEL OPERATION ENABLED (1=YES)
KS.UCB=100              ;UCB TABLE PRESENT (1=YES)
KS.DIP=200              ;DATA TRANSFER IN PROGRESS (1=YES)
KS.PDF=400              ;PRIVILEGED DIAGNOSTIC FUNCTIONS ONLY(1=YES)
KS.EXT=1000             ;EXTENDED 22-BIT UNIBUS CONTROLLER (1=YES)
KS.SLO=2000            ;CONTROLLER IS SLOW COMING ONLINE (1=YES)

;
; DEFINE THE CONTIGUOUS SCB OFFSETS
;
        .ASECT
        .=177762
177762 S.PRI:  .BLKB  1          ;CONTROLLER PRIORITY
177763 S.VCT:  .BLKB  1          ;INTERRUPT VECTOR ADDRESS
177764 S.CON:  .BLKB  1          ;CONTROLLER INDEX
177765         .BLKB  1
177766         .BLKW  1
177770 S.CSR:  .BLKW  1          ;CONTROL AND STATUS REGISTER
177772         .BLKW  1
177774         .BLKB  1
177775         .BLKB  1
177776 S.OWN:  .BLKW  1          ;DISTRIBUTED CNTBL

;
; SUBCONTROLLER REQUEST BLOCK (KRB1)
;
; THE SUBCONTROLLER REQUEST BLOCK DEFINES THE ENVIRONMENT OF A
; DEVICE SUBCONTROLLER.  EXACTLY ONE KRB1 EXISTS FOR EVERY DEVICE
; SUBCONTROLLER IN AN RSX-11M+ SYSTEM.
;
        .ASECT
        .=-4
177774 K1.CON:  .BLKB  1          ;SUBCONTROLLER INDEX WITHIN THE SYSTEM
177775         .BLKB  1          ;UNUSED BYTE
177776 K1.STS:  .BLKW  1          ;SUBCONTROLLER STATUS
000000 K1.MAS:  .BLKW  1          ;UCB ADDRESS OF THE MASTER UNIT
;
; NOTE: K1.MAS MUST BE THE ZERO OFFSET
;
000002 K1.OWN:  .BLKW  1          ;OWNER OF SUBCONTROLLER
000004 K1.CRQ:  .BLKW  2          ;SUBCONTROLLER REQUEST QUEUE
000010 K1.UCB:          ;START OF THE UCB TABLE (IF ANY)

        .PSECT

```

LCBDF\$

LCBDF\$

```

;
; LOGICAL ASSIGNMENT CONTROL BLOCK
;
; THE LOGICAL ASSIGNMENT CONTROL BLOCK (LCB) IS USED TO ASSOCIATE A
; LOGICAL NAME WITH A PHYSICAL DEVICE UNIT.  LCB'S ARE LINKED
; TOGETHER TO FORM THE LOGICAL ASSIGNMENTS OF A SYSTEM.  ASSIGNMENTS
; MAY BE ON A SYSTEM WIDE OR LOCAL (TERMINAL) BASIS.
;
      .ASECT
.=0
000000 L.LNK:  .BLKW  1      ;LINK TO NEXT LCB
000002 L.NAM:  .BLKW  1      ;LOGICAL NAME OF DEVICE
000004 L.UNIT: .BLKB  1      ;LOGICAL UNIT NUMBER
000005 L.TYPE: .BLKB  1      ;TYPE OF ENTRY (0=SYSTEM WIDE)
000006 L.UCB:  .BLKW  1      ;TI UCB ADDRESS
000010 L.ASG:  .BLKW  1      ;ASSIGNMENT UCB ADDRESS
000012 L.LGTH=.-L.LNK      ;LENGTH OF LCB

      .PSECT

```

MTADFS

```

MTADFS

;
; ANSI MAGTAPE SPECIFIC DATA STRUCTURES
;
; VOLUME SET CONTROL BLOCK OFFSET DEFININTIONS (VSCB)
;
; VOLUME SET AND PROCESS CONTROL SECTION
;
;
; .ASECT
;
;.=0
000000 V.TCNT: .BLKW 1 ;TRANSACTION COUNT
000002 V.TYPE: .BLKB 1 ;VOLUME TYPE DESCRIPTOR
000003 V.VCHA: .BLKB 1 ;VOLUME CHARACTERISTICS
000004 V.LABL: .BLKB 12. ;FILE SET ID (FIRST SIX BYTES)
000020 V.NXT: .BLKW 1 ;PTR TO NEXT VSCB NODE
000022 V.MVL: .BLKW 1 ;PTR TO MOUNTED VOL LIST
000024 V.UVL: .BLKW 1 ;PTR TO UNMOUNTED VOL LIST
000026 V.ATL: .BLKW 1 ;ATL ADDR OF ACCESSING TASK TCB IN RSX11M
000030 V.UCB: .BLKW 1 ;ADDR OF CURRENT UCB OR PUD
000032 V.RVOL: .BLKB 1 ;CURRENT RELATIVE VOL #
000033 V.MOU: .BLKB 1 ;MOUNT MODE BYTE
000034 V.TCHR: .BLKW 1 ;UINT CHAR. FOR ALL UNITS USED FOR VOL SET
000036 V.SEQN: .BLKW 1 ;CURRENT FILE SEQUENCE #
000040 V.SECN: .BLKW 1 ;CURRENT FILE SECTION #
000042 V.TPOS: .BLKB 1 ;POSITION OF TAPE IN TM'S TO NXT HDR1
000043 V.PSTA: .BLKB 1 ;PROCESS STATUS BYTE
000044 V.TIMO: .BLKW 1 ;BLOCKED PROCESS TIMEOUT COUNTER
000046 V.STAT: .BLKW 3 ;STATUS WORDS USED BY COMMAND EXECUTION MODS
000054 V.TRTB: .BLKB 1 ;TRANSLATION CONTROL BYTE
000055 V.EFTV: .BLKB 1 ;FOR MAG TO RETURN IE.EOF, EOT, EOY

;
; LABEL DATA SECTION
;
000056 V.BLKL: .BLKW 1 ;BLOCK LENGTH
000060 V.RECL: .BLKW 1 ;RECORD LENGTH
000062 V.FNAM: .BLKW 3 ;FILE NAME
000070 V.FTYP: .BLKW 1 ;FILE TYPE
000072 V.FVER: .BLKW 1 ;FILE VERSION #
000074 V.CDAT: .BLKW 2 ;CREATION DATE
000100 V.EDAT: .BLKW 2 ;EXPRIATION DATE
000104 V.BLKC: .BLKW 2 ;BLOCK COUNT FOR FILE SECTION
000110 V.RTYP: .BLKB 1 ;RECORD TYPE
000111 V.FATT: .BLKB 1 ;FILE ATTRIBUTES FOR CARRIAGE CONTROL
000112 .BLKB 30. ;REMAINDER OF FILE ATTRIBUTES

;
; NULL WINDOW SECTION
;
000150 V.WIND: .BLKW 4. ;NULL WINDOW
000160 V.MST2: .BLKW 1 ;MAGTAPE STATUS BITS
000162 V.FABY: .BLKB 1 ;FILE ACCESSIBILITY BYTE (HDR1)
000163 .BLKB 1 ;SPARE
000164 V.ANSN: .BLKB 17. ;ANSI 17 CHARACTER FILE NAME

```


MTADFS\$ (Cont.)

```

000205 V.BOFF: .BLKB 1. ;BUFFER OFFSET
000206 V.DENS: .BLKB 1. ;REQUESTED UNIT DENSITY
000207 V.DRAT: .BLKB 1. ;DEFAULT RECORD ATTRIBUTES
000210 V.DBLK: .BLKW 1. ;DEFAULT BLOCK SIZE
000212 V.DREC: .BLKW 1. ;DEFAULT RECORD SIZE

000214 S.VSCB=. ;SIZE OF VSCB

.PSECT

;
; DEFINE OFFSETS INTO NULL WINDOW SECTION
;
.ASECT
.=0
000000 W.CTL: .BLKW 1 ;CONTROL WORD IN WINDOW
V.WINC=V.WIND+W.CTL ;CNTRL WORD IN NULL WINDOW
;RELATIVE TO THE VSCB

.PSECT

;
; MOUNTED VOLUME LIST OFFSET DEFINITIONS (MVL)
;
.ASECT
.=0
000000 M.NXT: .BLKW 1 ;PTR TO NXT MVL NODE (11M)
000002 M.UIC: .BLKW 1 ;OWNER UIC FROM RVOL #1
000004 M.CH: .BLKW 1 ;U.CH/U.VP (11D)
000006 M.PROT: .BLKW 1 ;PROTECTION U.AR IN 11D
000010 M.RVOL: .BLKB 1 ;RELATIVE VOL # OF MOUNTED VOLUME
000011 M.STAT: .BLKB 1 ;VOLUME STATUS
000012 M.VIDP: .BLKW 1 ;VOLUME ID POINTER
000014 M.UCB: .BLKW 1 ;ADDR OF ASSOC UCB OR PUD

000016 S.MVL=. ;SIZE OF MVL NODE

.PSECT

;
; UNMOUNTED VOLUME AND VOLUME LIST OFFSET DEFINITIONS (UVL)
;
.ASECT
.=0
000000 L.NXT: .BLKW 1 ;PTR TO NXT UVL NODE
000002 L.VOL1: .BLKB 1 ;REL VOL # OF 1'ST VOL IN NODE
000003 L.VOL2: .BLKB 1 ;REL VOL # OF 2'ND VOL IN NODE
000004 L.VID1: .BLKB 6 ;VOL ID OF 1'ST VOL IN NODE
000012 L.VID2: .BLKB 6 ;VOL ID OF 2'ND VOL IN NODE

000020 S.UVL=. ;SIZE OF UVL NODE

```

MTADF\$ (Cont.)

```

.PSECT

;
; SYSTEM DATA STRUCTURE CONTENT VALUES
;

;
; VSCB VALUES
;
; V.MOU VALUES
;
VM.OLD = 200 ;OLD .FL300 VOLUME - VM.BYP WILL ALSO BE SET
VM.BYP = 100 ;BYPASS LABEL PROCESSING
VM.ULB = 40 ;UNLABELED TAPE
VM.FSC = 20 ;OVERRIDE FILE SET ID CHECK
VM.EXC = 10 ;OVERRIDE EXPIRATION DATE CHECK

;
; V.MST2 VALUES
;
V2.INI = 1 ;MAG WANTS US TO INITIALIZE NEXT OUTPUT
V2.XH2 = 2 ;THIS FILE HAS NO HDR2, DON'T WRITE EOF2
V2.XH3 = 4 ;THIS FILE HAS NO HDR3, DON'T WRITE EOF3
V2.NH3 = 10 ;DON'T WRITE HDR3/EOX3 LABELS
V2.OAC = 20 ;OVERRIDE FILE/VOLUME ACCESSIBILITY

;
; V.PSTA VALUES - UNBLOCKED TRANSITION STATE
;
VP.RM = 2 ;READ DATA MODE
VP.WM = 4 ;WRITE DATA MODE
VP.UCM = 6 ;UNLABELLED CREATE POSITIONING MODE
VP.SM = 10 ;SEARCH MODE
VP.MOU = 20 ;MOUNT MODE
VP.RWD = 40 ;REWIND OR VOL VERIFICATION WAIT
VP.VFY = VP.RWD
VP.POS = 100 ;PROCESS IN POSITIONING MODE
; (MULTI-SECTION FILE)

;
; BLOCKED STATE = -(UNBLOCKED TRANSITION STATE VALUES)
;
; PROCESS TIMED OUT BIT 0 = 1
;
VP.TO=1

;
; NULL WINDOW CONTROL BIT DEFINITIONS
;
WI.RDV = 400 ;ACCESSED FOR READ
WI.WRV = 1000 ;ACCESSED FOR WRITE
WI.EXT = 2000 ;ACCESSED FOR EXTEND
WI.LCK = 4000 ;LOCKED

```

MTADFS (Cont.)

```
;  
; MVL VALUES IN THE M.STAT FIELD  
;  
MS.VER =      200      ;VOL ID NOT VERIFIED  
MS.RID =       1      ;VOL ID TO BE READ NOT CHECKED  
MS.NMO =       2      ;MOUNT MESSAGE NOT GIVEN YET  
MS.TMO =       4      ;ONE TIMEOUT ALREADY EXPRIED  
MS.EXP =      10      ;EXPIRATION DATE MESSAGE GIVEN  
  
;  
; MISC BITS USED IN MOUNT (STORED IN V.STS)  
;  
MO.OVR =       1      ;OVER RIDE VOL NAME SWITCH  
MO.UIC =       2      ;EXPLICIT UIC GIVEN  
MO.PRO =       4      ;EXPLICIT PROTECTION GIVEN  
MO.160 =      10      ;1600 BPI SPECIFIED
```

OLRDF\$

```

OLRDF$ $$$GBL

;
; THIS MODULE DEFINES THE ONLINE RECONFIGURATION INTERFACE
; AS IMPLEMENTED BETWEEN THE RSX-11M-PLUS TASKS CON, HRC, AND
; THE RDDR.
;
;
; DEFINE THE I/O FUNCTION CODES FOR ONLINE RECONFIGURATION CONTROL.
;
    .MCALL .WORD.,DEFIN$
    .IF IDN <$$$GBL>,<DEF$G>
...GBL=1
    .IFF
...GBL=0
    .ENDC

;
; THE FOLLOWING MACRO DEFINES THE SUB-FUNCTION CODES FOR EACH OF THE
; OPERATIONS PERFORMED BY THE HRC TASK AND A PARAMETER DESCRIBING
; THE ARGUMENTS REQUIRED FOR EACH FUNCTION. IN A MACRO CALL THE
; FOLLOWING ARE THE LEGAL COMBINATIONS FOR THE 'MASK'
; PARAMETER:
;
;           <>          SIGNIFYING NO PARAMETERS
;           <D>         SIGNIFYING ONE BUFFER DESCRIPTOR
;           <D,D>       SIGNIFYING TWO BUFFER DESCRIPTORS
;           <D,CT>     SIGNIFYING ONE DESCRIPTOR AND 'CT' BYTES OF
;                       PARAMETERS
;           <CT>       SIGNIFYING 'CT' BYTES OF PARAMETERS
;
;
    .MACRO FUNC NAME,SUBF,FUN,MASK
    .WORD. IO.'NAME,SUBF,FUN
    FUNCA NAME,<MASK>
    .ENDM

    .MACRO FUNCA NAME,MSK
    PARCT=0
    DESCT=0
    .IRP X,<MSK>
    .IIF IDN <X>,<P> PARCT=PARCT+1
    .IIF IDN <X>,<D> DESCT=DESCT+1
    .IIF GT <PARCT-17> .ERROR INVALID PARAMETER COUNT
    .IIF GT <DESCT-17> .ERROR INVALID DESCRIPTOR COUNT
    .ENDR

    TEMP=<DESCT*4>+<PARCT*2>
    .WORD. IOS'NAME,<<DESCT*20+PARCT>>,TEMP
    .ENDM

;
; DEFINE ONLINE RECONFIGURATION I/O FUNCTIONS
;
    .WORD. IO.MFC,000,001 ; MULTI-FUNCTION MODIFY CONFIGURATN
    .WORD. IO.RSC,000,002 ; READ SYSTEM CONFIGURATION
    .WORD. IO.WSC,000,006 ; MODIFY DEVICE CONFIGURATION

```

OLRDFS (Cont.)

```

;
; DEFINE SUBFUNCTIONS TO MODIFY DEVICE CONFIGURATION
;

FUNC    ONL,001,006,<D,D>          ; SET DEVICE ONLINE
FUNC    OFL,002,006,<D,D>          ; SET DEVICE OFFLINE
FUNC    MAI,003,006,<D,D>          ; SET DEVICE IN MAINT MODE
FUNC    CAC,004,006,<>            ; CACHE CONTROL
FUNC    MEM,005,006,<>            ; MIND CONTROL
FUNC    STN,006,006,<P,P>          ; RECONFIGURATION CONTROL,
; SPECIFY TASK NAME
FUNC    HRC,007,006,<P,P>          ; RECONFIGURATION CONTROL,
; HRC OPERATING MODE
FUNC    ONE,010,006,<P,P>          ; ON <CONDITION> <COMMAND>
FUNC    STA,011,006,<D>            ; RETURN DEVICE STATE
FUNC    IF ,012,006,<P,P>          ; IF <CONDITION> <COMMAND>
FUNC    RLI,013,006,<D,D,D,D>      ; LINK UNIBUS RUN
FUNC    RUL,014,006,<D,D,D,D>      ; UNLINK UNIBUS RUN
FUNC    MBO,015,006,<P,P,D,D,D,D,D,D,D,D> ; MEM BOX ONLINE
FUNC    RSW,016,006,<D,D,D,D>      ; SWITCH BUS
FUNC    WAT,017,006,<D>            ; WRITE ATTRIBUTES
FUNC    RAT,020,006,<D,D>          ; READ ATTRIBUTES
FUNC    MBF,021,006,<P,P,D,D,D,D,D,D,D,D> ; MEM BOX OFFLINE

IO$MAX=21                          ; DEFINE MAXIMUM SUBFUNCTION

DEFIN$ IS.HRG,6.                    ; STOP PROCESSING COND ENCOUNTERED
; SECOND STATUS WORD IS ARGUMENT

;
; DEFINE A MACRO, WHICH WHEN EXPANDED WITH THE APPROPRIATE
; DEFINITION FOR .IOER. WILL DEFINE THE PRIVATE ERROR CODES USED BY
; HRC AND CON.
;

.MACRO OLREMS

$$SVAL=-256.                        ; DEFINE INITIAL ERROR NUMBER VALUE

.IOER. IE$DAL,<DEVICE already linked>
.IOER. IE$DNL,<DEVICE not linked>
.IOER. IE$PRM,<Parameter error>
.IOER. IE$SYN,<Syntax error>
.IOER. IE$AFE,<Attribute format error>
.IOER. IE$TMU,<HRC... Internal tables insufficient for this system>
.IOER. IE$CAB,<Unable to access busrun>
.IOER. IE$TRP,<HRC... internal addressing error>
.IOER. IE$ALG,<Memory box parameter error>
.IOER. IE$TQU,<Timeout on unit quieting operation>
.IOER. IE$EPO,<ONLINE CPU failure>
.IOER. IE$EUO,<ONLINE UNIT failure>
.IOER. IE$ECO,<ONLINE CONTROLLER failure>
.IOER. IE$EPF,<OFFLINE CPU failure>
.IOER. IE$EUF,<OFFLINE UNIT failure>
.IOER. IE$ECF,<OFFLINE CONTROLLER failure>
.IOER. IE$CFU,<Attempt to quiet unit for controller failed>

```

OLRDF\$ (Cont.)

```
.IOER. IE$CSR,<CSR for controller not present in I/O page>
.IOER. IE$SWF,<Unable to switch unit away from current controller>
.IOER. IE$ICE,<HRC... detected I/O database consistency error>
.IOER. IE$SCE,<Executive or Driver status change error>
.IOER. IE$MDE,<HRC... Memory descriptor format error>
.IOER. IE$NFW,<No path to target device is available>
.IOER. IE$CXT,<Unable to take unit with context offline.>
.IOER. IE$IDU,<Invalid device descriptor>
.IOER. IE$UNK,<Device is unknown in this configuration>
.IOER. IE$SZE,<HRC... Unable to access device to size drive>
.IOER. IE$POB,<HRC... Can't take box offline. Partition overmaps box>
.IOER. IE$NLB,<HRC... Can't take box offline. Not last box in memory>
.IOER. IE$OMP,<HRC... Can't modify partition size. Overmap exists>
.IOER. IE$POC,<HRC... Can't modify partition size. Occupied>
.IOER. IE$DFE,<HRC... Request format error.>
.IOER. IE$IDS,<HRC... Invalid device specification.>
.IOER. IE$UOE,<HRC... Unkown error from online/offline call>
.ENDM
```

```
;
; CONDITION CODES FOR CONDITIONS TESTED BY IO.ONE AND IO.IF FUNCTS
;
```

```
CO$ONL = 1      ; IF DEVICE NOW ONLINE
CO$OFL = 2      ; IF DEVICE NOW OFFLINE
CO$UNK = 3      ; UNKNOWN DEVICE
CO$ACC = 4      ; ACCESSABLE (ACCESS PATH EXISTS)
CO$ANY = 5      ; ANY ERROR CONDITION
CO$MAI = 6      ; MAINTENANCE MODE

CO$MAX = 6      ; MAXIMUM CODE
```

```
;
; CONDITION COMMAND CODES FOR IO.ONE AND IO.IF FUNCTIONS
;
```

```
CD$STO = 2      ; 'STOP' COMMAND
CD$GOT = 4      ; 'GOTO'
CD$CON = 6      ; 'CONTINUE'

CD$MAX = 6      ; MAXIMUM CONDITION DEFINED
```

```
;
; ARGUMENT DEFINITION FOR IO.HRC FUNCTION
;
```

```
M$LOG = 1      ; SUPRESS CONFIG TRANSMISSION TO ERRLOG
M$INIT = 2     ; INITIALIZE HRC
M$DEBG = 4     ; SET HRC INTO DEBUG MODE (DEVELOPMENT ONLY)
M$EXIT = 10    ; EXIT REQUEST (FROM ABORT AST REQUEST)
```

```
;
; DEFINE TABLE OFFSETS AND STATUS BITS RETURNED IN RESPONSE TO
; A 'READ CONFIGURATION' QIO
;
```

```
.ASECT
.=0
```

OLRDF\$ (Cont.)

```

000000 C$DTYP: .BLKB 1 ; ENTRY TYPE FIELD

;
; ENTRY TYPE CODES ARE AS FOLLOWS
;
    ET$HDR = 1 ; CONFIGURATION HEADER ENTRY
    ET$END = 2 ; END OF CONFIGURATION DATA

    ET$DEV = 'A' ; MIN VALUE FOR DEVICE SPECIFICATION ENTRY

000001 C$DECT: .BLKB 1 ; COUNT OF TABLE ENTRIES (CPUS+SWITCHED
; BUS RUNS+CONTROLLERS+UNITS)
000002 C$DVER: .BLKB 1 ; VERSION OF RECONFIGURATION TASK PROTOCOL
000003 C$DSTD: .BLKB 1 ; SIZE OF HEADER
000004 C$DMUB: .BLKB 1 ; MAXIMUM UNIBUS RUNS SUPPORTED
000005 C$DMCT: .BLKB 1 ; MAX CONTROLLERS OF A GIVEN TYPE SUPPORTED
    .EVEN
000006 C$DFAC: .BLKW 2 ; FACILITES SUPPORTED IN HOST SYSTEM
000012 C$DIDN: .BLKW 9. ; HRC VERSION AND BUILD TIMESTAMP

000034 C$STD: ; SIZE OF THE TABLE HEADER

;
; OFFSETS WITHIN THE FIXED PORTION OF A GIVEN ENTRY
;
.=0
000000 C$DTYP: ; ENTRY TYPE CODE
000000 C$DNAM: .BLKW 1 ; TWO ASCII CHARACTER UNIT OR CONTR NAME
000002 C$DPUN: .BLKB 1 ; CONTROLLER NUMBER (0-255.)
000003 C$DLUN: .BLKB 1 ; LOGICAL UNIT NUM IF THIS DEVICE IS A UNIT
000004 C$DSCT: .BLKB 1 ; SUB-CONTROLLER NUMBER
000005 C$DEVT: .BLKB 1 ; DEVICE TYPE CODE
000005 C$DSTS: .BLKW 1 ; DEVICE STATUS MASK

;
; FLAG VALUES FOR C$DSTS
;
    CS$ATR=1 ; VARIABLE LENGTH ATTRIBUTE INFO IS APPENDED
    CS$EXF=76 ; FIELD IN C$DSTS CONTAINING COUNT OF
; ADDITIONAL BYTES IN THIS DEVICE ENTRY
    CS$SUB=100 ; THIS IS A SUB-CONTROLLER DEVICE
; CS$XXX=200 ; UNUSED
    CS$OFL=400 ; 1=>DEVICE IS OFFLINE, 0=>DEVICE IS ONLINE
    CS$PDF=1000 ; DEV IS RESTRICTED TO PRIVILEGED DIAG FNS
    CS$POR=2000 ; THIS IS A MULTIPORT DEVICE
    CS$MBD=4000 ; DEVICE IS A MASS BUS DEVICE
    CS$UNK=10000 ; DEVICE IS UNKNOWN
    CS$ACC=20000 ; AN ONLINE ACCESS PATH EXISTS TO THIS DEV
    CS$MTD=40000 ; DEV IS MOUNTED(DISK) OR LOGGED IN (TERM)
    CS$DRV=100000 ; A DRIVER IS LOADED FOR THIS DEVICE

```

OLRDF\$ (Cont.)

```

000010  C$DST2: .BLKW  1      ; STATUS EXTENSION

          CS$PUN=20          ; 1=> THIS DEVICE SPECIFIED WITH PHYSICAL
          ;                  ; UNIT NUMBER
          CS$CRD=40          ; 1=> THIS IS A CONTROLLER RELATIVE DEVICE
          ;                  ; SPEC
          CS$PRC=100         ; 1=> THIS IS A PORT RELATIVE CONTROLLER
          ;                  ; SPEC
          CS$CTL=200         ; DEVICE IS A CONTROLLER (MUST BE SIGN BIT)
          CS$DCL=3400        ; DEVICE CLASS CODE FIELD. MUST BE LOW ORDER
          ;                  ; BITS OF HIGH BYTE.

;
; DEVICE CLASS VALUES
;
          DC$UNI = 0         ; UNIT
          DC$CTL = 1         ; CONTROLLER
          DC$MKU = 2         ; MEMORY BOX UNIT
          DC$MKC = 3         ; MEMORY BOX CONTROLLER
          DC$SBU = 4         ; SWITCHED BUS UNIT
          DC$SBC = 5         ; SWITCHED BUS CONTROLLER
          DC$CPU = 6         ; CPU
          ;DC$XXX = 7        ; UNUSED

000012  C$DDAT: .BLKW  2      ; DEVICE DEPENDANT DATA

000016  C$SME:              ; SIZE IF A MINIMUM ENTRY

;
; VARIABLE PORTION OF A GIVEN ENTRY
;
;
; FOR CONTROLLERS
;
          .=C$SME
000016  C$DKPO: .BLKW  1      ; PORT-STATUS-WORD. THIS DESCRIBES THE BUS
          ;                  ; RUN, CPU OR SWITCHED BUS, TO WHICH THIS
          ;                  ; CONTROLLER IS CONNECTED.
000020  C$SCT:              ; MINIMUM SIZE OF A CONTROLLER ENTRY

;
; FOR UNIT ENTRIES
;
          .=C$SME
000016  C$DCTN: .BLKW  1      ; CONTROLLER NAME. TWO CHARACTER ASCII CODE
          ;                  ; OF THE CONTROLLER TO WHICH THIS UNIT IS
          ;                  ; ATTACHED.
000020  C$DUPO: .BLKW  1      ; PORT-STATUS-WORD. THIS IS THE
          ;                  ; FIRST OF THE PSWS DESCRIBING THE CONTR(S)
          ;                  ; TO WHICH THIS UNIT IS CONNECTED.
000022  C$SUN:              ; MINIMUM SIZE OF A UNIT ENTRY

```


OLRDF\$ (Cont.)

```

;
; FOR CPU-S
;
.=C$$SME
000016 C$DCPO: .BLKW 1 ; PORT-STATUS-WORD. THIS IS THE BUS
; NUMBER FOR THIS CPU.
000020 C$SCP: ; MINIMUM SIZE OF A CPU ENTRY

;
; FOR MEMORY BOXES
;
.=C$$SME
000016 C$DCTN: .BLKW 1 ; CONTROLLER NAME.
000020 .BLKW 4 ; MAXIMUM OF 4 PORTS FOR MEMORY CONTROLLERS
000030 C$SMB: ; MAXIMUM SIZE OF A MEMORY BOX ENTRY

;
; STATUS BIT DEFINITIONS FOR THE PORT STATUS WORD
;
CP$OFL=400 ; 1=> PORT IS OFFLINE
CP$XXX=1000 ; UNUSED
CP$CUR=2000 ; THIS PORT IS THE CURRENT PORT (S.KRB
; REFERENCES THIS PORT
CP$XXX=4000 ; UNUSED
CP$XXX=10000 ; UNUSED
CP$ACC=20000 ; THIS PORT HAS AN ACCESS PATH
CP$MTD=40000 ; PORT HAS CONTEXT OR SERVICES A DEVICE
; HAVING CONTEXT
CP$XXX=100000 ; UNUSED

;
; DEVICE ATTRIBUTES CODES
;
.MACRO ATT NAME,SIZ
$$TMP=$$TMP+1
DEFINS DAS'NAME,$$TMP!<400*SIZ>
.ENDM

$$TMP=0

ATT CSR,2 ; CSR ADDRESS
ATT VEC,2 ; VECTOR ADDRESS
ATT UBR,2 ; UNIBUS RUN
ATT TYP,2 ; DEVICE TYPE, READ ONLY
ATT VOL,12. ; MOUNTED VOLUME NAME, READ ONLY
ATT ERR,10 ; DEVICE ERROR COUNTERS, READ/WRITE
ATT PRI,2 ; DEVICE INTERRUPT PRIORITY
ATT MBP,6 ; MEMORY BOX PARAMETER
ATT STE,2 ; SANITY TIMER ENABLE/DISABLE
ATT SAL,2 ; ALARM ENABLE/DISABLE
ATT DSN,2 ; DEVICE SERIAL NUMBER
ATT CSN,10 ; CPU SERIAL NUMBERS

```

OLRDF\$ (Cont.)

```

;
; MEMORY BOX ATTRIBUTE BUFFER
;
      .ASECT
.=0
000000 C$MBAS: .BLKW  1      ; BASE ADDRESS OF BOX
000002 C$MINT: .BLKB  1      ; INTERLEAVE FACTOR
000003      .BLKB  1      ; FREE BYTE
000004 C$MSIZ: .BLKW  1      ; SIZE OF BOX IN 32 WORD BLOCKS
000006 C$MGRN: .BLKW  1      ; BOX GRANULARITY. "BYTES-PER-UNIT"

000010 C$MDSC:          ; SIZE OF BOX ATTRIBUTE BUFFER

      .PSECT

;
; MACRO FOR THE DEFINITION OF DEVICE TYPE CODES
;
      .MACRO DEVCD$ $$$GBL

      .MCALL DEFINS

      .IF IDN <$$$GBL>,<DEF$G>
...GBL=1
      .IFF
...GBL=0
      .ENDC

      .MACRO DEV X
DEFINS D$'X,$$$TMP
$$$TMP=$$$TMP+1
      .ENDM

$$$TMP = 0

DEV UDET          ; UNDETERMINED DEVICE TYPE
DEV UKNO          ; UNKNOWN DEVICE TYPE

DEV RK03          ; RK03
DEV RK05          ; RK05
DEV RK5F          ; RK05-F (DUAL DENSITY FIXED CARTRIDGE)

DEV RX01          ; RX01
DEV RX02          ; RX02 (DUAL DENSITY RX01)

DEV RL01          ; RL01
DEV RL02          ; RL02

DEV RP02          ; RP02
DEV RP03          ; RP03
DEV RP04          ; RP04
DEV RP05          ; RP05
DEV RP06          ; RP06
DEV RP07          ; RP07

```

OLRDF\$ (Cont.)

```
DEV RK06      ; RK06
DEV RK07      ; RK07

DEV RM02      ; RM02
DEV RM03      ; RM03
DEV RM05      ; RM05
DEV RM80      ; RM80

DEV RS03      ; RS03
DEV RS04      ; RS04 (DUAL DENSITY RS03)

DEV RF11      ; RF11/RS08

DEV TU10      ; TU10
DEV TU16      ; TU16
DEV TU45      ; TU45
DEV TU77      ; TU77
DEV TU78      ; TU78
DEV TS11      ; TS11

DEV TM02      ; TM02
DEV TM03      ; TM03
DEV TM78      ; TM78

DEV TU56      ; TU56
DEV TU58      ; TU58
DEV TU60      ; TU60

DEV MSCP      ; UDA50
DEV RA60      ; RA60
DEV RA80      ; RA80
DEV RA81      ; RA81

DEV ML11      ; ML11

DEV TERM      ; TERMINAL

$$$TMP=370
DEV USR0      ; USER TYPE 0
DEV USR1      ; USER TYPE 1
DEV USR2      ; USER TYPE 2
DEV USR3      ; USER TYPE 3
DEV USR4      ; USER TYPE 4
DEV USR5      ; USER TYPE 5
DEV USR6      ; USER TYPE 6
DEV USR7      ; USER TYPE 7
```

PCBDF\$

```

PCBDF$  ,,SYSDEF

;
; MAIN PARTITION PCB
;
      .ASECT
      .=0
000000 P.LNK:  .BLKW  1      ;LINK TO NEXT MAIN PARTITION PCB
000002      .BLKW  1      ;(UNUSED)
000004 P.NAM:  .BLKW  2      ;PARTITION NAME IN RAD50
000010 P.SUB:  .BLKW  1      ;POINTER TO FIRST SUBPARTITION
000012 P.MAIN: .BLKW  1      ;POINTER TO SELF
000014 P.REL:  .BLKW  1      ;STARTING PHYSICAL ADDRESS IN 32W BLOCKS
000016 P.BLKS:
000016 P.SIZE: .BLKW  1      ;SIZE OF PARTITION IN 32W BLOCKS
000020 P.WAIT: .BLKW  2      ;PARTITION WAIT QUEUE LISTHEAD
000024      .BLKW  2      ;(UNUSED)
000030 P.STAT: .BLKW  1      ;PARTITION STATUS FLAGS
000032 P.ST2:  .BLKW  1      ;STATUS EXTENSION FOR COMMON AND MAIN PCB'S
000034      .BLKW  3      ;(UNUSED)
000042 P.HDLN: .BLKB  1      ;SIZE OF EXTERNAL HEADER IN 32W BLOCKS
000043 P.IOC:  .BLKB  1      ;PARTITION I/O COUNT

$$$=.
P.RRM:  .BLKW  1      ;REQUIRED RUN MASK

      .IF NDF M$$PRO
      .=$$$
      .ENDC

      .IF NB  SYSDEF

000044 P.LGTH=.      ;PARTITION CONTROL BLOCK LENGTH

      .ENDC

;
; TASK REGION PCB
;
      .=0
000000 P.LNK:  .BLKW  1      ;UTILITY LINK WORD
000002 P.PRI:  .BLKB  1      ;PRIORITY OF PARTITION
000003 P.RMCT: .BLKB  1      ;RESIDENT MAPPED TASKS COUNT
000004 P.NAM:  .BLKW  2      ;PARTITION NAME IN RAD50
000010 P.SUB:  .BLKW  1      ;POINTER TO NEXT SUBPARTITION
000012 P.MAIN: .BLKW  1      ;POINTER TO MAIN PARTITION
000014 P.REL:  .BLKW  1      ;STARTING PHYSICAL ADDRESS IN 32W BLOCKS
000016 P.BLKS:
000016 P.SIZE: .BLKW  1      ;SIZE OF PARTITION IN 32W BLOCKS
000020      .BLKW  1      ;(UNUSED)
000022 P.SWSZ: .BLKW  1      ;PARTITION SWAP SIZE
000024 P.DPCB: .BLKW  1      ;CHECKPOINT ALLOCATION PCB
000026 P.TCB:  .BLKW  1      ;TCB ADDRESS OF OWNER TASK
000030 P.STAT: .BLKW  1      ;PARTITION STATUS FLAGS
000032 P.HDR:  .BLKW  1      ;POINTER TO HEADER CONTROL BLOCK

```

PCBDF\$ (Cont.)

```

000034      .BLKW  1      ;(UNUSED)
000036 P.ATT:  .BLKW  2      ;ATTACHMENT DESCRIPTOR LISTHEAD
000042 P.HDLN:  .BLKB  1      ;SIZE OF EXTERNAL HEADER IN 32W BLOCKS
000043 P.IOC:   .BLKB  1      ;PARTITION I/O COUNT

$$$=.
P.RRM:   .BLKW  1      ;REQUIRED RUN MASK

      .IF NDF M$$PRO
.=$$$
      .ENDC

;
; COMMON REGION PCB
;
.=0
000000 P.LNK:   .BLKW  1      ;UTILITY LINK WORD
000002 P.PRI:   .BLKB  1      ;PRIORITY OF PARTITION
000003 P.RMCT:  .BLKB  1      ;RESIDENT MAPPED TASKS COUNT
000004 P.NAM:   .BLKW  2      ;PARTITION NAME IN RAD50
000010 P.SUB:   .BLKW  1      ;POINTER TO NEXT SUBPARTITION
000012 P.MAIN:  .BLKW  1      ;POINTER TO MAIN PARTITION
000014 P.REL:   .BLKW  1      ;STARTING PHYSICAL ADDRESS IN 32W BLOCKS
000016 P.BLKS:
000016 P.SIZE: .BLKW  1      ;SIZE OF PARTITION IN 32W BLOCKS
000020 P.CBDL:  .BLKW  1      ;COMMON BLOCK DIRECTORY LINK
000022 P.SWSZ:  .BLKW  1      ;PARTITION SWAP SIZE
000024 P.DPCB:  .BLKW  1      ;POINTER TO DISK PCB
000026 P.OWN:   .BLKW  1      ;OWNING UIC OF REGION
000030 P.STAT:  .BLKW  1      ;PARTITION STATUS FLAGS
000032 P.ST2:   .BLKW  1      ;STATUS EXTENSION FOR COMMON AND MAIN PCB'S
000034 P.PRO:   .BLKW  1      ;PROTECTION WORD [DEWR,DEWR,DEWR,DEWR]
000036 P.ATT:   .BLKW  2      ;ATTACHMENT DESCRIPTOR LISTHEAD
000042 P.HDLN:  .BLKB  1      ;SIZE OF EXTERNAL HEADER IN 32W BLOCKS
000043 P.IOC:   .BLKB  1      ;PARTITION I/O COUNT

$$$=.
P.RRM:   .BLKW  1      ;REQUIRED RUN MASK

      .IF NDF M$$PRO
.=$$$
      .ENDC

      .PSECT

;
; PARTITION STATUS WORD BIT DEFINITIONS
;
PS.OUT=100000      ;PARTITION IS OUT OF MEMORY(1=YES)
PS.CKP=40000      ;PARTITION CHECKPOINT IN PROGRESS (1=YES)
PS.CKR=20000      ;PARTITION CHECKPOINT IS REQUESTED (1=YES)
PS.CHK=10000      ;PARTITION IS NOT CHECKPOINTABLE (1=YES)
PS.FXD=4000      ;PARTITION IS FIXED (1=YES)
PS.CAF=2000      ;CHECKPOINT SPACE ALLOCATION FAILURE (1=YES)
PS.LIO=1000      ;MARKED BY SHUFFLER FOR LONG I/O (1=YES)
PS.NSF=400      ;PARTITION IS NOT SHUFFLEABLE (1=YES)

```

PCBDF\$ (Cont.)

PS.COM=200 ;LIBRARY OR COMMON BLOCK (1=YES)
 PS.LFR=100 ;LAST LOAD OF REGION FAILED (1=YES)
 PS.PER=40 ;PARTIY ERROR OCCURED IN THIS REGION (1=YES)
 PS.DEL=10 ;PARTITION SHOULD BE DELETED WHEN NOT
 ;ATTACHED (1=YES)
 PS.AST=4 ;PARTITION HAS REGION LOAD AST PENDING

;
 ; REQUIRED RUN MASK

;
 PR.UBT=100000 ;UNIBUS RUN T
 PR.UBS=40000 ;UNIBUS RUN S
 PR.UBR=20000 ;UNIBUS RUN R
 PR.UBP=10000 ;UNIBUS RUN P
 PR.UBN=4000 ;UNIBUS RUN N
 PR.UBM=2000 ;UNIBUS RUN M
 PR.UBL=1000 ;UNIBUS RUN L
 PR.UBK=400 ;UNIBUS RUN K
 PR.UBJ=200 ;UNIBUS RUN J
 PR.UBH=100 ;UNIBUS RUN H
 PR.UBF=40 ;UNIBUS RUN F
 PR.UBE=20 ;UNIBUS RUN E
 PR.CPD=10 ;PROCESSOR D
 PR.CPC=4 ;PROCESSOR C
 PR.CPB=2 ;PROCESSOR B
 PR.CPA=1 ;PROCESSOR A

;
 ; STATUS EXTENSION WORD BIT DEFINITIONS
 ; (THESE BITS CAN ONLY BE EXAMINED IN COMMON OR MAIN PCB'S)

;
 P2.LMA=40000 ;DON'T SHUFFLE,DELETE SPINDLE OR MUTILATE
 ;THIS PARTITION
 P2.CPC=20000 ;CPCR INITIATED CHECKPOINT PENDING
 P2.SEC=4000 ;THIS IS RO SECTION OF MU TASK
 ;WITH TCB IN SEC. POOL
 P2.PAR=2000 ;THE FIXER TASK HAS HANDLED A PARITY ERROR
 P2.POL=1000 ;SECONDARY POOL PARTITION
 P2.CPU=400 ;MULTIPROCESSOR CPU PARTITION
 P2.PIC=200 ;POSITION INDEPENDENT LIBRARY OR COMMON
 ;(1=YES)
 P2.RON=100 ;READ-ONLY COMMON (1=YES)
 P2.DRV=40 ;DRIVER COMMON PARTITION (1=YES)
 P2.APR=7 ;STARTING APR NUMBER MASK FOR NON-PIC COMMON

;
 ; CHECKPOINT FILE PCB

;
 .ASECT
 .=0
 000000 P.LNK: .BLKW 1 ;LINK WORD OF CHECKPOINT FILE PCB'S
 000002 P.UCB: .BLKW 1 ;UCB ADDRESS OF CHECKPOINT FILE DEVICE
 000004 P.LBN: .BLKW 1 ;HIGH PART OF STARTING LBN
 000006 .BLKW 1 ;LOW PART OF STARTING LBN
 000010 P.SUB: .BLKW 1 ;POINTER TO FIRST CHECKPOINT ALLOCATION PCB

PCBDF\$ (Cont.)

```

000012 P.MAIN: .BLKW 1 ;MUST BE 0 (FOR $RLPR1)
000014 P.REL: .BLKW 1 ;CONTAINS 0 IF FILE IN USE, 1 IF NOT IN USE
000016 P.SIZE: .BLKW 1 ;SIZE OF CHECKPOINT FILE IN 256W BLOCKS
000020 P.DLGH=. ;LENGTH OF ALL DISK PCB'S

```

```

;
; CHECKPOINT ALLOCATION PCB
;

```

```

.=0

```

```

000000 .BLKW 4 ;(UNUSED)
000010 P.SUB: .BLKW 1 ;LINK TO NEXT CHECKPOINT ALLOCATION PCB
000012 P.MAIN: .BLKW 1 ;ADDRESS OF CHECKPOINT FILE PCB
000014 P.REL: .BLKW 1 ;RELATIVE POSITION IN FILE IN 256W BLOCKS
000016 P.SIZE: .BLKW 1 ;SIZE ALLOCATED IN 256W BLOCKS

```

```

;
; COMMON TASK IMAGE FILE PCB
;

```

```

.=0

```

```

000000 P.FID1: .BLKW 1 ;FILE ID WORD FOR SAVE
000002 P.UCB: .BLKW 1 ;UCB ADDR OF DEVICE ON WHICH COMMON RESIDES
000004 P.LBN: .BLKW 1 ;HIGH PART OF STARTING LBN
000006 .BLKW 1 ;LOW PART OF STARTING LBN
000010 P.FID2: .BLKW 1 ;FILE ID WORD FOR SAVE
000012 P.MAIN: .BLKW 1 ;POINTER TO SELF
000014 P.REL: .BLKW 1 ;ALWAYS CONTAINS A 0
000016 P.FID3: .BLKW 1 ;FILE ID WORD FOR SAVE

```

```

;
; ATTACHMENT DESCRIPTOR OFFSETS
;

```

```

.ASECT

```

```

.=0

```

```

000000 A.PCBL: .BLKW 1 ;PCB ATTACHMENT QUEUE THREAD WORD
000002 A.PRI: .BLKB 1 ;PRIORITY OF ATTACHED TASK
000003 A.IOC: .BLKB 1 ;I/O COUNT THROUGH THIS DESCRIPTOR
000004 A.TCB: .BLKW 1 ;TCB ADDRESS OF ATTACHED TASK
000006 A.TCBL: .BLKW 1 ;TCB ATTACHMENT QUEUE THREAD WORD
000010 A.STAT: .BLKB 1 ;STATUS BYTE
000011 A.MPCT: .BLKB 1 ;MAPPING COUNT OF TASK THRU THIS DESCRIPTOR
000012 A.PCB: .BLKW 1 ;PCB ADDRESS OF ATTACHED TASK
000014 A.LGTH=. ;LENGTH OF ATTACHMENT DESCRIPTOR

```

```

;
; ATTACHMENT DESCRIPTOR STATUS BYTE BIT DEFINITIONS
;

```

```

.PSECT

```

```

AS.PRO=100 ;A.TCB IS SEC POOL TCB BIAS (1=YES)
AS.SBP=20 ;CACHE BYPASS REQUESTED
AS.RBP=40 ;REQUEST TO NOT BYPASS CACHE
AS.DEL=10 ;TASK HAS DELETE ACCESS (1=YES)
AS.EXT=4 ;TASK HAS EXTEND ACCESS (1=YES)
AS.WRT=2 ;TASK HAS WRITE ACCESS (1=YES)
AS.RED=1 ;TASK HAS READ ACCESS (1=YES)

```

PKTDF\$

```

PKTDF$
;
; ASYNCHRONOUS SYSTEM TRAP CONTROL BLOCK OFFSET DEFINITIONS
;
; SOME POSITIONAL DEPENDENCIES BETWEEN THE OCB AND THE AST CONTROL
; BLOCK ARE RELIED UPON IN THE ROUTINE $FINXT IN THE MODULE SYSXT.
;
      .ASECT
      .=177774
177774 A.KSR5: .BLKW 1 ;SUBROUTINE KISAR5 BIAS (A.CBL=0)
177776 A.DQSR: .BLKW 1 ;DEQUEUE SUBROUTINE ADDRESS (A.CBL=0)
000000 .BLKW 1 ;AST QUEUE THREAD WORD
000002 A.CBL: .BLKW 1 ;LENGTH OF CONTROL BLOCK IN BYTES
;IF A.CBL = 0, THE AST CONTROL BLOCK IS
;TO BE DEALLOCATED BY THE DEQUEUE SUBROUTINE
;POINTED TO BY A.DQSR MAPPED VIA APR 5
;VALUE A.KSR5. THIS IS CURRENTLY USED ONLY
;BY THE FULL DUPLEX TERMINAL DRIVER FOR
;UNSOLICITED CHARACTER ASTS.
;IF THE LOW BYTE OF A.CBL = 0, AND THE
;HIGH BYTE IS NOT = 0, THE AST CONTROL BLOCK
;IS A SPECIFIED AST, WITH LENGTH, C.LGTH.
;IF THE HIGH BYTE OF A.CBL=0
;AND THE LOW BYTE > 0, THEN
;THE LOW BYTE IS THE LENGTH OF THE
;AST CONTROL BLOCK.
;IF HIGH BYTE = 0 AND LOW BYTE IS NEGATIVE,
;THEN THE BLOCK IS A KERNEL AST
;BIT 6 IS SET IF $SGFIN SHOULD
;NOT BE CALLED PRIOR TO DISPATCHING
;THE AST, AND THE LOW SIX BITS (5-0)
;REPRESENT THE INDEX/2 INTO THE
;KERNEL AST DISPATCH TABLE ($KATBL)
000004 A.BYT: .BLKW 1 ;NUMBER OF BYTES TO ALLOCATE ON TASK STACK
000006 A.AST: .BLKW 1 ;AST TRAP ADDRESS
000010 A.NPR: .BLKW 1 ;NUMBER OF AST PARAMETERS
000012 A.PRM: .BLKW 1 ;FIRST AST PARAMETER

AS.FPA=1 ;CODE FOR FLOATING POINT AST
AS.RCA=2 ;CODE FOR RECEIVE DATA AST
AS.RRA=3 ;CODE FOR RECEIVE BY REFERENCE AST
AS.PEA=4 ;CODE FOR PARITY ERROR AST
AS.REA=5 ;CODE FOR REQUESTED EXIT AST
AS.PFA=6 ;CODE FOR POWER FAIL AST
AS.CAA=7 ;CODE FOR CLI COMMAND ARRIVAL AST

;
; ABORTER SUBCODES FOR ABORT AST (AS.REA) TO BE RETURNED ON USER'S
; STACK
;
AB.NPV=1 ;ABORTER IS NONPRIVILEGED (1=YES)
AB.TYP=2 ;ABORT FROM DIRECTIVE (0=YES)
;ABORT FROM CLI COMMAND (1=YES)
A.PLGH=70 ;SIZE OF PARITY ERROR AST CONTROL BLOCK
A.DUCB=10 ;UCB OF TERM ISSUING DEBUG COMMAND
A.DLGH=10. ;LENGTH OF DEBUG (AK.TBT) AST BLOCK

```


PKTDF\$ (Cont.)

```

;
; KERNEL AST CONTROL CODES (A.CBL)
;
AK.BUF=200                ;BUFFERED I/O COMPLETION
                          ;THIS CODE MUST BE 200 UNTIL ALL
                          ;REFERENCES IN TTDRV ARE FIXED
AK.OCB=201                ;OFFSPRING TASK EXIT
AK.GBI=202                ;SEGMENTED BUFFERED I/O COMPLETION
AK.TBT=203                ;TASK FORCE T-BIT TRAP (DEBUG CMD)
AK.DIO=204                ;DELAYED I/O COMPLETION
AK.GGF=205                ;GRP. GBL. RUNDWN

;
; BIT DEFINITIONS FOR THE GET/SET INFORMATION DIRECTIVE.
;
SF.PRV=100000            ;FUNCTION IS PRIVILEGED
SF.IN= 40000             ;FUNCTION IS AN INPUT FUNCTION

;
; GROUP GLOBAL EVENT FLAG BLOCK OFFSETS
;
.=0
000000 G.LNK:  .BLKW  1      ;LINK WORD
000002 G.GRP:  .BLKB  1      ;GROUP NUMBER
000003 G.STAT: .BLKB  1      ;STATUS BYTE
000004 G.CNT:  .BLKW  1      ;ACCESS COUNT
000006 G.EFLG: .BLKW  2      ;EVENT FLAGS

000012 G.LGTH=.           ;LENGTH OF GROUP GLOBAL EVENT FLAG BLOCK

GS.DEL=1                 ;STATUS BIT -- MARKED FOR DELETE

;
; EXECUTIVE POOL MONITOR CONTROL FLAGS
;
;
; $POLST IS THE SYNCHRONIZATION WORD BETWEEN THE EXEC AND POOL
; MONITOR
;
PC.HIH=1                  ;HIGH POOL LIMIT CROSSED (1=YES)
PC.LOW=2                  ;LOW POOL LIMIT CROSSED (1=YES)
PC.ALF=4                  ;POOL ALLOCATION FAILURE (1=YES)
PC.XIT=200                ;FORCE POOL MONITOR TASK TO EXIT (MUST
                          ;BE COUPLED WITH SETTING FE.MXT IN THE
                          ;FEATURE MASK)
PC.NRM=PC.HIH*400         ;POOL TASK INHIBIT BIT FOR HIGH POOL
PC.ALM=PC.LOW*400         ;POOL TASK INHIBIT BIT FOR LOW POOL

;
; $POLFL IS THE POOL USAGE CONTROL WORD
;
PF.INS=40                 ;REJECT NONPRIVILEGED INS/RUN/REM
PF.LOG=100                ;NONPRIVILEGED LOGINS ARE DISABLED

```

PKTDF\$ (Cont.)

```
PF.REQ=200 ;STALL REQUEST OF NONPRIV. TASKS
PF.ALL=177777 ;TAKE ALL POSSIBLE ACTIONS TO SAVE POOL
```

```
;
; OFFSPRING CONTROL BLOCK DEFINITIONS
;
; SOME POSITIONAL DEPENDENCIES ARE DEPENDED ON BETWEEN THE OCB AND
; THE AST BLOCK IN THE ROUTINE $FINXT IN THE MODULE SYSXT.
```

```
;
.=0
```

```
000000 O.LNK: .BLKW 1 ;OCB LINK WORD
000002 O.MCRL: .BLKW 1 ;ADDRESS OF MCR COMMAND LINE
000004 O.PTCB: .BLKW 1 ;PARENT TCB ADDRESS
000006 O.AST: .BLKW 1 ;EXIT AST ADDRESS
000010 O.EFN: .BLKW 1 ;EXIT EVENT FLAG
000012 O.ESB: .BLKW 1 ;EXIT STATUS BLOCK VIRTUAL ADDRESS
000014 O.STAT: .BLKW 8. ;EXIT STATUS BUFFER

000034 O.LGTH=. ;LENGTH OF OCB
```

```
;
; I/O PACKET OFFSET DEFINITIONS
;
```

```
.ASECT
```

```
.=0
```

```
000000 I.LNK: .BLKW 1 ;I/O QUEUE THREAD WORD
000002 I.PRI: .BLKB 1 ;REQUEST PRIORITY
000003 I.EFN: .BLKB 1 ;EVENT FLAG NUMBER
000004 I.TCB: .BLKW 1 ;TCB ADDRESS OF REQUESTOR
000006 I.LN2: .BLKW 1 ;POINTER TO SECOND LUN WORD
000010 I.UCB: .BLKW 1 ;POINTER TO UNIT CONTROL BLOCK
000012 I.FCN: .BLKW 1 ;I/O FUNCTION CODE
000014 I.IOSB: .BLKW 1 ;VIRTUAL ADDRESS OF I/O STATUS BLOCK
000016 .BLKW 1 ;I/O STATUS BLOCK RELOCATON BIAS
000020 .BLKW 1 ;I/O STATUS BLOCK ADDRESS
000022 I.AST: .BLKW 1 ;AST SERVICE ROUTINE ADDRESS
000024 I.PRM: .BLKW 1 ;RESERVED FOR MAPPING PARAMETER #1
000026 .BLKW 6 ;PARAMETERS 1 TO 6
000042 .BLKW 1 ;USER MODE DIAGNOSTIC PARAMETER WORD

000044 I.ATTL=. ;MINIMUM LENGTH OF I/O PACKET (USED BY
;FILE SYSTEM TO CALCULATE MAXIMUM
;NUMBER OF ATTRIBUTES)
000044 I.AADA: .BLKW 2 ;STORAGE FOR ATT DESCR PTRS WITH I/O

000050 I.LGTH=. ;LENGTH OF I/O REQUEST CONTROL BLOCK
I.ATRL=6*8. ;LENGTH OF FILE SYSTEM ATTRIBUTE BLOCK
```

```
;
; CLI PARSER BLOCK (CPB) DEFINITIONS
;
.=0
```

PKTDF\$ (Cont.)

```

000000 C.PTCB: .BLKW 1 ;ADDRESS OF CLI'S TCB
000002 C.PNAM: .BLKW 2 ;CLI NAME
000006 C.PSTS: .BLKW 1 ;STATUS MASK
000010 C.PDPL: .BLKB 1 ;LENGTH OF DEFAULT PROMPT
000011 C.PCPL: .BLKB 1 ;LENGTH O CNTRL/C PROMPT
000012 C.PRMT: ;START OF PROMPT STRINGS. DEFAULT
;IS CONCATENATED WITH CONTROL C PROMPT

;
; STATUS BIT DEFINITIONS
;
CP.NUL=1 ;PASS EMPTY COMMANDS TO CLI
CP.MSG=2 ;CLI DESIRES SYSTEM MESSAGES
CP.LGO=4 ;CLI WANTS COMMANDS FROM LOGGED OFF TTYS
CP.DSB=10 ;CLI IS DISABLED
CP.PRIV=20 ;USER MUST BE PRIV TO SET TTY TO THIS CLI
CP.SGL=40 ;DON'T HANDLE CONTINUATIONS (M-PLUS ONLY)
CP.NIO=100 ;MCR..., HEL, BYE DO NO I/O TO TTY
;HEL, BYE DO NOT SET CLI ETC.
CP.RST=200 ;ABILITY TO SET TO THIS CLI IS RESTRICTED
;TO THE CLI ITSELF
CP.EXT=400 ;PASS TASK EXIT PROMPT REQUESTS TO CLI
CP.POL=1000 ;CLI TCB IS IN SECONDARY POOL

;
; SECONDARY POOL COMMAND BUFFER BLOCKS
;
.=0
000000 C.CLK: .BLKW 1 ;LINK WORD
000002 C.CTCB: .BLKW 1 ;TCB ADDRESS OF TASK TO RECEIVE COMMAND
000004 C.CUCB: .BLKW 1 ;UCB ADDRESS OF RESPONSIBLE TERMINAL
000006 C.CCT: .BLKW 1 ;CHARACTER COUNT, EXCLUDING TRAILING CR
000010 C.CSTS: .BLKW 1 ;STATUS MASK
000012 C.CMCD: ;SYSTEM MESSAGE CODE
000012 C.CSO: .BLKW 1 ;STARTING OFFSET OF VALID COMMAND TEXT
000014 C.CTR: .BLKB 1 ;TERMINATOR CHARACTER
000015 C.CBLK: .BLKB 1 ;SIZE OF PACKET IN SEC POOL (32 WD.) BLOCKS
000016 C.CTXT: ;COMMAND TEXT, FOLLOWED BY CR

;
; STATUS BITS FOR COMMAND BLOCKS
;
CC.MCR=1 ;FORCE COMMAND TO MCR
CC.PRM=2 ;ISSUE DEFAULT PROMPT
CC.EXT=4 ;TASK EXIT PROMPT REQUEST
CC.KIL=10 ;DELETE ALL CONTINUATION PIECES FROM THIS TT
CC.CLI=20 ;COMMAND TO BE RETREIVED BY GCCIS ONLY
CC.MSG=40 ;PACKET CONTAINS SYSTEM MESSAGE TO CLI
CC.TTD=100 ;COMMAND CAME FROM TTDRV

;
; IDENTIFIER CODES FOR SYSTEM TO CLI MESSAGES
;
; CODES 0-127. ARE RESERVED FOR USE BY DIGITAL
; CODES 128.-255. ARE RESERVED FOR USE BY CUSTOMERS
;

```

PKTDF\$ (Cont.)

```

CM.INE=1          ;CLI INITIALIZED ENABLED
CM.IND=2          ;CLI INITIALIZED DISABLED
CM.CEN=3          ;CLI ENABLED
CM.CDS=4          ;CLI DISABLED
CM.ELM=5          ;CLI BEING ELIMINATED
CM.EXT=6          ;CLI MUST EXIT IMMEDIATELY
CM.LKT=7          ;NEW TERMINAL LINKED TO CLI
CM.RMT=8          ;TERMINAL REMOVED FROM CLI
CM.MSG=9          ;GENERAL MESSAGE TO CLI

```

```

;
; ANCILLARY CONTROL BLOCK (ACB) DEFINITIONS
;

```

```

.=0
000000 A.REL:  .BLKW  1          ;ACD RELOCATION BIAS
000002 A.DIS:  .BLKW  1          ;ACD DISPATCH TABLE POINTER
000004 A.MAS:  .BLKW  1          ;ACD FUNCTION MASK
000006 A.NUM:  .BLKB  1          ;ACD IDENTIFICATION NUMBER
000007          .BLKB  1          ;RESERVED
000010 A.LIN:  .BLKW  1          ;ACD LINK WORD
000012 A.ACC:  .BLKB  1          ;ACD ACCESS COUNT
000013 A.STA:  .BLKB  1          ;ACD STATUS BYTE

000014 A.LEN1=.          ;LENGTH OF PROTOTYPE ACB

.=A.LIN
000010 A.IMAP: .BLKW  1          ;FULL ACB OVERLAPS PROTOTYPE ACB
000012 A.IBUF: .BLKW  1          ;ACD INTERRUPT BUFFER RELOCATION BIAS
000014 A.ILEN: .BLKW  1          ;ACD INTERRUPT BUFFER ADDRESS
000016 A.SMAP: .BLKW  1          ;ACD SYSTEM STATE BUFFER RELOCATION BIAS
000020 A.SBUF: .BLKW  1          ;ACD SYSTEM STATE BUFFER ADDRESS
000022 A.SLEN: .BLKW  1          ;ACD SYSTEM STATE BUFFER LENGTH
000024 A.IOS:  .BLKW  2          ;ACD I/O STATUS
000030 A.RES:  .BLKW  1          ;RESERVED FOR USE BY THE ACD

000032 A.LEN2=.          ;LENGTH OF FULL ACB

```

```

;
; DEFINE THE FLAG VALUES IN THE OFFSET U.AFLG
;

```

```

UA.ACC=1          ;ACCEPT THIS CHARACTER
UA.PRO=2          ;PROCESS THIS CHARACTER
UA.ECH=4          ;ECHO THIS CHARACTER
UA.TYP=10         ;FORCE THIS CHARACTER INTO TYPEAHEAD
UA.SPE=20         ;THIS CHARACTER HAS A SPECIAL ECHO
UA.PUT=40         ;PUT THIS CHARACTER IN THE INPUT BUFFER
UA.CAL=100        ;CALL THE ACD BACK AFTER THE TRANSFER
UA.COM=200        ;COMPLETE THE INPUT REQUEST
UA.ALL=400        ;ALLOW PROCESSING OF THIS I/O REQUEST
UA.TRA=1000       ;TRANSFER CHARS. WHEN I/O COMPLETES

```

```

;
; DEFINE THE ACD ENTRY POINTS (OFFSETS INTO THE DISPATCH TABLE)
;
.=0

```

PKTDF\$ (Cont.)

```

000000 A.ACCE: .BLKW 1 ;I/O REQUEST ACCEPTANCE ENTRY POINT
000002 A.DEQU: .BLKW 1 ;I/O REQUEST DEQUEUE ENTRY POINT
000004 A.POWE: .BLKW 1 ;POWER FAILURE ENTRY POINT
000006 A.INPU: .BLKW 1 ;INPUT COMPLETION ENTRY POINT
000010 A.OUTP: .BLKW 1 ;OUTPUT COMPLETION ENTRY POINT
000012 A.CONN: .BLKW 1 ;CONNECTION ENTRY POINT
000014 A.DISC: .BLKW 1 ;DISCONNECTION ENTRY POINT
000016 A.RECE: .BLKW 1 ;INPUT CHARACTER RECEPTION ENTRY POINT
000020 A.PROC: .BLKW 1 ;INPUT CHARACTER PROCESSING ENTRY POINT
000022 A.CALL: .BLKW 1 ;CALL ACD BACK AFTER TRANSFER ENTRY POINT

```

```

;
; DEFINE THE STATUS BITS IN A.STA OF THE PROTOTYPE ACB
;
AS.DEL=1 ;ACD IS MARKED FOR DELETE
AS.DIS=2 ;ACD IS DISABLED

```

```

.PSECT

```

SCBDF\$

```

SCBDF$  ,,SYSDEF

;
; STATUS CONTROL BLOCK
;
; THE STATUS CONTROL BLOCK (SCB) DEFINES THE STATUS OF A DEVICE
; CONTROLLER.  THERE IS ONE SCB FOR EACH CONTROLLER IN A SYSTEM.
; THE SCB IS POINTED TO BY UNIT CONTROL BLOCKS.  TO EXPAND ON THE
; TELETYPE EXAMPLE ABOVE, EACH TELETYPE INTERFACED VIA A DL11-A
; WOULD HAVE A SCB SINCE EACH DL11-A IS AN INDEPENDENT INTERFACE
; UNIT.  THE TELETYPES INTERFACED VIA THE DH11 WOULD ALSO EACH HAVE
; AN SCB SINCE THE DH11 IS A SINGLE CONTROLLER BUT MULTIPLEXES MANY
; UNITS IN PARALLEL.
;
      .IF NB  SYSDEF

      .ASECT

      .=0
000000 S.LHD:  .BLKW  2      ;CONTROLLER I/O QUEUE LISTHEAD
000004 S.URM:  ;REFERENCE LABEL

      .IF DF  M$$PRO

      .BLKW  1      ;UNIBUS RUN MASK FOR THE FORK BLOCK

      .ENDC

000004 S.FRK:  .BLKW  1      ;FORK BLOCK LINK WORD
000006      .BLKW  1      ;FORK-PC
000010      .BLKW  1      ;FORK-R5
000012      .BLKW  1      ;FORK-R4
000014 S.KS5:  .BLKW  1      ;FORK KISAR5
000016 S.PKT:  .BLKW  1      ;ADDRESS OF CURRENT I/O PACKET
000020 S.CTM:  .BLKB  1      ;CURRENT TIMEOUT COUNT
000021 S.ITM:  .BLKB  1      ;INITIAL TIMEOUT COUNT
000022 S.STS:  .BLKB  1      ;STATUS (0=FREE, NE 0=BUSY)
000023 S.ST3:  .BLKB  1      ;STATUS EXTENSION BYTE
000024 S.ST2:  .BLKW  1      ;STATUS EXTENSION
000026 S.KRB:  .BLKW  1      ;ADDRESS OF KRB
000030 S.RCNT: .BLKB  1      ;NUMBER OF REGISTERS TO COPY
000031 S.ROFF: .BLKB  1      ;OFFSET TO FIRST DEV REG TO COPY
000032 S.EMB:  .BLKW  1      ;ERROR MESSAGE BLOCK POINTER
000034 S.KTB:  .BLKW  1      ;START OF MULTI-ACCESS KRBS

      .PSECT

      .IFF

;
; STATUS CONTROL BLOCK STATUS EXTENSION BIT DEFINITIONS
;
S2.EIP=1      ;ERROR IN PROGRESS (1=YES)
S2.ENB=2      ;ERROR LOGGING ENABLED (0=YES)
S2.LOG=4      ;ERROR LOGGING SUPPORTED (1=YES)
S2.MAD=10     ;MULTIACCESS DEVICE (1=YES)
S2.LDS=40     ;LOAD SHARING ENABLED (1=YES)
S2.OPT=100    ;SUPPORTS SEEK OPTIMIZATION (1=YES)

```

SCBDF\$ (Cont.)

```

S2.CON=200          ;SCB AND KRB ARE CONTIGUOUS (1=YES)
S2.OP1=400          ;THESE TWO BITS DEFINE THE OPTIMIZATION
S2.OP2=1000         ;METHOD.
                    ;OP2,OP1=0,0 INDICATES NEAREST CYLINDER
                    ;OP2,OP1=0,1 INDICATES ELEVATOR
                    ;OP2,OP1=1,0 INDICATES C-SCAN
                    ;OP2,OP1=1,1 RESERVED
S2.ACT=2000         ;DRIVER HAS OPERATION OUTSTANDING (1=YES)
S2.XHR=4000         ;EXTERNAL HEADER AND NEW I.LN2 SUPPORT

;
; STATUS CONTROL BLOCK STATUS EXTENSION (S.ST3) DEFINITIONS
;
S3.DRL=1            ;MULTI-ACCESS DRIVE IN RELEASED STATE(1=YES)
S3.NRL=2            ;DRIVER SHOULDN'T RLS MULTI-ACCESS DRIVE
                    ;(1=YES)
S3.SIP=4            ;SEEK IN PROGRESS (1=YES)
S3.ATN=10           ;DRIVER MUST CLEAR ATTENTION BIT (1=YES)
S3.SLV=20           ;DEVICE USES SLAVE UNITS (1=YES)
S3.SPA=40           ;PORT 'A' SPINNING UP
S3.SPB=100          ;PORT 'B' SPINNING UP
S3.OPT=200          ;SEEK OPTIMIZATION ENABLED (1=YES)
S3.SPU=S3.SPA!S3.SPB ;.OR. OF PORT SPINUP BITS

;
; KRB ADDRESS TABLE (S.KTB) PORT OFFLINE FROM THIS SCB FLAG.
;
KP.OFL=1            ;KRB ADDRESS POINTS TO OFFLINE PORT (1=YES)

;
; MAPPING ASSIGNMENT BLOCK (FOR UNIBUS MAPPING REGISTER ASSIGNMENT)
;
      .ASECT
      .=0
000000 M.LNK: .BLKW 1 ;LINK WORD
000002 M.UMRA: .BLKW 1 ;ADDRESS OF FIRST ASSIGNED UMR
000004 M.UMRN: .BLKW 1 ;NUMBER OF UMR'S ASSIGNED * 4
000006 M.UMVL: .BLKW 1 ;LOW 16 BITS MAPPED BY 1ST ASSIGNED UMR
000010 M.UMVH: .BLKB 1 ;HIGH 2 BITS MAPPED IN BITS 4 AND 5
000011 M.BFVH: .BLKB 1 ;HIGH 6 BITS OF PHYSICAL BUFFER ADDRESS
000012 M.BFVL: .BLKW 1 ;LOW 16 BITS OF PHYSICAL BUFFER ADDRESS
000014 M.LGTH=. ;LENGTH OF MAPPING ASSIGNMENT BLOCK

      .ENDC
      .PSECT

```

SHDDF\$

```

SHDDF$

;
; FIRST, WE MUST DEFINE THE I/O PACKET DEFINITIONS, SINCE WE
; USE THEM IN OUR DEFINITIONS.
;
      PKTDF$           ;DEFINE I/O PACKET DEFINITIONS

;
; SHADOW RECORDING LINKAGE BLOCK (UMB)
;
; THE UMB LINKS TOGETHER TWO UCB'S AS A SHADOW SET. ONE IS THE
; PRIMARY UCB, THE OTHER THE SECONDARY UCB. THE EXISTANCE OF A
; UMB SIGNALS THAT SHADOW RECORDING IS ENABLED ON A PARTICULAR
; UCB.
;
      .ASECT
      .=0
000000 M.LNK:  .BLKW  1           ;LINKAGE OF ALL UMB'S IN THE SYSTEM
000002 M.LHD:  .BLKW  1           ;LISTHEAD OF ALL ML NODES FOR THIS SET
000004 M.UCB:  .BLKW  2           ;PRIMARY AND SECONDARY UCB ADDRESSES
000010 M.STS:  .BLKW  1           ;STATUS WORD
000012 M.LBN:  .BLKB  1           ;HIGH ORDER BYTE OF FENCE
000013           .BLKB  1           ;UNUSED BYTE (MAYBE STATUS?)
000014           .BLKW  1           ;LOW ORDER WORD OF FENCE

000016 M.LGH=.

;
; UMB STATUS BIT DEFINITIONS
;
      .PSECT
MS.MDA=1           ;UMB MARKED FOR DEALLOCATION (1=YES)
MS.CHP=2           ;CATCHUP IN PROGRESS (1=YES)

;
; DEFINE THE OFFSETS FOR THE ML NODE, LINKED OFF OF THE UMB
; THROUGH CELL M.LHD. THIS NODE CONTAINS THE SECONDARY I/O
; PACKET, AND DOUBLES AS THE ERROR PACKET TO THE ERROR MESSAGE
; TASK.
;
      .ASECT
      .=0
000000 ML.LNK:  .BLKW  1           ;LINKAGE OF ALL ML NODES ON UMB
000002 ML.LEN:  .BLKB  1           ;LENGTH OF ML NODE FOR DEALLOCATION
000003 ML.TYP:  .BLKB  1           ;TYPE OF ML NODE FOR ERROR TASK
000004 ML.DNC:  .BLKB  1           ;DONE COUNT OF PACKETS
000005           .BLKB  1           ;UNUSED
000006 ML.PRI:  .BLKW  1           ;PRIMARY I/O PACKET ADDRESS
000010 ML.PKT:  .BLKB  I.LGTH     ;SECONDARY I/O PACKET

000060 ML.LGH=.

```


SHDDF\$ (Cont.)

```

;
; ML NODE TYPE CODES
;
      .PSECT
MT.PKT=1          ;ML NODE IS I/O PACKET TYPE

;
; I/O PACKET OFFSET DEFNS FOR USE BY SHADOW RECORDING
;
I.R0=I.PRM          ;STATUS STORAGE FOR R0 STATUS
I.R1=I.PRM+2       ;STATUS STORAGE FOR R1 STATUS

;
; DEFINE THE ERROR MESSAGE POINTERS THAT RESIDE IN THE I/O PACKET.
;
      .PSECT
ML.FID=ML.PKT+I.IOSB ;FILE ID WHICH CONTAINS ERROR
ML.FSEQ=ML.PKT+I.IOSB+2 ;FILE SEQUENCE NUMBER OF FILE IN ERROR
ML.LBN=ML.PKT+I.PRM+10 ;HIGH ORDER LBN OF BLOCK(S) IN ERROR
ML.CNT=ML.PKT+I.PRM+4 ;NUMBER OF BLOCKS IN BAD XFER
ML.TCB=ML.PKT+I.TCB ;TCB OF TASK WITH BAD REQUEST
ML.SR0=ML.PKT+I.R0 ;R0 OF SECONDARY I/O PACKET
ML.SR1=ML.PKT+I.R1 ;R1 OF SECONDARY I/O PACKET
ML.PR0=ML.PKT+I.PRM+14 ;R0 OF PRIMARY I/O PACKET
ML.PR1=ML.PKT+I.PRM+16 ;R1 OF PRIMARY I/O PACKET

```

TCBDF\$

```

TCBDF$  ,,SYSDEF

;
; TASK CONTROL BLOCK OFFSET AND STATUS DEFINITIONS
;
; TASK CONTROL BLOCK
;
      .ASECT
      .=0
000000 T.LNK:  .BLKW  1      ;UTILITY LINK WORD
000002 T.PRI:  .BLKB  1      ;TASK PRIORITY
000003 T.IOC:  .BLKB  1      ;I/O PENDING COUNT
000004 T.PCBV:  .BLKW  1      ;POINTER TO COMMON PCB VECTOR
000006 T.NAM:  .BLKW  2      ;TASK NAME IN RAD50
000012 T.RCVL:  .BLKW  2      ;RECEIVE QUEUE LISTHEAD
000016 T.ASTL:  .BLKW  2      ;AST QUEUE LISTHEAD
000022 T.EFLG:  .BLKW  2      ;TASK LOCAL EVENT FLAGS 1-32
000026 T.UCB:  .BLKW  1      ;UCB ADDRESS FOR PSEUDO DEVICE 'TI'
000030 T.TCBL:  .BLKW  1      ;TASK LIST THREAD WORD
000032 T.STAT:  .BLKW  1      ;FIRST STATUS WORD (BLOCKING BITS)
000034 T.ST2:  .BLKW  1      ;SECOND STATUS WORD (STATE BITS)
000036 T.ST3:  .BLKW  1      ;THIRD STATUS WORD (ATTRIBUTE BITS)
000040 T.DPRI:  .BLKB  1      ;TASK'S DEFAULT PRIORITY
000041 T.LBN:  .BLKB  3      ;LBN OF TASK LOAD IMAGE
000044 T.LDV:  .BLKW  1      ;UCB ADDRESS OF LOAD DEVICE
000046 T.PCB:  .BLKW  1      ;PCB ADDRESS OF TASK PARTITION
000050 T.MXSZ:  .BLKW  1      ;MAXIMUM SIZE OF TASK IMAGE (MAPPED ONLY)
000052 T.ACTL:  .BLKW  1      ;ADDRESS OF NEXT TASK IN ACTIVE LIST
000054 T.ATT:  .BLKW  2      ;ATTACHMENT DESCRIPTOR LISTHEAD
000060 T.ST4:  .BLKW  1      ;FOURTH TASK STATUS WORD
000062 T.HDLN:  .BLKB  1      ;LENGTH OF HEADER (0 IF HDR IN POOL)
000063          .BLKB  1      ;UNUSED
000064 T.GGF:  .BLKB  1      ;GROUP GLOBAL USE COUNT FOR TASK
000065 T.TIO:  .BLKB  1      ;BUFFERED I/O IN PROGRESS COUNT
000066 T.EFLM:  .BLKW  2      ;TASK WAITFOR MASK/ADDRESS
000072 T.TKSZ:  .BLKW  1      ;TASK LOAD SIZE IN 32 WD BLOCKS

$$$=.
000074 T.OFF:  .BLKW  1      ;MARK START OF PLAS AREA
000076          .BLKB  1      ;OFFSET TO TASK IMAGE IN PARTITION
000077 T.SRCT:  .BLKB  1      ;RESERVED
000100 T.RRFL:  .BLKW  2      ;SREF WITH EFN COUNT IN ALL RECEIVE QUEUES
                                ;RECEIVE BY REFERENCE LISTHEAD

      .IF NDF P$$LAS
      .=$$$
      .ENDC

      .IF NB  SYSDEF

$$$=.
000104 T.OCBH:  .BLKW  2      ;MARK START OF PARENT/OFFSPRING AREA
000110 T.RDCT:  .BLKW  1      ;OFFSPRING CONTROL BLOCK LISTHEAD
                                ;OUTSTANDING OFFSPRING AND VT: COUNT

      .IF NDF P$$OFF
      .=$$$
      .ENDC

```

TCBDF\$ (Cont.)

```

000112 T.SAST: .BLKW 1 ;SPECIFY AST LIST HEAD

$$$=.
T.RRM: .BLKW 1 ;REQUIRED RUN MASK
T.IRM: .BLKW 1 ;INITIAL RUN MASK SET UP BY INSTALL
T.CPU: .BLKB 1 ;PROCESSOR NUMBER ON WHICH TASK LAST EXECUTD
      .BLKB 1 ;(UNUSED)

      .IF NDF M$$PRO
.=$$$
      .ENDC

$$$=.
T.ACN: .BLKW 1 ;POINTER TO ACCOUNTING BLOCK

      .IF NDF A$$CNT
.=$$$
      .ENDC

$$$=.
T.ISIZ: .BLKW 1 ;SIZE OF ROOT I SPACE

      .IF NDF US$$DAS
.=$$$
      .ENDC

T.LGTH=. ;LENGTH OF TASK CONTROL BLOCK
T.EXT=0 ;LENGTH OF TCB EXTENSION

      .IFF

;
; TASK STATUS DEFINITIONS
;
; FIRST STATUS WORD (BLOCKING BITS)
;
TS.EXE=100000 ;TASK NOT IN EXECUTION (1=YES)
TS.RDN=40000 ;I/O RUN DOWN IN PROGRESS (1=YES)
TS.MSG=20000 ;ABORT MESSAGE BEING OUTPUT (1=YES)
TS.CIP=10000 ;TASK BLOCKED FOR CHECKPOINT IN PROGRESS
              ;(1=YES)
TS.RUN=4000 ;TASK IS RUNNING ON ANOTHER PROCESSOR(1=YES)
TS.STP=1000 ;TASK BLOCKED BY CLI COMMAND
TS.CKR=100 ;TASK HAS CKP REQUEST (MP SYSTEM ONLY)
              ;(1=YES)
TS.BLC=37 ;INCREMENT BLOCKING COUNT MASK

;
; TASK BLOCKING STATUS MASK
;
TS.BLK=177777

```

TCBDF\$ (Cont.)

```

;
; SECOND STATUS WORD (STATE BITS)
;
T2.AST=100000      ;AST IN PROGRESS (1=YES)
T2.DST=40000      ;AST RECOGNITION DISABLED (1=YES)
T2.CHK=20000      ;TASK NOT CHECKPOINTABLE (1=YES)
T2.REX=10000      ;REQUESTED EXIT AST SPECIFIED
T2.SEF=4000       ;TASK STOPPED FOR EVENT FLAG(S) (1=YES)
T2.SIO=1000       ;TASK STOPPED FOR BUFFERED I/O
T2.AFF=400        ;TASK IS INSTALLED WITH AFFINITY
T2.HLT=200        ;TASK IS BEING HALTED (1=YES)
T2.ABO=100        ;TASK MARKED FOR ABORT (1=YES)
T2.STP=40         ;SAVED T2.SPN ON AST IN PROGRESS
T2.STP=20         ;TASK STOPPED (1=YES)
T2.SPN=10         ;SAVED T2.SPN ON AST IN PROGRESS
T2.SPN=4          ;TASK SUSPENDED (1=YES)
T2.WFR=2          ;SAVED T2.WFR ON AST IN PROGRESS
T2.WFR=1          ;TASK IN WAITFOR STATE (1=YES)

;
; THIRD STATUS WORD (ATTRIBUTE BITS)
;
T3.ACP=100000     ;ANCILLARY CONTROL PROCESSOR (1=YES)
T3.PMD=40000     ;DUMP TASK ON SYNCHRONOUS ABORT (0=YES)
T3.REM=20000     ;REMOVE TASK ON EXIT (1=YES)
T3.PRV=10000     ;TASK IS PRIVILEGED (1=YES)
T3.MCR=4000      ;TASK REQUESTED AS EXTERNAL MCR FUNCT(1=YES)
T3.SLV=2000      ;TASK IS A SLAVE TASK (1=YES)
T3.CLI=1000      ;TASK IS A COMMAND LINE INTERPRETER (1=YES)
T3.RST=400       ;TASK IS RESTRICTED (1=YES)
T3.NSD=200       ;TASK DOES NOT ALLOW SEND DATA
T3.CAL=100       ;TASK HAS CHECKPOINT SPACE IN TASK IMAGE
T3.ROV=40        ;TASK HAS RESIDENT OVERLAYS
T3.NET=20        ;NETWORK PROTOCOL LEVEL
T3.MPC=10        ;MAPPING CHANGE WITH OUTSTANDING I/O (1=YES)
T3.CMD=4         ;TASK IS EXECUTING A CLI COMMAND
T3.SWS=2         ;RESERVED FOR SOFTWARE SERVICES USE
T3.GFL=1         ;GROUP GLOBAL EVENT FLAG LOCK

;
; STATUS BIT DEFINITIONS FOR FOURTH STATUS WORD (T.ST4)
;
T4.MUT=40        ;TASK IS A MULTI-USER TASK
T4.LDD=20        ;TASK'S LOAD DEVICE HAS BEEN DISMOUNTED
T4.PRO=10        ;TCB IS (OR SHOULD BE) A PROTOTYPE
T4.PRV=4         ;TASK WAS PRIV, BUT HAS CLEARED T3.PRV
                  ;WITH GIN (MAY RESET WITH GIN IF T4.PRV SET)
T4.DSP=2         ;TASK WAS BUILT FOR USER I/D SPACE
T4.SNC=1         ;TASK USES COMMONS FOR SYNCHRONIZATION

```

TCBDF\$ (Cont.)

```
;
; REQUIRED RUN MASK
;
TR.UBT=100000      ;UNIBUS RUN T
TR.UBS=40000       ;UNIBUS RUN S
TR.UBR=20000       ;UNIBUS RUN R
TR.UBP=10000       ;UNIBUS RUN P
TR.UBN=4000        ;UNIBUS RUN N
TR.UBM=2000        ;UNIBUS RUN M
TR.UBL=1000        ;UNIBUS RUN L
TR.UBK=400         ;UNIBUS RUN K
TR.UBJ=200         ;UNIBUS RUN J
TR.UBH=100         ;UNIBUS RUN H
TR.UBF=40          ;UNIBUS RUN F
TR.UBE=20          ;UNIBUS RUN E
TR.CPD=10          ;PROCESSOR D
TR.CPC=4           ;PROCESSOR C
TR.CPB=2           ;PROCESSOR B
TR.CPA=1           ;PROCESSOR A

      .ENDC

      .PSECT
```

UCBDF\$

```

UCBDF$ , ,TTDEF,SYSDEF

;
; UNIT CONTROL BLOCK
;
; THE UNIT CONTROL BLOCK (UCB) DEFINES THE STATUS OF AN INDIVIDUAL
; DEVICE UNIT AND IS THE CONTROL BLOCK THAT IS POINTED TO BY THE
; FIRST WORD OF AN ASSIGNED LUN. THERE IS ONE UCB FOR EACH DEVICE
; UNIT OF EACH DCB. THE UCB'S ASSOCIATED WITH A PARTICULAR DCB ARE
; CONTIGUOUS IN MEMORY AND ARE POINTED TO BY THE DCB. UCB'S ARE
; VARIABLE LENGTH BETWEEN DCB'S BUT ARE OF THE SAME LENGTH FOR A
; SPECIFIC DCB. TO FINISH THE TELETYPE EXAMPLE ABOVE, EACH UNIT ON
; BOTH INTERFACES WOULD HAVE A UCB.
;
      .ASECT
      .=177772

      .IF NB  SYSDEF
      .IF DF  A$SCNT

      .=177770
U.UAB:  .BLKW  1          ; POINTER TO USER ACCOUNT BLOCK

      .IFF

U.UAB:
      .ENDC

      .ENDC

177772 U.MUP:  .BLKW  1          ; MULTI-USER PROTECTION WORD
177774 U.LUIC: .BLKW  1          ; LOGIN UIC - MULTI USER SYSTEMS ONLY
177776 U.OWN:  .BLKW  1          ; OWNING TERMINAL - MULTI USER SYSTEMS ONLY
000000 U.DCB:  .BLKW  1          ; BACK POINTER TO DCB
000002 U.RED:  .BLKW  1          ; POINTER TO REDIRECT UNIT UCB
000004 U.CTL:  .BLKB  1          ; CONTROL PROCESSING FLAGS
000005 U.STS:  .BLKB  1          ; UNIT STATUS
000006 U.UNIT: .BLKB  1          ; PHYSICAL UNIT NUMBER
000007 U.ST2:  .BLKB  1          ; UNIT STATUS EXTENSION
000010 U.CW1:  .BLKW  1          ; FIRST DEVICE CHARACTERISTICS WORD
000012 U.CW2:  .BLKW  1          ; SECOND DEVICE CHARACTERISTICS WORD
000014 U.CW3:  .BLKW  1          ; THIRD DEVICE CHARACTERISTICS WORD
000016 U.CW4:  .BLKW  1          ; FOURTH DEVICE CHARACTERISTICS WORD
000020 U.SCB:  .BLKW  1          ; POINTER TO SCB
000022 U.ATT:  .BLKW  1          ; TCB ADDRESS OF ATTACHED TASK
000024 U.BUF:  .BLKW  1          ; RELOCATION BIAS OF CURRENT I/O REQUEST
000026          .BLKW  1          ; BUFFER ADDRESS OF CURRENT I/O REQUEST
000030 U.CNT:  .BLKW  1          ; BYTE COUNT OF CURRENT I/O REQUEST

000032 U.UCBX=U.CNT+2          ; POINTER TO UCB EXTENSION IN SECONDARY POOL
000034 U.ACP=U.CNT+4          ; ADDRESS OF TCB OF MOUNTED ACP
000036 U.VCB=U.CNT+6          ; ADDRESS OF VOLUME CONTROL BLOCK
000034 U.CBF=U.CNT+4          ; CONTROL BUFFER RELOCATION AND ADDRESS
000040 U.UMB=U.CNT+10         ; ADDRESS OF UMB FOR SHADOW RECORDING
000042 U.PRM=U.CNT+12         ; DISK SIZE PARAMETER WORDS
000046 U.UTMO=U.CNT+16       ; UNIT COMMAND TIME OUT
000050 U.LHD=U.CNT+20         ; UNIT OUTSTANDING I/O PACKET LISTHEAD

```

UCBDF\$ (Cont.)

```

000054 U.BPKT=U.CNT+24      ;UNIT BAD BLOCK PACKET WAITING LIST
000060 U.UC2X=U.CNT+30      ;POINTER TO 2ND EXTENSION IN SECONDARY POOL
000062 U.OTRF=U.CNT+32      ;OUTSTANDING COMMAND STATUS REQUEST REGISTER
000064 U.CMST=U.CNT+34      ;COMMAND STATUS PROGRESS REGISTER

```

```

;
; MAGTAPE DEVICE DEPENDANT UCB OFFSETS

```

```

;
000040 U.SNUM=U.CNT+10      ;SLAVE UNIT NUMBER
000042 U.FCDE=U.CNT+12      ;FUNCTION CODE
000044 U.KRB1=U.CNT+14      ;SUBCONTROLLER KRB1 POINTER

```

```

;
; DEFINE SECONDARY POOL UCB EXTENSION OFFSETS
; (ERROR LOGGING DEVICES ONLY)

```

```

;
.=0
000000      .BLKW  9.      ;FIXED ACCOUNTING TRANSACTION HEADER
000022 X.NAME: .BLKW  2      ;DRIVE NAME IN RAD50
000026 X.IOC:  .BLKW  2      ;I/O COUNT
000032 X.ERHL: .BLKB  1      ;HARD ERROR LIMIT
000033 X.ERSL: .BLKB  1      ;SOFT ERROR LIMIT
000034 X.ERSC: .BLKB  1      ;SOFT ERROR COUNT
000035 X.ERHC: .BLKB  1      ;HARD ERROR COUNT
000036 X.WCNT: .BLKW  2      ;WORDS TRANSFERED COUNT

```

```

;
; DEFINE OFFSETS FOR SEEK OPTIMIZATION DEVICES

```

```

;
000042 X.CYLC: .BLKW  2      ;CYLINDERS CROSSED COUNT
000046 X.CCYL: .BLKW  1      ;CURRENT CYLINDER
000050 X.FCUR:  .BLKB  1      ;CURRENT FAIRNESS COUNT
000051 X.FLIM:      ;FAIRNESS COUNT LIMIT
000051 X.DSKD: .BLKB  1      ;DISK DIRECTION (HIGH BIT 1=OUT)
000052 X.DNAM: .BLKW  1      ;DEVICE NAME FOR ACCOUNTING
000054 X.UNIT: .BLKB  1      ;UNIT NUMBER FOR ACCOUNTING
000055      .BLKB  1      ;UNUSED FOR NOW

```

```

000056 X.LGTH=.      ;LENGTH OF THE UCB EXTENSION

X.DFFL=10.      ;DEFAULT FAIRNESS COUNT LIMIT
X.DFSL=8.      ;DEFAULT SOFT ERROR LIMIT
X.DFHL=5.      ;DEFAULT HARD ERROR LIMIT

```

```

;
; DEFINE OFFSETS FOR DISK MSCP CONTROLLERS (SECOND UCB EXTENSION)
;

```

```

;
; CHARACTERISTICS OBTAINED FROM "GET UNIT STATUS" END PACKETS
;
.=0

```

UCBDF\$ (Cont.)

```

000000 X.MLUN: .BLKW 1 ;MULTI-UNIT CODE
000002 X.UNFL: .BLKW 1 ;UNIT FLAGS
000004 X.HSTI: .BLKW 2 ;HOST IDENTIFIER
000010 X.UNTI: .BLKW 4 ;UNIT IDENTIFIER
000020 X.MEDI: .BLKW 2 ;MEDIA IDENTIFIER
000024 X.SHUN: .BLKW 1 ;SHADOW UNIT
000026 X.SHST: .BLKW 1 ;SHADOW UNIT STATUS
000030 X.TRCK: .BLKW 1 ;UNIT TRACK SIZE
000032 X.GRP: .BLKW 1 ;UNIT GROUP SIZE
000034 X.CYL: .BLKW 2 ;UNIT CYLINDER SIZE
000040 X.RCTS: .BLKW 1 ;UNIT RCT TABLE SIZE
000042 X.RBNS: .BLKB 1 ;UNIT RBN 'S / TRACK
000043 X.RCTC: .BLKB 1 ;UNIT RCT COPIES

;
; CHARACTERISTICS OBTAINED FROM "ONLINE" OR "SET UNIT
; CHARACTERISTICS" END PACKETS
;
000044 X.UNSZ: .BLKW 2 ;UNIT SIZE
000050 X.VSER: .BLKW 2 ;VOLUME SERIAL NUMBER

000054 X.DUSZ=. ;SIZE OF DISK MSCP CONTROLLER UCB EXTENTION

        .IF NB TTDEF

;
; TERMINAL DRIVER DEFINITIONS
;
.=U.BUF
000024 U.TUX: .BLKW 1 ;POINTER TO UCB EXTENSION (UCBX)
000026 U.TSTA: .BLKW 3 ;STATUS TRIPLE-WORD
000034 U.TTAB: .BLKW 1 ;IF 0: U.TTAB+1 IS SINGLE-CHARACTER TYPE-
; AHEAD BUFFER, CURRENTLY EMPTY
;IF ODD: U.TTAB+1 IS SINGLE-CHARACTER TYPE-
; AHEAD BUFFER AND HOLDS A CHARACTER
;IF NON-0 AND EVEN: POINTER TO MULTI-
; CHARACTER TYPE-AHEAD BUFFER
.=.-2
;THE NEXT TWO OFFSETS OVERLAP U.TTAB WHEN
;THE TYPEAHEAD BUFFER IS IN SECONDARY POOL
000034 U.TECO: .BLKB 1 ;ECHO BUFFER FOR DMA OPERATIONS WHEN UCBX IS
;IN SECONDARY POOL AND THUS NOT MAPPED BY A
;UMR
000035 U.TBSZ: .BLKB 1 ;TYPEAHEAD BUFFER SIZE
000036 U.UIC: .BLKW 1 ;DEFAULT UIC
000040 U.TLPP: .BLKB 1 ;LINES PER PAGE
000041 U.TFRQ: .BLKB 1 ;FORK REQUEST BYTE
000042 U.TFLK: .BLKW 1 ;FORK LIST LINK WORD
000044 U.TCHP: .BLKB 1 ;CURRENT HORIZONTAL POSITION
000045 U.TCVP: .BLKB 1 ;CURRENT VERTICAL POSITION
000046 U.TTYP: .BLKB 1 ;TERMINAL TYPE
000047 U.TMTI: .BLKB 1 ;MODEM TIMER
000050 U.ACB: .BLKW 1 ;ANCILLARY CONTROL DRIVER BLOCK ADDR
000052 U.AFLG: .BLKW 1 ;ANCILLARY CONTROL DRIVER FLAGS WORD
000054 U.ADMA: .BLKW 1 ;ANCILLARY CONTROL DRIVER DMA BUFFER

```


UCBDF\$ (Cont.)

```

;
; DEFINE BITS IN STATUS WORD 1 (U.TSTA)
;
S1.RST=1          ;READ WITH SPECIAL TERMINATORS IN PROGRESS
S1.RUB=2          ;RUBOUT SEQUENCE IN PROGRESS (NON-SCOPE)
S1.ESC=4          ;ESCAPE SEQUENCE IN PROGRESS
S1.RAL=10         ;READ ALL IN PROGRESS
S1.RNE=20        ;ECHO SUPPRESSED
S1.CTO=40        ;OUTPUT STOPPED BY CTRL-O
S1.OBY=100       ;OUTPUT BUSY
S1.IBY=200       ;INPUT BUSY
S1.BEL=400       ;BELL PENDING
S1.DPR=1000      ;DEFER PROCESSING OF CHAR. IN U.TECB
S1.DEC=2000      ;DEFER ECHO OF CHAR. IN U.TECB
S1.DSI=4000      ;INPUT PROCESSING DISABLED
S1.CTS=10000     ;OUTPUT STOPPED BY CTRL-S
S1.USI=20000     ;UNSOLICITED INPUT IN PROGRESS
S1.OBF=40000     ;BUFFERED OUTPUT IN PROGRESS
S1.IBF=100000    ;BUFFERED INPUT IN PROGRESS

;
; DEFINE BITS IN STATUS WORD 2 (U.TSTA+2)
;
S2.ACR=1          ;WRAP-AROUND (AUTOMATIC CR-LF) REQUIRED
S2.WRA=6          ;CONTEXT FOR WRAP-AROUND
S2.WRB=2          ;LOW BIT IN S2.WRA BIT PATTERN
S2.CR=10         ;TRAILING CR REQUIRED ON OUTPUT
S2.BRQ=20        ;BREAK-THROUGH-WRITE REQUEST IN QUEUE
S2.SRQ=40        ;SPECIAL REQUEST IN QUEUE
                  ;(IO.ATT, IO.DET, SF.SMC)
S2.ORQ=100       ;OUTPUT REQUEST IN QUEUE (MUST = S1.OBY)
S2.IRQ=200       ;INPUT REQUEST IN QUEUE (MUST = S1.IBY)
S2.HFL=3400      ;HORIZONTAL FILL REQUIREMENT
S2.VFL=4000      ;VERTICAL FILL REQUIREMENT
S2.HHT=10000     ;HARDWARE HORIZONTAL TAB PRESENT
S2.HFF=20000     ;HARDWARE FORM-FEED PRESENT
S2.FLF=40000     ;FORCE LINE FEED BEFORE NEXT ECHO
S2.FDX=100000    ;LINE IS IN FULL DUPLEX MODE

;
; DEFINE BITS IN STATUS WORD 3 (U.TSTA+4)
;
S3.RAL=10         ;TERMINAL IS IN READ-PASS-ALL MODE
                  ;(S3.RAL MUST = S1.RAL)
S3.RPO=20        ;READ W/PROMPT OUTPUT IN PROGRESS
S3.WES=40        ;TASK WANTS ESCAPE SEQUENCES
S3.TAB=100       ;TYPE-AHEAD BUFFER ALLOCATION REQUESTED
S3.8BC=200      ;PASS 8 BITS ON INPUT
S3.RCU=400       ;RESTORE CURSOR (MUST = TF.RCU*400)
S3.ABD=1000     ;AUTO-BAUD SPEED DETECTION ENABLED
S3.ABP=2000     ;AUTO-BAUD SPEED DETECTION IN PROGRESS
S3.WAL=4000     ;WRITE-PASS-ALL (MUST = TF.WAL*400)
S3.VER=10000    ;LAST CHAR. IN TYPE-AHEAD BUFFER
                  ;HAS PARITY ERROR
S3.BCC=20000    ;LAST CHAR. IN TYPE-AHEAD BUFFER
                  ;HAS FRAMING ERROR

```

UCBDF\$ (Cont.)

```

S3.DAO=40000                ;LAST CHAR. IN TYPE-AHEAD BUFFER
                             ;HAS DATA OVERRUN ERROR
                             ;NOTE - THE 3 BITS ABOVE MUST CORRESPOND
                             ;TO THE RESPECTIVE ERROR FLAGS IN THE
                             ;HARDWARE RECEIVE BUFFER
S3.PCU=100000              ;POSITION CURSOR BEFORE WRITE

                             .ENDC

;
; VIRTUAL TERMINAL UCB DEFINITIONS
;
.=U.UNIT
000006 U.OCNT: .BLKB 1      ;OFFSPRING WITH THIS AS TI:

.=U.BUF
000024 U.RPKT: .BLKW 1      ;CURRENT OFFSPRING READ I/O PACKET
000026 U.WPKT: .BLKW 1      ;CURRENT OFFSPRING WRITE I/O PACKET
000030 U.IAST: .BLKW 1      ;INPUT AST ROUTINE ADDRESS
000032 U.OAST: .BLKW 1      ;OUTPUT AST ROUTINE ADDRESS
000034 U.AAST: .BLKW 1      ;ATTACH AST ROUTINE ADDRESS

                             .IF NB TTDEF

                             .IIF NE U.AAST+2-U.UIC .ERROR ;ADJACENCY ASSUMED

                             .ENDC

.=U.AAST+4
000040 U.PTCB: .BLKW 1      ;PARENT TCB ADDRESS

;
; CONSOLE DRIVER DEFINITIONS
;
.=U.BUF+2
000026 U.CTCB: .BLKW 1      ;ADDRESS OF CONSOLE LOGGER TCB
000030 U.COTQ: .BLKW 2      ;I/O PACKET LIST QUEUE
000034 U.RED2: .BLKW 1      ;REDIRECT UCB ADDRESS

                             .PSECT

;
; DEVICE TABLE STATUS DEFINITIONS
;
; DEVICE CHARACTERISTICS WORD 1 (U.CW1) DEVICE TYPE DEFINITION BITS.
;
DV.REC=1                    ;RECORD ORIENTED DEVICE (1=YES)
DV.CCL=2                    ;CARRIAGE CONTROL DEVICE (1=YES)
DV.TTY=4                    ;TERMINAL DEVICE (1=YES)
DV.DIR=10                   ;FILE STRUCTURED DEVICE (1=YES)
DV.SDI=20                   ;SINGLE DIRECTORY DEVICE (1=YES)
DV.SQD=40                   ;SEQUENTIAL DEVICE (1=YES)
DV.MSD=100                  ;MASS STORAGE DEVICE (1=YES)
DV.UMD=200                  ;USER MODE DIAGNOSTICS SUPPORTED (1=YES)

```

UCBDF\$ (Cont.)

```

DV.MBC=400           ;MASSBUS CONTROLLER (11M COMPATIBILITY ONLY)
DV.EXT=400          ;UNIT ON EXTENDED 22-BIT UNIBUS CNTROLER
                   ;(1=YES)
DV.SWL=1000        ;UNIT SOFTWARE WRITE LOCKED (1=YES)
DV.ISP=2000        ;INPUT SPOOLED DEVICE (1=YES)
DV.OSP=4000        ;OUTPUT SPOOLED DEVICE (1=YES)
DV.PSE=10000       ;PSEUDO DEVICE (1=YES)
DV.COM=20000       ;DEVICE IS MOUNTABLE AS COM CHANNEL (1=YES)
DV.F11=40000       ;DEVICE IS MOUNTABLE AS F11 DEVICE (1=YES)
DV.MNT=100000      ;DEVICE IS MOUNTABLE (1=YES)

```

```

;
; TERMINAL DEPENDENT CHARACTERISTICS WORD 2 (U.CW2) BIT DEFINITIONS
;

```

```

U2.DH1=100000      ;UNIT IS A MULTIPLEXER (1=YES)
U2.DJ1=40000       ;UNIT IS A DJ11 (1=YES)
U2.RMT=20000       ;UNIT IS REMOTE (1=YES)
U2.HFF=10000       ;UNIT HANDLES HARDWARE FORM FEEDS (1=YES)
U2.L8S=10000       ;OLD NAME FOR U2.HFF
U2.NEC=4000        ;DON'T ECHO SOLICITED INPUT (1=YES)
U2.CRT=2000        ;UNIT IS A CRT (1=YES)
U2.ESC=1000        ;UNIT GENERATES ESCAPE SEQUENCES (1=YES)
U2.LOG=400         ;USER LOGGED ON TERMINAL (0=YES)
U2.SLV=200         ;UNIT IS A SLAVE TERMINAL (1=YES)
U2.DZ1=100         ;UNIT IS A DZ11 (1=YES)
U2.HLD=40          ;TERMINAL IS IN HOLD SCREEN MODE (1=YES)
U2.AT.=20         ;MCR COMMAND AT. BEING PROCESSED (1=YES)
U2.PRV=10         ;UNIT IS A PRIVILEGED TERMINAL (1=YES)
U2.L3S=4          ;UNIT IS A LA30S TERMINAL (1=YES)
U2.VT5=2          ;UNIT IS A VT05B TERMINAL (1=YES)
U2.LWC=1          ;LOWER CASE TO UPPER CASE CONVERSION (0=YES)

```

```

;
; BIT DEFINITIONS FOR U.MUP
;

```

```

UM.OVR=1           ;OVERRIDE CLI INDICATOR
UM.CLI=36          ;CLI INDICATOR BITS
UM.DSB=200        ;TERMINAL DISABLED SINCE CLI ELIMINATED
UM.NBR=400        ;NO BROADCAST
UM.CNT=1000       ;CONTINUATION LINE IN PROGRESS
UM.CMD=2000       ;COMMAND IN PROGRESS
UM.SER=4000       ;SERIAL COMMAND RECOGNITION ENABLED
UM.KIL=10000      ;TTDRV SHOULD SEND KILL PKT ON CNTRL/C

```

```

;
; TERMINAL SECONDARY POOL OFFSETS FOR THE UCB EXTENSION AND TYPE-
; AHEAD BUFFER
;

```

```

U.TAPR=24         ;OFFSET WITHIN UCB WHICH POINTS TO UCB EXT
U.TTBF=46         ;OFFSET WITHIN UCB EXTENSION WHICH POINTS TO
                   ;TYPEAHEAD BUFFER

```

UCBDF\$ (Cont.)

```

;
; RH11-RS03/RS04 CHARACTERISTICS WORD 2 (U.CW2) BIT DEFINITIONS
;
U2.R04=100000          ;UNIT IS A RS04 (1=YES)

;
; RH11-TU16 CHARACTERISTICS WORD 2 (U.CW2) BIT DEFINITIONS
;
U2.7CH=10000          ;UNIT IS A 7 CHANNEL DRIVE (1=YES)

;
; TERMINAL DEPENDENT CHARACTERISTICS WORD 3 (U.CW3) BIT DEFINITIONS
;
U3.UPC=20000          ;UPCASE OUTPUT FLAG

;
; VIRTUAL TERMINAL 3RD CHARACTERISTICS WORD DEFINITIONS
;
U3.FDX=1              ;FULL DUPLEX MODE (1=YES)
U3.DBF=2              ;INTERMEDIATE BUFFERING DISABLED (1=YES)
U3.RPR=4              ;READ W/PROMPT IN PROGRESS (1=YES)

;
; TERMINAL DEPENDENT CHARACTERISTICS WORD 4 (U.CW4) BIT DEFINITIONS
;
U4.CR=100             ;LOOK FOR CARRIAGE RETURN

;
; UNIT CONTROL PROCESSING FLAG DEFINITIONS
;
UC.ALG=200            ;BYTE ALIGNMENT ALLOWED (1=NO)
UC.NPR=100            ;DEVICE IS AN NPR DEVICE (1=YES)
UC.QUE=40             ;CALL DRIVER BEFORE QUEUING (1=YES)
UC.PWF=20            ;CALL DRIVER AT POWERFAIL ALWAYS (1=YES)
UC.ATT=10            ;CALL DRIVER ON ATTACH/DETACH (1=YES)
UC.KIL=4              ;CALL DRIVER AT I/O KILL ALWAYS (1=YES)
UC.LGH=3              ;TRANSFER LENGTH MASK BITS

;
; UNIT STATUS BIT DEFINITIONS
;
US.BSY=200            ;UNIT IS BUSY (1=YES)
US.MNT=100            ;UNIT IS MOUNTED (0=YES)
US.FOR=40             ;UNIT IS MOUNTED AS FOREIGN VOLUME (1=YES)
US.MDM=20            ;UNIT IS MARKED FOR DISMOUNT (1=YES)

;
; CARD READER DEPENDENT UNIT STATUS BIT DEFINITIONS
;
US.ABO=1              ;UNIT IS MARKED FOR ABORT IF NOT READY
; (1=YES)
US.MDE=2              ;UNIT IS IN 029 TRANSLATION NODE (1=YES)

```

UCBDF\$ (Cont.)

```

;
; FILES-11 DEPENDENT UNIT STATUS BITS
;
US.WCK=10          ;WRITE CHECK ENABLED (1=YES)
US.SPU=2           ;UNIT IS SPINNING UP (1=YES)
US.VV=1            ;VOLUME VALID IS SET (1=YES)

;
; TERMINAL DEPENDENT UNIT STATUS BIT DEFINITIONS
;
US.CRW=4           ;UNIT IS WAITING FOR CARRIER (1=YES)
US.DSB=2           ;UNIT IS DISABLED (1=YES)
US.OIU=1           ;OUTPUT INTERRUPT IS UNEXPECTED ON UNIT
                  ;(1=YES)

;
; LPS11 DEPENDENT UNIT STATUS BIT DEFINITIONS
;
US.FRK=2           ;FORK IN PROGRESS (1=YES)
US.SHR=1           ;SHAREABLE FUNCTION IN PROGRESS (0=YES)

;
; ANSI MAGTAPE DEPENDANT UNIT STATUS BITS
;
US.LAB=4           ;UNIT HAS LABELED TAPE ON IT (1=YES)

;
; UNIT STATUS EXTENSION (U.ST2) BIT DEFINITIONS
;
US.OFL=1           ;UNIT OFFLINE (1=YES)
US.RED=2           ;UNIT REDIRECTABLE (0=YES)
US.PUB=4           ;UNIT IS PUBLIC DEVICE (1=YES)
US.UMD=10         ;UNIT ATTACHED FOR DIAGNOSTICS (1=YES)
US.PDF=20         ;PRIVILEGED DIAGNOSTIC FUNCTIONS ONLY(1=YES)

;
; MAGTAPE DENSITY SUPPORT DEFINITION IN U.CW3
;
UD.UNS=0           ;UNSUPPORTED
UD.200=1          ; 200BPI, 7 TRACK
UD.556=2          ; 556BPI, 7 TRACK
UD.800=3          ; 800BPI, 7 OR 9 TRACK
UD.160=4          ;1600BPI, 9 TRACK
UD.625=5          ;6250BPI, 9 TRACK

```

INDEX

- ABODF\$, B-3, C-3
- ACNDF\$, C-4
- /ACT, 2-1
- Active task
 - AST queue, 3-23
 - attribute bits, 3-22
 - blocking bits, 3-21
 - MCR, 3-26
 - offspring control block, 3-24
 - receive by reference queue, 3-24
 - receive queue, 3-23
 - state bits, 3-22
- Active task dump, 3-21
 - AST queue, 3-21
 - offspring control block, 3-21
 - receive by reference queue, 3-21
 - receive queue, 3-21
- /ADV, 2-1
- /ALL, 2-1
- Analysis routines switch, 2-3
- Assign table dump, 3-1, 3-17
- /ATL, 2-1
- Binary output file size switch, 2-8
- /BL, 2-6
- Block number switch, 2-7
- CDA
 - installed, 1-3
 - invoking from indirect command file, 1-5
 - running, 1-3
 - uninstalled, 1-3
- CDA command line, 1-3
 - binary file, 1-3
 - crash input file, 1-4
 - default, 1-4
 - list file, 1-3
 - symbol file, 1-4
- CDA Message
 - analysis
 - example of, A-1
 - fatal
 - example of, A-1
- /CLI, 2-1
- CLI parser block dump, 3-2, 3-31
- CLKDF\$, B-4, C-10
- Clock queue dump, 3-50
- Clock queue switch, 2-3
- /CLQ, 2-1
- Command line interpreter switch, 2-3
- Common block directory dump, 3-36
- /CPB, 2-1
- Crash causes
 - halt instruction, 1-2
 - infinite loop, 1-2
 - processor trap, 1-2
 - restart procedure, 1-2
- Crash dump device, 1-1
- Crash Dump Routine, 1-1
- Crash notification device, 1-1
- \$CRAVL, 3-15
- CTBDF\$, C-12
- /CTL, 2-2
- Current task
 - priority, 3-20
- /DCB, 2-2
- DCBDF\$, B-6, C-13
- /DENS, 2-6
- Density switch, 2-7
- /DEV, 2-2
- Device controller dump, 3-52
 - common interrupt address, 3-52
 - controller request block, 3-52
 - controller status words, 3-52
 - controller table, 3-52
- Device controller switch, 2-4
- Device information dump
 - control processing flags, 3-39
 - device characteristics word, 3-39
 - I/O request packet, 3-38, 3-42
 - terminal status word, 3-38
 - UCB extension, 3-38
- /DMP, 2-2
- /DUMP, 2-2
- EPKDF\$, B-7, C-14
- Error log packet dump, 1-6, 3-2, 3-19
- Executive Crash Dump Routine, 1-1
- Executive Debugging Tool
 - See XDT
- Executive Symbol Table, 1-1
- EXEMC.MLB, B-1
- /EXIT, 2-6
- Exit switch, 2-7

INDEX

F11DF\$, B-15, C-21
 FORK, 4-2

 Group global event flag dump,
 1-6, 3-2, 3-18

 Hardware feature mask
 definitions, C-27
 /HDR, 2-2
 HDRDF\$, B-20, C-25
 HWDDF\$, B-22, C-27

 Interpreting crash dumps
 interrupt save, 4-2
 mapping information, 4-1
 stack depth, 4-1
 Kernel stack, 4-2
 SST, 4-2
 \$STKDP, 4-2
 INTSV, 4-2
 ITBDF\$, B-25, C-31

 /KDS, 2-2
 Kernel data space dump, 3-54
 Kernel data space switch, 2-4
 Kernel instruction space dump,
 3-54
 Kernel instruction space switch,
 2-4
 Kernel Mapping Register switch,
 2-8
 Kernel stack dump, 3-1, 3-5
 /KIS, 2-2
 /KMR, 2-6
 KRBDF\$, C-32

 LCBDF\$, B-26, C-34
 /LIMIT, 2-6
 /LINES, 2-6
 Lines switch, 2-7
 Logical device name, 3-17
 Low core memory dump, 1-6, 3-2,
 3-20

 Mark time request, 3-50
 MCR unit control block, 3-26
 /MEMSIZ, 2-6
 MTADF\$, B-27, C-35

 No spool switch, 2-8

 Offset mode, 3-1
 OLRDF\$, C-39
 Output listing limit switch,
 2-7

 /PAR, 2-2
 Partition
 base address, 3-21
 name, 3-21
 PCB address, 3-21
 Partition control block switch,
 2-5

 Partition information
 attachment descriptor, 3-34
 wait queue, 3-34
 Partition information dump
 attachment descriptor, 3-31
 individual, 3-33
 system, 3-31
 wait queue, 3-31
 Partition status flags, 3-33
 /PCB, 2-2
 PCBDF\$, B-31, C-47
 Physical device name, 3-17
 Physical memory dump switch,
 2-4
 PKTDF\$, B-33, C-51
 /POOL, 2-2
 Pool
 free, 3-15
 largest fragment, 3-15
 smallest possible block, 3-15
 total free bytes, 3-15
 Pool dump, 3-45
 Pool statistics dump, 3-1, 3-15
 Processor Status Word, 3-2

 Register
 cache control, 3-2
 CPU error, 3-2
 memory management, 3-2
 memory system error, 3-2
 page address, 3-2
 page descriptor, 3-2
 Unibus mapping, 3-2
 RSX11M.STB, 1-1, 2-9

 Saved stack pointer, 3-20
 /SCB, 2-2
 SCBDF\$, B-38, C-57
 Secondary pool dump, 3-45
 Secondary pool switch, 2-5
 SHDDF\$, C-59
 Show devices switch, 2-3
 /-SP, 2-6
 SST, 4-2
 Stack pointer
 kernel, 3-2
 user, 3-2
 /STB, 2-6
 /STD, 2-2
 \$STKDP, 4-2
 Switches
 analysis, 2-1
 function, 2-1
 Symbol table switch, 2-8
 Symbolic offset, B-1
 /-SYS, 2-2
 System common, 3-6
 active task, 3-6
 alphabetized, 3-9
 boot device, 3-6
 labels, 3-9
 network UIC, 3-6
 partition address, 3-6

INDEX

- System common (Cont.)
 - stack depth, 3-6
 - system size, 3-6
 - TCB address, 3-6
 - UIC, 3-6
- System common dump, 3-1
 - alphabetized, 3-1
- System data structure macro
 - accounting block offset, C-4
 - AST control block, B-33, C-51
 - clock queue control block,
 - B-4, C-10
 - controller request block,
 - C-32
 - controller table, C-12
 - device control block, B-6,
 - C-13
 - driver dispatch table, B-6
 - error message block, B-7,
 - C-14
 - EXELIB.OLB, C-1
 - EXEMC.MLB, C-1
 - hardware register addresses,
 - B-22, C-27
 - interrupt transfer block,
 - B-25, C-31
 - logical assignment control block, B-26, C-34
 - magtape volume set control block, B-27, C-35
 - online reconfiguration interface, C-39
 - partition control block, B-31,
 - C-47
 - shadow recording linkage block, C-59
 - status control block, B-38,
 - C-57
 - summary of, C-2
 - symbolic offsets in, C-1
 - task abort codes, B-3, C-3
 - task control block, B-40,
 - C-61
 - task header, B-20, C-25
 - TKTN message codes, B-3, C-3
 - unit control block, B-43,
 - C-65
 - volume control block, B-15,
 - C-21
- System device switch, 2-4
- System Generation
 - CDA and, 1-1
 - System information dump, 1-5
 - System information switch, 2-5
 - System pool switch, 2-5
 - System task directory dump,
 - 3-44
 - System task directory switch,
 - 2-5
 - /TAL, 2-2
 - /TAS, 2-2
 - /TASK, 2-2
 - Task Control Block switch, 2-3
 - Task data space dump, 3-54
 - Task data space switch, 2-5
 - Task dump, 3-48
 - window blocks, 3-48
 - Task header dump, 3-28
 - directive status word, 3-28
 - file control block, 3-29
 - logical unit table, 3-28
 - page descriptor register,
 - 3-29
 - swapping priority, 3-28
 - window blocks, 3-29
 - Task header switch, 2-4
 - Task instruction space dump,
 - 3-54
 - Task instruction space switch,
 - 2-6
 - Task virtual address space switch, 2-5
 - /TCB, 2-2
 - TCB
 - pointer to, 3-20
 - TCBDF\$, B-40, C-61
 - /TDS, 2-2
 - /TIS, 2-2
 - /TSK, 2-2
 - /UCB, 2-2
 - UCBDF\$, B-43, C-65
 - Volatile register dump, 3-1 to
 - 3-2
 - Volume set control block, C-35
 - XDT, 1-2

READER'S COMMENTS

NOTE: This form is for document comments only. DIGITAL will use comments submitted on this form at the company's discretion. If you require a written reply and are eligible to receive one under Software Performance Report (SPR) service, submit your comments on an SPR form.

Did you find this manual understandable, usable, and well organized? Please make suggestions for improvement.

Did you find errors in this manual? If so, specify the error and the page number.

Please indicate the type of user/reader that you most nearly represent.

- Assembly language programmer
- Higher-level language programmer
- Occasional programmer (experienced)
- User with little programming experience
- Student programmer
- Other (please specify) _____

Name _____ Date _____


Organization _____

Street _____


City _____ State _____ Zip Code _____
or Country

Do Not Tear - Fold Here and Tape

digital



No Postage
Necessary
if Mailed in the
United States

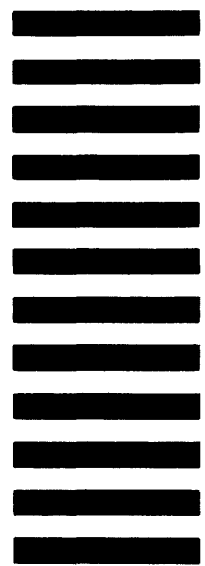

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO.33 MAYNARD MASS.

POSTAGE WILL BE PAID BY ADDRESSEE

BSSG PUBLICATIONS ZK1-3/J35
DIGITAL EQUIPMENT CORPORATION
110 SPIT BROOK ROAD
NASHUA, NEW HAMPSHIRE 03061

Do Not Tear - Fold Here

Cut Along Dotted Line